



ATW-1135

AIR IMPACT WRENCH
STUBBY

INSTRUCTION MANUAL
Order Code: A025

Safety Air Tool Warnings

1. Read and understand this entire manual before attempting assembly or operation.
2. Read and understand all warnings posted on the tool and in this manual. Failure to comply with all of these warnings may cause serious injury.
3. Replace warning labels if they become obscured or removed.
4. Do not use this tool for other than its intended use. If used for other purposes, Toolmaster disclaims any real or implied warranty and holds itself harmless from any injury that may result from that use.
5. Always wear approved safety glasses or face shield while using this tool. (Everyday eye glasses only have impact resistant lenses; they are not safety glasses.)
6. Wear ear protectors (plugs or muffs) if the noise exceeds safe levels.
7. Wear gloves and protective clothing if operation produces sparks or flying particles. Gloves should be tight-fitting, without frayed fingers or hanging threads. Keep hands and body away from the working area of tool.
8. Do not operate an air tool continually at full throttle without a work load on the tool.
9. The air tool must be properly lubricated before operating.
10. Never start a percussion type air tool (chipper, breaker, buster, etc.) without securing the tooling in the retainer and placing the tip against the work surface.
11. Do not operate air tool without its guards in place. Do not modify the tool.
12. Do not operate this tool while tired or under the influence of drugs, alcohol, or any medication.
13. Adopt a comfortable posture with proper balance, and maintain secure footing at all times. Non-slip footwear or anti-skid floor strips are recommended.
14. Do not wear loose clothing or jewellery. Confine long hair.
15. Excessive air pressure and too much free rotation may decrease life of the tool and may cause a hazardous situation.
16. Check air hoses for wear, and keep them away from heat and sharp edges. Repair or replace damaged air hose immediately. Do not carry tool by the air hose.
17. Air hose may cause tripping hazards; keep hose away from traffic areas.
18. Do not use this tool near flammable objects, or in potentially explosive environments. Do not use near live electrical wires.
19. Do not use power tools in damp or wet location, or expose them to rain. Keep work area well lighted.
20. Do not leave a connected tool unattended. When not in use, disconnect tool from air source.
21. Shut off air supply and discharge any residual pressure from tool before removing hose, making adjustments, changing accessories, or storing tool.
22. Make sure tool is switched off, and your finger off the trigger, before connecting to air supply. Remove adjusting keys before operating.
24. Keep visitors a safe distance from the work area. Keep children away.



Safety Specific For Air Impact Wrench

1. This impact wrench is designed for removing and installing threaded fasteners. If you are not familiar with the proper and safe operation of a pneumatic impact wrench, do not use it until proper training and knowledge have been obtained.
2. Use only impact sockets in good condition. Sockets in poor condition may reduce impact power, and could break, creating a safety hazard
3. Use only sockets designated for use with impact wrenches. Never use hand tool sockets, as they can shatter.
4. Never hold the socket, drive or drive extension with your hand during operation.
5. Make sure the workpiece is secure and will not shift while operating the impact wrench. Do not hold workpieces with your hand.
6. Do not dispose of this tool with normal household waste. Never dispose the air tool into a fire.
7. Make sure fastener can withstand rated torque of the impact wrench.

Warning: Some dust, fumes and gases created by power sanding, sawing, grinding, drilling, welding and other construction activities contain chemicals that may cause cancer and birth defects or other reproductive harm. Some examples of these chemicals are:

- Lead from lead based paint.
- Crystalline silica from bricks, cement and other masonry products.
- Arsenic and chromium from chemically treated timber.

Your risk of exposure varies, depending on how often you do this type of work. To reduce your exposure to these chemicals, work in a well-ventilated area and work with approved safety equipment, such as dust masks that are specifically designed to filter out microscopic particles.

Technical Specifications

Impact Wrench Type	Super Duty Composite
Length	113mm
Square Drive	1/2"
Working Torque @ 5 seconds	500 ft/lb (678 Nm)
Torque Mechanism	Jumbo Hammer Clutch
Motor Type	Air Rotor
Free Speed	10,000 rpm
Air Consumption	4 CFM (113 L/min)
Maximum Air Pressure	90 PSI
Sound Pressure level	108dB
Recommended Air Hose	10mm
Inlet	1/4" BSPT
Exhaust	Rear Exhaust with Muffler
Weight	1.35kg

Setup

Any missing parts or damage should be reported immediately to your Toolmaster distributor. Do not use a damaged tool. Read this instruction manual thoroughly for operation, maintenance and safety instructions. The diagram below is the ideal setup position. The lubricator is optional and if not used, then a few drops of Pneumatic Tool Oil need to be added to the airline connection before operation. Add a few more drops after each hour of continual use.

Air Supply

The recommended air system is shown in Fig.1.


1. Use proper air hose size (refer to tool specifications). The hose should be just long enough to serve the working area. Excessive hose length will cause pressure drop.



WARNING! Ensure that the air supply is clean and does not exceed 90psi. Too high an air pressure and/or unclean air will shorten the life of the air tool due to accelerated wear, and may cause damage and/or personal injury.

2. Drain the compressor air tank daily. Water in the air line will damage the air tool.
3. Clean the compressor air inlet filter screen weekly.
4. Line pressure should be increased to compensate for unusually long air hoses (over 8 meters). The minimum hose bore should be 10mm and fittings must have the same inside dimensions.
5. Keep hoses away from heat, oil and sharp edges. Check hoses for wear, and make certain that all connections are secure.

IMPORTANT: The leader hose is optional, but connecting a quick-change coupling directly to the tool is not recommended, as vibration may cause the connection to fail. For the best result, add a leader hose and install any quick-change couplings further down the line.

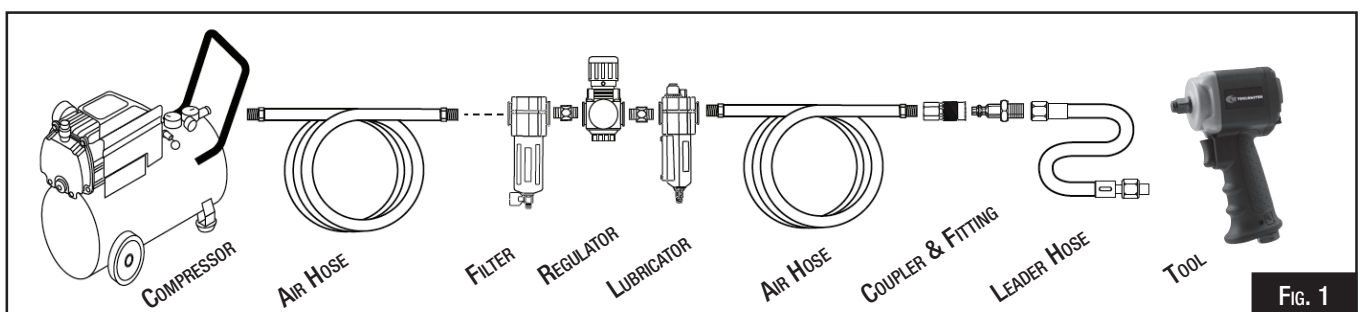

WARNING: Operating the tool at pressures over the rated capacity may cause severe damage and/or personal injury. Do not exceed 90 PSI while operating the tool. Do not use an accessory rated at a lower maximum pressure than the tool.

Operating Instructions

1. Remove protective cap from air inlet (Fig. 1). If an in-line oiler is not being used, add 4 or 5 drops of air tool oil (not included) into the air inlet.
2. Blow out air line to remove any dirt or moisture, then connect air supply hose to tool. Set air pressure to 90 psi.
3. Push socket (not included) onto anvil until it clicks into position.
4. Switch the direction lever to select forward or reverse (F/R) rotation.
5. Push in and rotate regulator dial to preferred speed setting. Regulator settings are for reference only and do not indicate specific power settings.



CAUTION! TO PREVENT INJURY FROM TOOL OR ACCESSORY FAILURE:

Do not exceed the tool's maximum air pressure rating. If the tool still does not have sufficient force a maximum pressure and sufficient airflow, then a larger tool may be required.

6. To prevent accidents, turn off the tool, detach the air supply, safely discharge any residual air pressure in the tool, and release the throttle and/or turn the switch to its off position after use. Clean external surfaces of the tool with clean, dry cloth, and apply a thin coat of tool oil, then store the tool indoors out of children's reach.

To loosen nut or bolt:

1. Select the reverse rotation.
2. Place the impact socket over the nut, hold the grip firmly, and place the other hand over the top of the housing. Gently squeeze the trigger. (Fig. 3)

Important: *If tool cannot loosen nut, DO NOT raise air pressure above 90 psi. If tool's air regulator is in low setting, raise setting and retry. If tool's regulator is already at maximum, do not continue attempts to loosen nut with this impact wrench. Use other methods or tools to loosen nut.*

To tighten nut or bolt:

1. Install the nut or bolt as far as possible by hand.
2. Select the forward rotation.
3. Place the impact socket over the nut or bolt, hold the grip firmly, and place the other hand over the top of the housing. Gently squeeze the trigger. (Fig. 3)



Optional Accessories



PNEUMATIC TOOL OIL 500ML
ORDER CODE A037



5 PIECE PACK - HIGH-FLOW AIR FITTINGS
1/4" BSPT
ORDER CODE F935



RWK-15 - INDUSTRIAL POLYMER AIR HOSE
15 METRE x Ø9.5MM ID HOSE
ORDER CODE H008
RWK-30 - INDUSTRIAL POLYMER AIR HOSE
30 METRE x Ø9.5MM ID HOSE
ORDER CODE H009

Maintenance

1. Daily - Air Supply Maintenance:

Every day, maintain the air supply according to the component manufacturers' instructions. Maintain the lubricator's oil level. Use Pneumatic Tool Oil (Order Code A037)

Drain the moisture filter regularly.

Performing routine air supply maintenance will allow the tool to operate more safely and will also reduce wear on the tool.

2. Quarterly (every 3 months) – Tool Disassembly, Cleaning, and Inspection:

Have the internal mechanism cleaned, inspected, and lubricated by a qualified technician.

For a full service contact your local Toolmaster service agent.

When not in use, disconnect from air supply, clean nibbler and store in a safe and dry place.



Environmental Protection.

Recycle unwanted materials instead of disposing of them as waste.
All tools, accessories and packaging should be sorted, taken to a recycle centre and disposed of in a manner which is compatible with the environment.

Troubleshooting

Review the troubleshooting and procedures in this section if a problem develops with your Air Tool. If you are still unable to resolve the problem, then contact your local Toolmaster distributor.

<i>Symptoms</i>	<i>Possible Cause</i>	<i>Possible Solution</i>
Decreased output.	<ol style="list-style-type: none"> 1. Not enough air pressure and/or air flow. 2. Obstructed throttle. 3. Incorrect lubrication or not enough lubrication. 4. Blocked air inlet screen (if equipped). 5. Air leaking from loose housing. 6. Mechanism contaminated. 	<ol style="list-style-type: none"> 1. Check for loose connections and make sure that air supply is providing enough air flow (CFM) at required pressure (PSI) to the tool's air inlet. Do not exceed maximum air pressure. 2. Clean around throttle to ensure free movement. 3. Lubricate using air tool oil and grease according to directions. 4. Clean air inlet screen of buildup. 5. Make sure housing is properly assembled and tight. 6. Have qualified technician clean and lubricate mechanism. Install in-line filter in air supply as stated in Setup: Air Supply.
Housing heats during use	<ol style="list-style-type: none"> 1. Incorrect lubrication or not enough lubrication. 2. Worn parts. 	<ol style="list-style-type: none"> 1. Lubricate using air tool oil and grease according to directions. 2. Have qualified technician inspect internal mechanism and replace parts as needed.
Severe air leakage (Slight air leakage is normal, especially on older tools.	<ol style="list-style-type: none"> 1. Cross-threaded housing components. 2. Loose housing. 3. Damaged valve or housing. 4. Dirty, worn or damaged valve. 	<ol style="list-style-type: none"> 1. Check for incorrect alignment and uneven gaps. If cross-threaded, disassemble and replace damaged parts before use 2. Tighten housing assembly. If housing cannot tighten properly, internal parts may be misaligned 3. Replace damaged components. 4. Clean or replace valve assembly.