


A049 Spare Parts List

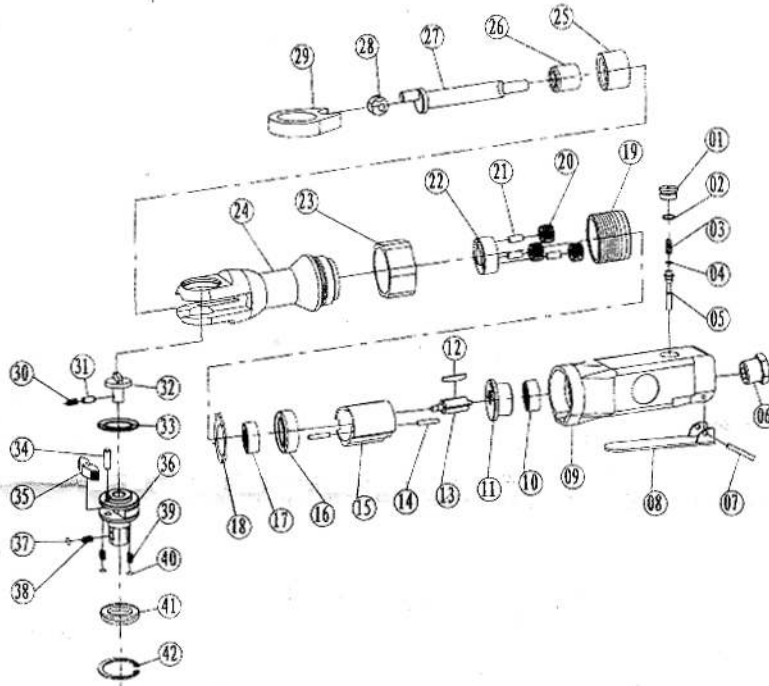

No.	Description	No.	Description	No.	Description	No.	Description
1	Valve Plug	12	Rotor Blade	23	Clamp nut	34	Pin
2	O-ring	13	Rotor	24	Ratchet Housing	35	Ratchet Pawl
3	Spring	14	Cylinder Pin	25	Needle Bearing	36	Ratchet Anvil
4	O-ring	15	Cylinder	26	Bearing shell	37	Steel ball
5	Valve Bushing	16	Front Plate	27	Crank shaft	38	Spring
6	Air inlet	17	Bearing	28	Drive bushing	39	Spring
7	Roll Pin	18	Washer	29	Ratchet Yoke	40	Steel ball
8	Trigger	19	Thread Ring Gear	30	Spring	41	Thrush washer
9	Housing	20	Idler Gear	31	Lock Pin	42	Retainer ring
10	Rear Bearing	21	Idler Gear Pin	32	Reverse Button		
11	Rear Plate	22	Idler Gear Plate	33	Washer		