



OPERATION MANUAL

SPARE PARTS SECTION

The following section covers the spare parts diagrams and lists that were current at the time this manual was originally printed. Due to continuous improvements of the machine, changes may be made at any time without notification.

HOW TO ORDER SPARE PARTS

1. Have your machines **model number & date of manufacture** on hand, these can be found on the specification plate mounted on the machine
2. A scanned copy of your parts list/diagram with required spare part/s identified
3. Go to www.machineryhouse.com.au/contactus and fill out the enquiry form attaching a copy of scanned parts list.

PART NO.	DESCRIPTION	QTY.	PART NO.	DESCRIPTION	QTY.	PART NO.	DESCRIPTION	QTY.
A	CHAIN & HOOK	1	1	BOLT M12 x 75	1	11	LOCK WASHER M16	3
8	BOOM EXTENSION	1	2	FLAT WASHER M12	7	12	NUT M16	3
C	BOOM	1	3	LOCK WASHER M12	7	13	BOLT M16 x 80	1
D	MAIN POST	1	4	NUT M12	7	14	BOLT M12 x 95	1
E	HANDLE	1	5	BOLT M14 x 90	1	15	BOLT M12 x 40	6
F	JACK	1	6	FLAT WASHER M14	1	16	BEARING	1
G	JACK HANDLE	1	7	LOCK WASHER M14	1	17	"R"PIN	1
H	TURNTABLE	1	8	NUT M14	1	18	WHEEL BINDING BOLT	1
I	WHEEL HUB	1	9	BOLT 16 x 110	1	19		
J	BASE	1	10	FLAT WASHER M16	3	20		



OPERATION MANUAL

SPARE PARTS DIAGRAM

