



| PARTS NO | DESCRIPTION        | QTY |
|----------|--------------------|-----|
| 01       | COVER              | 1   |
| 02       | WORK BASKET        | 1   |
| 03       | SPRING PAN         | 4   |
| 04       | PIN                | 4   |
| 05       | SAFETY PLATE       | 1   |
| 06       | WORK SHELF         | 1   |
| 07       | BODY               | 1   |
| 08       | SPRING WASHER      | 24  |
| 09       | NUT                | 24  |
| 10       | O-RING             | 1   |
| 11       | PLUG               | 1   |
| 12       | SHELF              | 1   |
| 13       | LEG                | 4   |
| 14       | PAN SCREW          | 24  |
| 15       | NUT                | 5   |
| 16       | SPRING WASHER      | 5   |
| 17       | SCREW              | 5   |
| 18       | STRAIN RELIEF      | 2   |
| 19       | CABLE AND PLUG     | 1   |
| 20       | PUMP HOUSING       | 1   |
| 21       | SCREEN             | 1   |
| 22       | SWITCH             | 1   |
| 23       | SWITCH BOX         | 1   |
| 24       | FLEXIBLE PIPE      | 1   |
| 25       | ELBOW SEAT         | 1   |
| 26       | PUMP BODY          | 1   |
| 27       | PUMP BACK COVER    | 1   |
| 28       | FILTER COVER       | 1   |
| 29       | PUMP HOUSING COVER | 1   |
| 30       | ELBOW              | 1   |
| 31       | PLASTIC WASHER     | 1   |
| 32       | SPIGOT             | 1   |
| 33       | LOCATION OF KNOB   | 1   |
| 34       | FILTER             | 1   |
| 35       | SEALRING           | 1   |
| 36       | IMPELLER           | 1   |
| 37       | SHIN WASHER        | 2   |
| 38       | SEALRING           | 1   |
| 39       | IMPELLER HOLDER    | 1   |

