

Parts List

NO.	DESCRIPTION
1	Hand wheel cover assembly
2	Hand wheel
3	Brake cover
4	Friction plate
5	Ratchet disc
6	Brake seat
7	Lock plate
8	Top pin
9	Side plate assembly B
10	Chain sprocket
11	Side plate assembly A
12	Splined gear
13	Driven shaft assembly
14	Driving shaft
15	Gear case assembly
16	Name plate
17	Suspension plate
18	Stripper
19	Guide roller
20	Load chain
21	Pawl spring
22	Pawl
23	Hand chain
30	Top hook assembly
31	Double spring

NO.	DESCRIPTION
32	Safety latch
33	Chain pin
34	Bottom hook assembly
35	Chain pin
36	Idle sheave assembly
37	Hook hanger component
38	Beam assembly
39	Split pin
40	Idle sheave pin
41	Idle sheave pin plate
42	Hook pin
44	Hook hanger cover
45	Beam cover
48	Suspension plate assembly
52	Screw
53	Spring washer
60	Prevailing torque type nut
61	Split pin
62	Hexagonal castle nut
63	Screw
64	Spring washer
65	Snap ring
66	Snap ring
66	Split pin
67	Prevailing torque type nut

NO.	DESCRIPTION
68	Screw
69	Snap ring
70	Prevailing torque type nut
71	Rivet
72	plit pin
73	Pin
74	Screw
75	Washer
90	Bearing A
91	Pin bearing
92	Bearing B
93	Bearing C

Spare Parts Diagram

CHAIN BLOCK

Exploded view 500kg to 20000kg

