



# 8. Drawing and parts list;

PD-28/35/35S

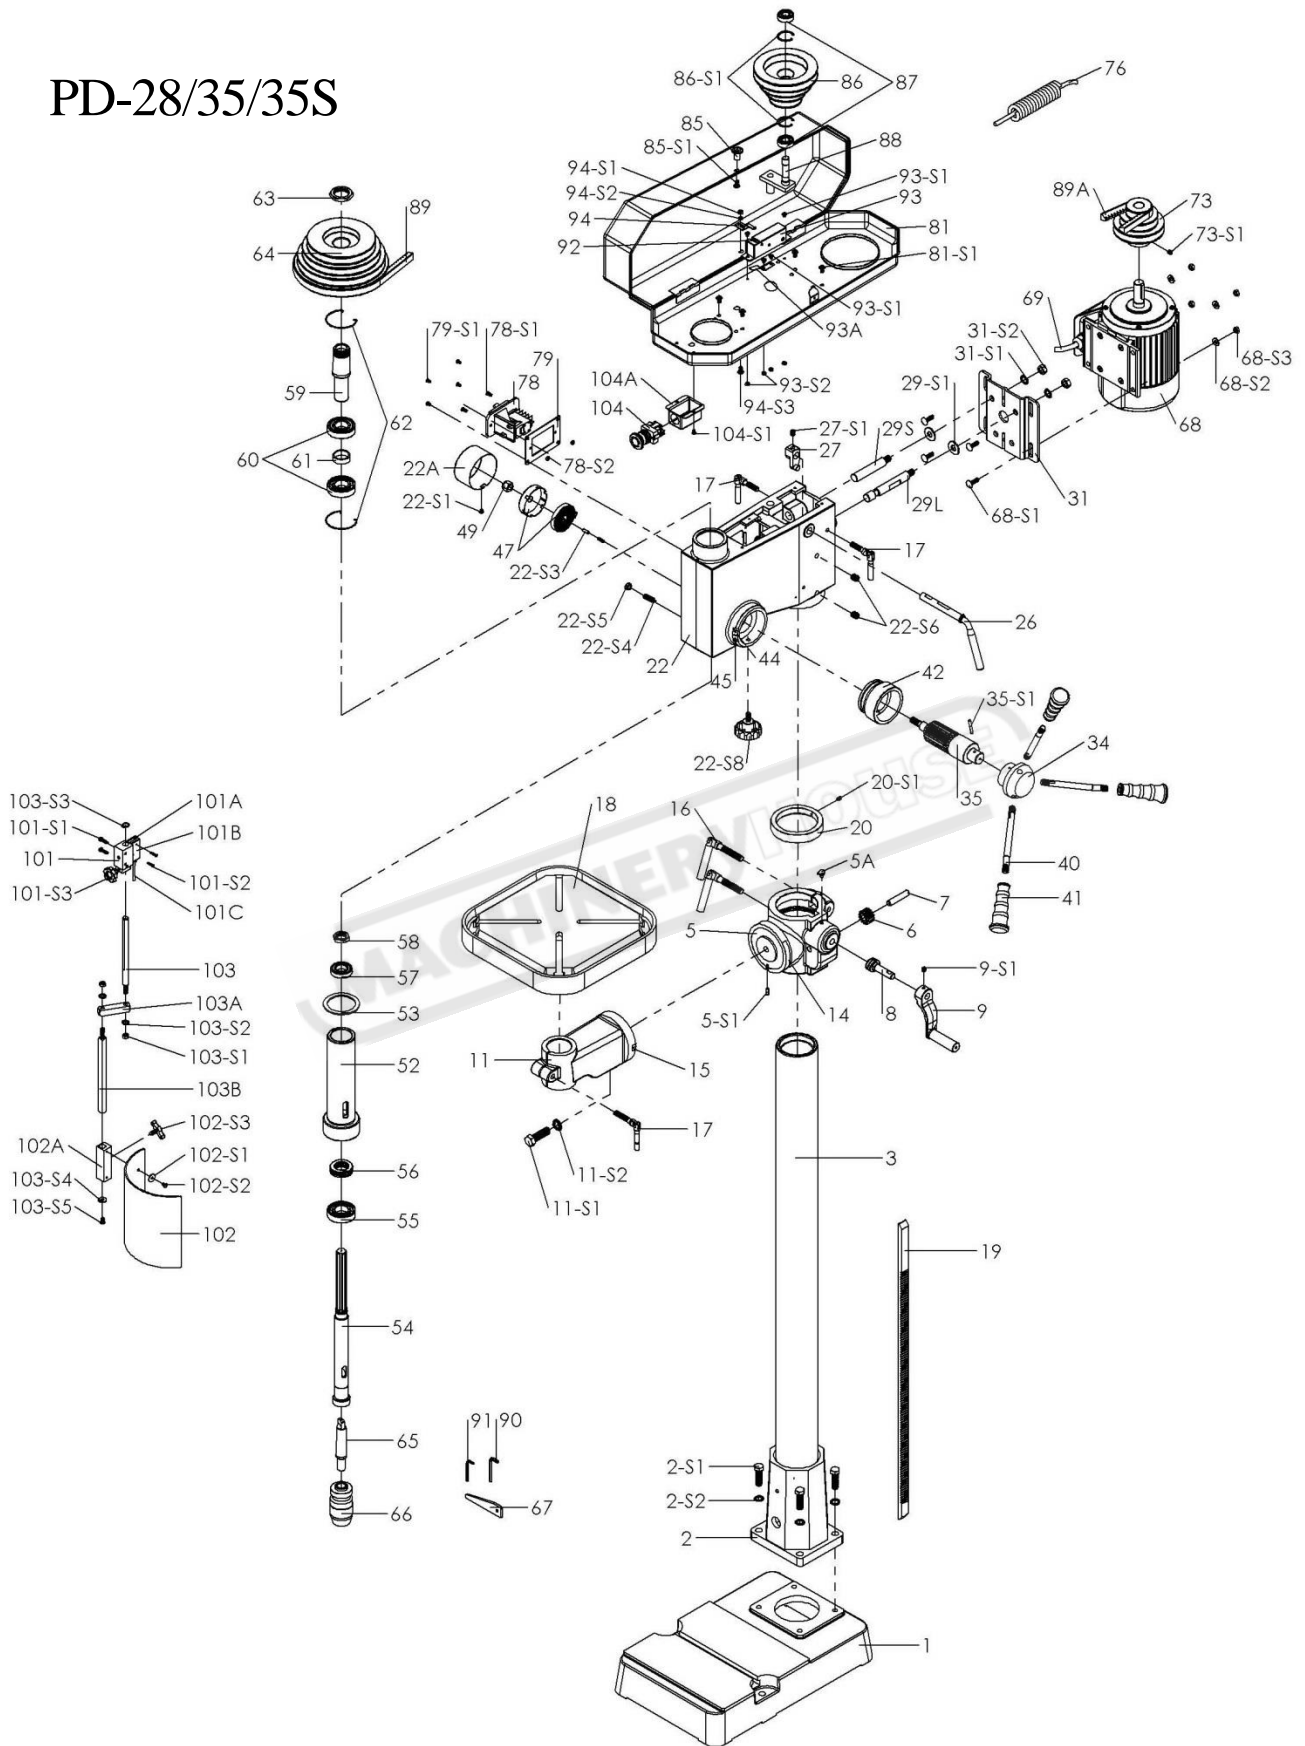

# PD-35B

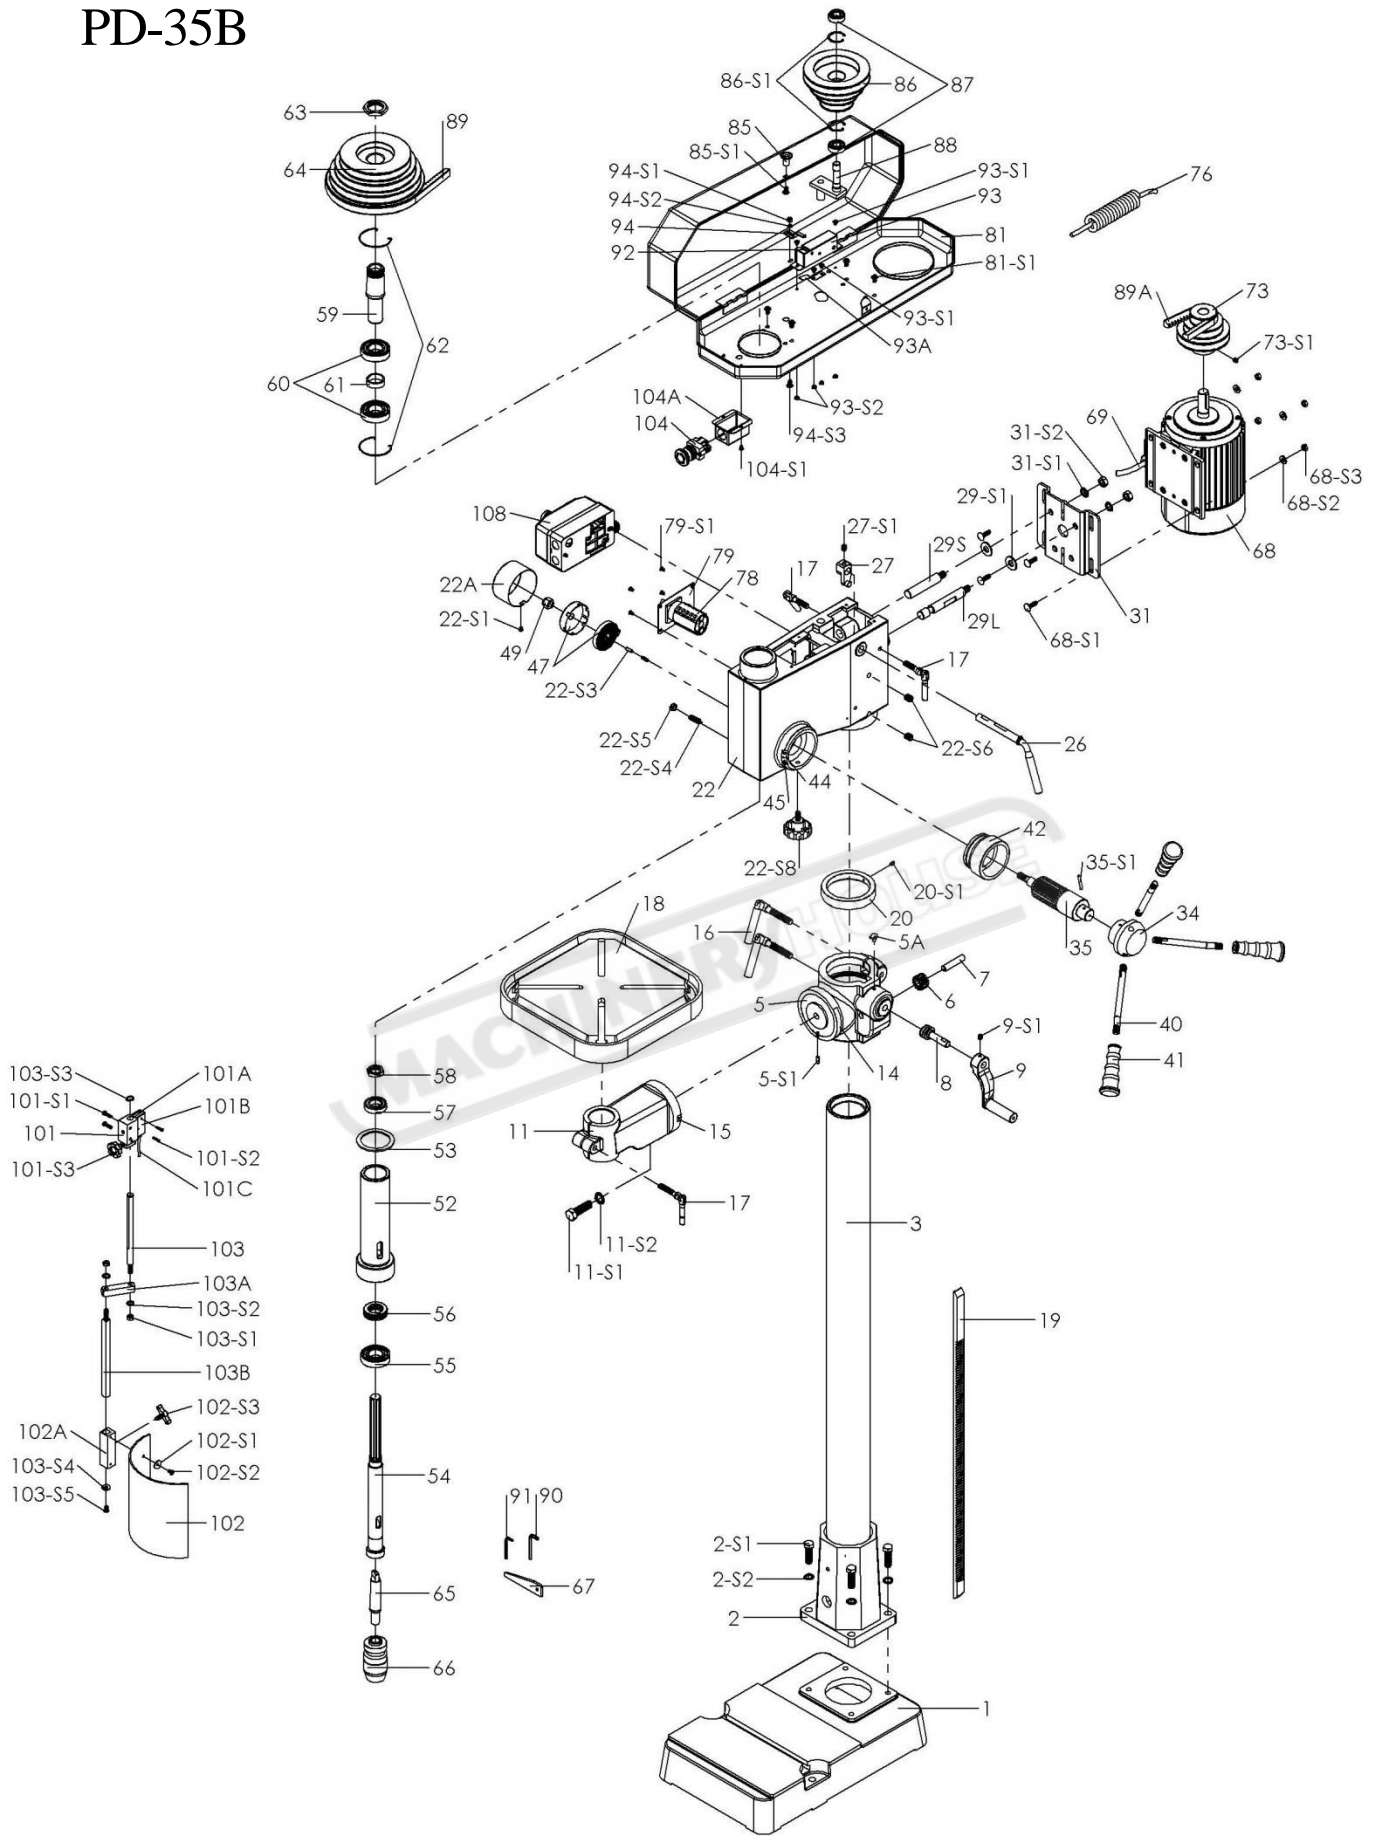

## PD-35 series

1	BASE
2	COLUMN HOLDER
2-S1	BOLT
2-S2	SPRING WASHER
3	COLUMN
5	TABLE BRACKET
5A	OIL CUP
5-S1	PIN
6	GEAR
7	GEAR BRACKET
8	WORM
9	TABLE HANDLE
9-S1	SET SCREW
11	TABLE ARM BRACKET
11-S1	BOLT
11-S2	SPRING WASHER
14	ANGLE SCALE
15	SCALE
16	CLAMP HANDLE
17	TABLE BOLT
18	TABLE SWIVEL TYPE
19	RACK
20	RACK RING
20-S1	SET SCREW
22	HEAD BODY
22A	FEED SHIFT COVER
22-S1	SCREW
22-S3	PIN
22-S4	SET SCREW
22-S5	NUT
22-S6	SET SCREW
22-S8	LEAD BOLT
26	SHIFTER BAR
27	SHIFTER
27-S1	SET SCREW
29L	SLIDE BAR (L)
29S	SLIDE BAR (S)
29-S1	WASHER
31	MOTOR BASE
31-S1	SPRING WASHER
31-S2	NUT
34	HANDLE BODY
35	FEED SHAFT
35-S1	PIN
40	FEED HANDLE
41	GRIP
42	SCALE RING
44	ANGLE SCALE
45	RIVET
47	SPRING CAP
49	NUT

52	QUILL
53	RUBBER WASHER
54	SPINDLE
55	BALL BEARING
56	THRUST BEARING
57	BALL BEARING
58	SPINDLE NUT
59	SPINDLE SLEEVE
60	BALL BEARING
61	COLLAR
62	SNAPRING
63	PULLEY NUT
64	SPINDLE PULLEY
65	TAPER ARBOR
66	DRILL CHUCK
67	DRILL SHIFTER
68	MOTOR
68-S1	BOLT
68-S2	WASHER
68-S3	NUT
69	MOTOR WIRE
73	MOTOR PULLEY
73-S1	SET SCREW
76	WIRE
78	SWITCH
78	CAN SWITCH (ForPD-35B)
78-S1	SCREW
78-S2	NUT
79	SWITCH COVER
79-S1	SCREW
81	PULLEY COVER
81-S1	SCREW
85	PULLEY COVER KNOB
85-S1	PULLEY COVER SCREW
86	TRANSMITTING PULLEY
86-S1	SNAPRING
87	BALL BEARING
88	PULLEY SHAFT
89	V-BELT
90	ALLEN WRENCHL
91	ALLEN WRENCHS
92	MICRO SWITCH
93	MICRO SWITCH BOX
93A	SPRING SHEET
93-S1	SCREW
93-S2	NUT
94	CLUTCH
94-S1	NUT
94-S2	SPRING WASHER
94-S3	SCREW
101	MICRO SWITCH BRACKET
101A	MICRO SWITCH
101B	MICRO SWITCH BOARD COVER
101C	MICRO SWITCH WIRE

101-S1	SCREW
101-S2	SCREW
101-S3	LEAD BOLT
102	SAFETY GUARD
102A	SAFETY GUARD SLIDE
102-S1	WASHER
102-S2	SCREW
102-S3	LEAD BOLT
103	BRACKET ROD
103A	SUPPORT ARM
103B	LOWER BRACKET ROD
103-S1	HEX NUT
103-S2	SPRING WASHER
103-S3	C-RING
103-S4	WASHER
103-S5	SCREW
104	EMERGENCY STOP SWTCH
104A	SWITCH COVER
104-S1	SCREW
108	MAGNETIC SWITCH