

SINO

Changing Sino DRO to read in Radius or Diameter

1. Enter the SETUP MENU by turning on the DRO whilst holding the ENTER BUTTON.
2. Once in the Setup menu arrow down until you come to “R – D MODE” and then PRESS ENTER.



3. It should then bring up the “SEL AXIS” option, Use the X or Y button to toggle the axis required between 0 or 1 (0 = Radius 1 = Diameter) Once done, then PRESS ENTER to return to the Setup menu.



4. You then need to save the change by arrowing down to the “QUIT” option and PRESS ENTER.

