



W740 setting "90 degree reset stop" for fence

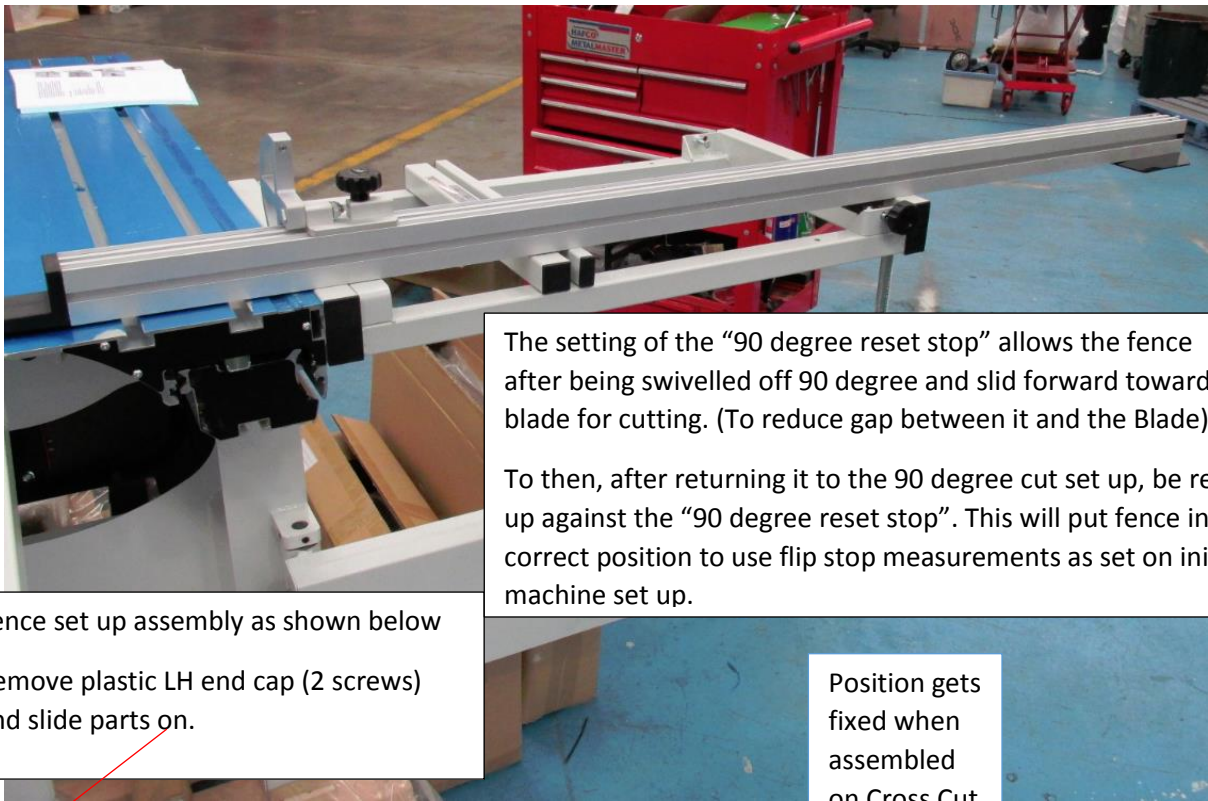






The setting of the "90 degree reset stop" allows the fence after being swivelled off 90 degree and slid forward toward blade for cutting. (To reduce gap between it and the Blade)
To then, after returning it to the 90 degree cut set up, be reset up against the "90 degree reset stop". This will put fence in correct position to use flip stop measurements as set on initial machine set up.

Fence set up assembly as shown below
Remove plastic LH end cap (2 screws) and slide parts on.

Position gets fixed when assembled on Cross Cut table

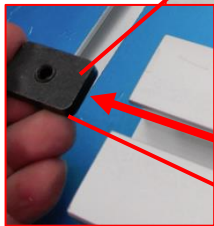

90 degree reset stop

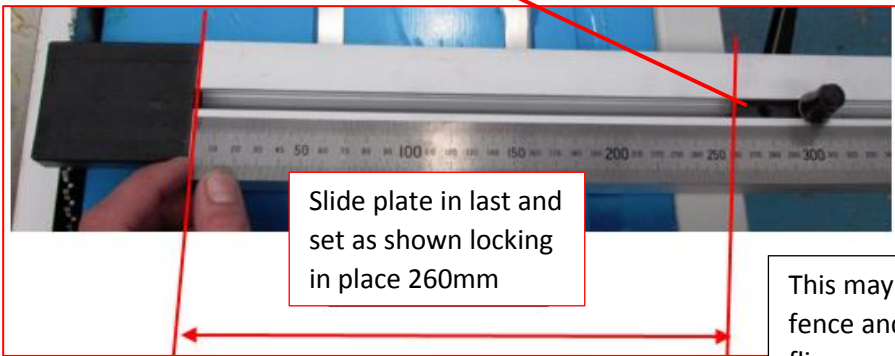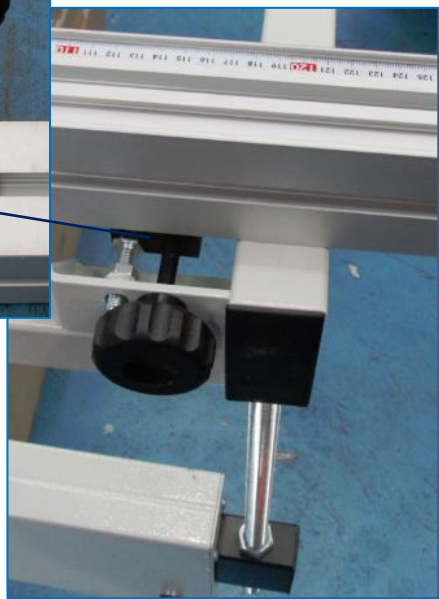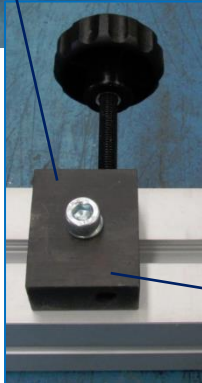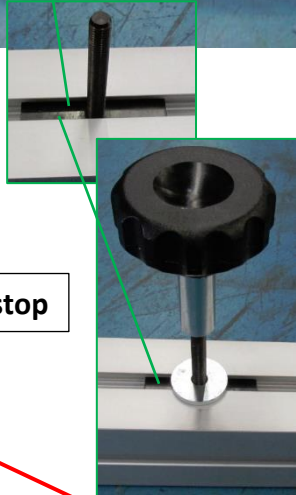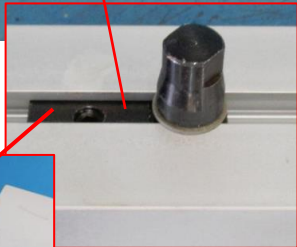

Slide plate in last and set as shown locking in place 260mm

This may need final adjustment when fence and its scale is set up off blade to flip over stop and a cut is taken,