

8. 2 PART LIST FOR MB1250

Item	Fin.No	Description	Qty	Item	Fin.No	Description	Qty
1	EB1250-011	Front feet	2	31	GB/T6170	Nut M6	1
2	GB/T70.2	Screw M10×20	8	33	GB/T70.1	Screw M8X20	2
3	EB1250-012	Back feet	2	37	EB1250-027	Angle iron	1
4	GB/T6170	Nut M8	2	38	GB/T70.3	Screw M8X20	6
5	GB/T70.1	Screw M8X25	2	39	GB/T119.2	Straight pin 12X100	3
6	EB1250-013	Stand	1	40	GB/T70.1	Screw M8X20	6
7	GB/T818	Screw M6X12	6	41	GB/T77	Screw M5X4	6
8	EB1250-037	Plate	2	42	EB1250-021	Fixed set	3
9	GB/T818	Screw M6X12	4	43	EB1250-022	Hinge body	3
10	EB1250-016	Right Shield	1	44	EB1250-023	Tee	3
11	GB/T70.1	Screw M8X20	4	45	EB1250-025	Bolt	3
12	GB/T70.1	Screw M8X30	4	46	EB1250-024	Ball seat	3
13	EB1250-015	Connect plate	1	47	GB/T1972	Disc spring 6.2X12.5	1
14	GB/T70.1	Screw M8X16	4	48	GB/T6170	Nut M6	2
15	EB1250-030	Cover	1	49	EB1250-009	Workbench	1
16	EB1250-014	Right clamp handle	1	50	GB/T70.1	Screw M8X16	3
17	EB1250-031	Left Shield	1	51	GB/T70.1	Screw M8X16	4
18	GB/T70.1	Screw M8X20	4	52	EB1250-026	Back stop bar	2
19	EB1250-010	Spoke	1	53	EB1250-007	Tray	1
20	EB1250-006	Bending plate	1	54	EB1250-008	Rubber mat	1
21	EB1250-035	Graduated scale	1	55	EB1250-018	Fix shaft	4
22	EB1250-017	Left clamp handle	1	56	EB1250-001	Clamp bar I	1
23	GB/T70.2	Screw M8X20	2	57	EB1250-020	Spring	4
24	EB1250-032	Connect plate	2	58	EB1250-019	Indicator dial	4
25	GB/T77	Screw M8X6	2	59	GB/T77	Screw M6X8	4
26	EB1250-036	Slider	1	60	EB1250-002	Clamp bar II	1
27	EB1250-034	Stop Block	3	61	EB1250-003	Clamp bar III	1
28	GB/T70.1	Screw M8X20	3	62	EB1250-004	Clamp bar IV	1
29	GB/T70.1	Screw M8X20	2	63	EB1250-005	Clamp bar V	1
30	EB1250-033	Shaft	1				

THE EXPLODED DRAWING FOR MB1250

