

# [EXPLODED VIEW]

- 1. Screw
- 2. Spring Washer
- 3. Left Support
- 4. Ball Bearing
- 5. Centrifugal Switch #
- 6. Screw
- 7. Stator Housing
- 8. Stator
- 9. Rotor Shaft\*


- 10. Fan
- 11. Right Support
- 12. Ext. Washer
- 13. Copper Set
- 14. Int. Washer
- 15. Screw
- 16. Grommet Rubber
- 17. Running Capacitor
- 18. Clamp
- 19. Screw

- 20. Grinding Base
- 21. Screw
- 22. Cable Strainer
- 23. Fixing Plate
- 24. Power Cord
- 25. Washer
- 26. Screw
- 27. Base Plate
- 28. Pad
- 29. Screw

- 30. Screw
- 31. NVR
- 32. Overload Protector\*
- 34. Spring Washer\*
- 35. Hex. Nut\*
- 36. Screw
- 37. Screw
- 38. Spring Washer
- 39. Disc Washer

# for GR 10, CN10 only  
(Single phase)  
\* for GR type

\* for GR10, CN10 and PR 10 only

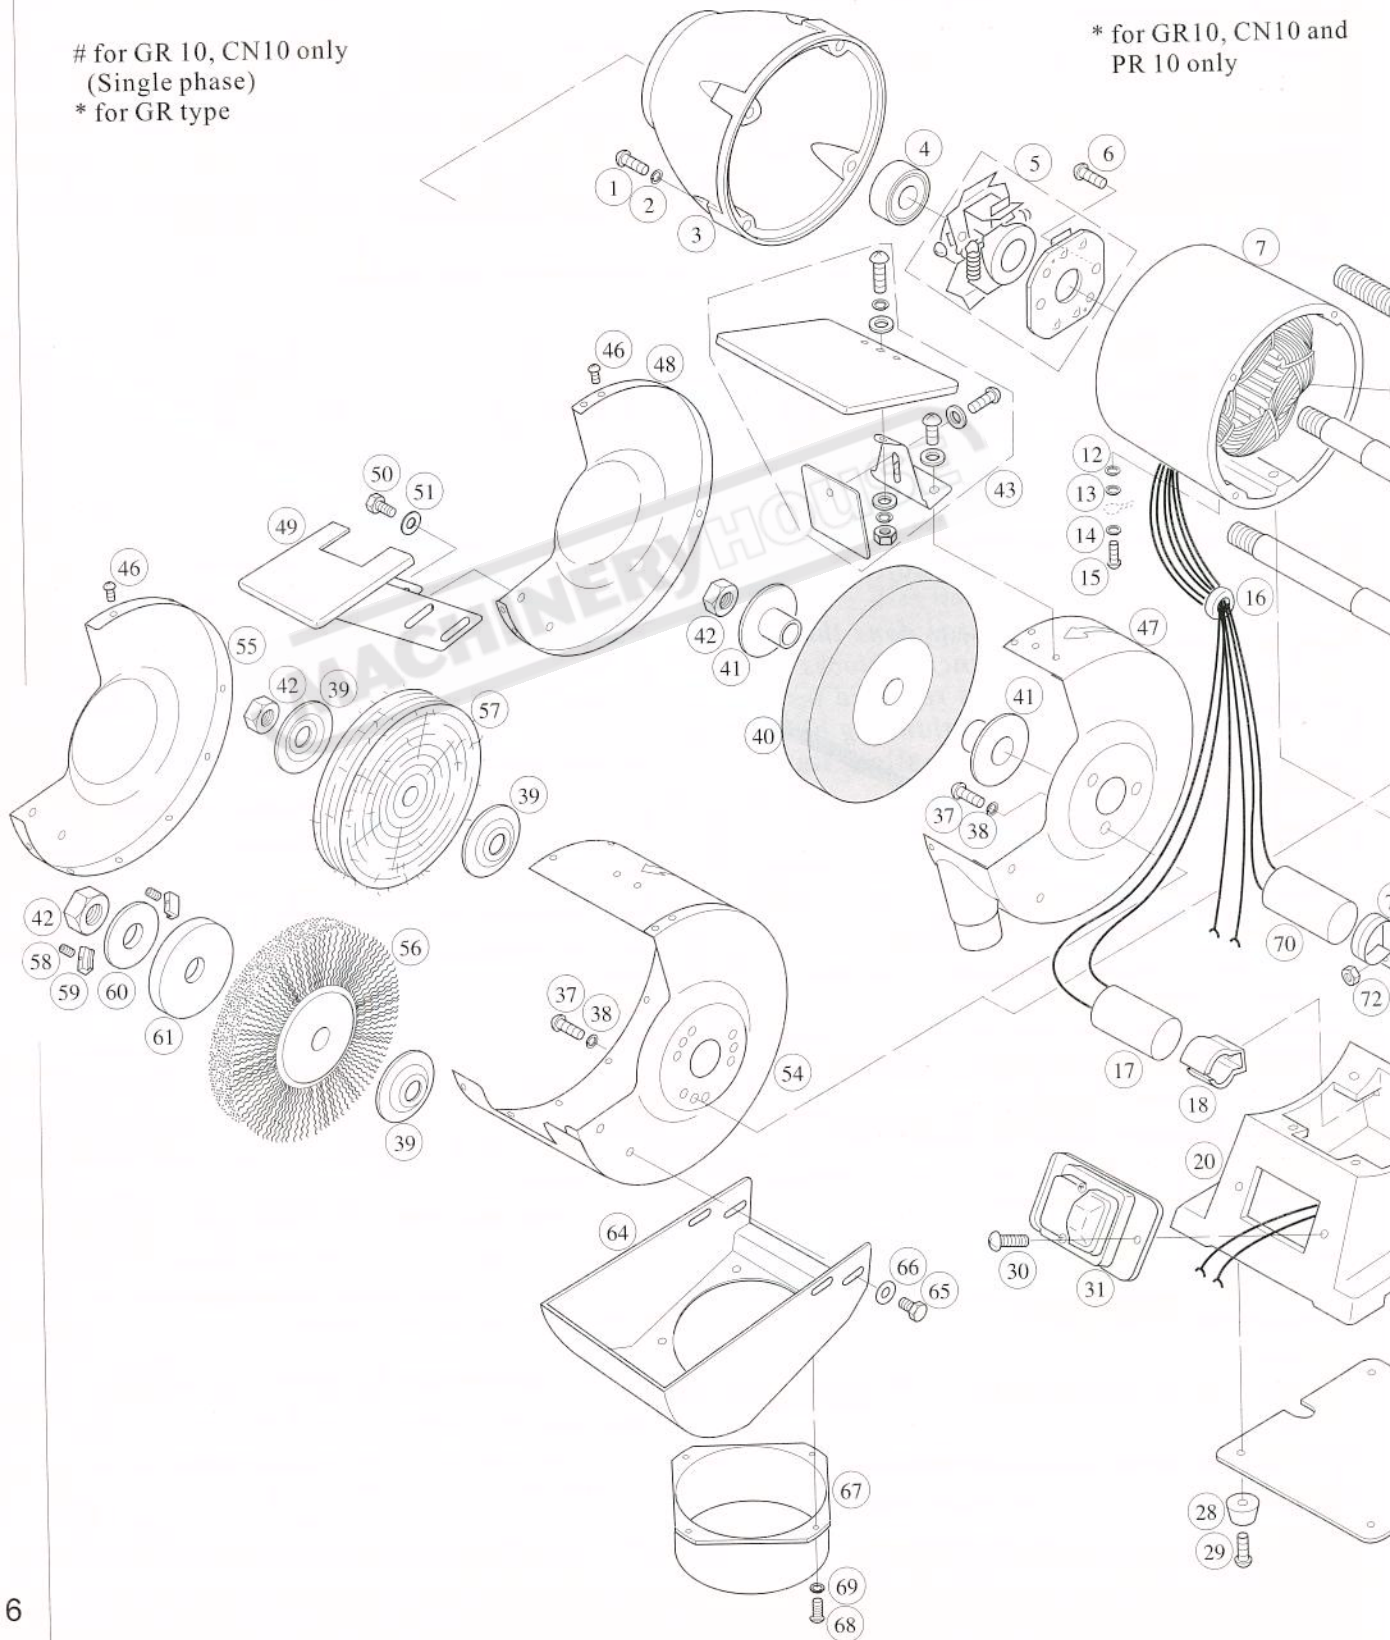

- 0. Grinding Wheel
- 1. Sleeve
- 2. Hex. Nut
- 3. Eyeshield Set
- 4. Right Int. Cover A
- 5. Right Wheel Cover A
- 6. Screw
- 7. Left Int. Cover A
- 8. Left Wheel Cover A
- 9. Toolrest

- 50. Hex. Bolt
- 51. Washer
- 52. Right Int. Cover B
- 53. Right Wheel Cover B
- 54. Left Int. Cover B
- 55. Left Wheel Cover B
- 56. Wire Brush
- 57. MOP/Buffer
- 58. Set Screw
- 59. Balance Block

- 60. Washer
- 61. Balancing Flange
- 62. Rotor Shaft\*1
- 63. Rotor Shaft\*2
- 64. Dust Collector
- 65. Hex. Bolt
- 66. Washer
- 67. Chip Outlet
- 68. Screw
- 69. Spring Washer

- 70. Starting Capacitor \*
- 71. Clamp \*
- 72. Hex. Nut \*
- 73. Wiring Board

44+45+47+48 for GR type  
 47+48+52+53 for CN type  
 52+53+54+55 for PR type

\*1 for CN type  
 \*2 for PR type

\*for GR 10, CN10 only  
 (Single phase)

