

# [EXPLODED VIEW]

1. Screw
2. Spring Washer
3. Left Support
4. Ball Bearing
5. Centrifugal Switch #
6. Screw
7. Stator Housing
8. Stator
9. Rotor Shaft\*

10. Fan
11. Right Support
12. Ext. Washer
13. Copper Set
14. Int. Washer
15. Screw
16. Grommet Rubber
17. Running Capacitor
18. Clamp
19. Screw


20. Grinding Base
21. Screw
22. Cable Strainer
23. Fixing Plate
24. Power Cord
25. Washer
26. Screw
27. Base Plate
28. Pad
29. Screw

30. Screw
31. NVR
32. Overload Protector\*
34. Spring Washer\*
35. Hex. Nut\*
36. Screw
37. Screw
38. Spring Washer
39. Disc Washer

# for GR 10, CN10 only  
(Single phase)

\* for GR type

\* for GR10, CN10 and  
PR 10 only

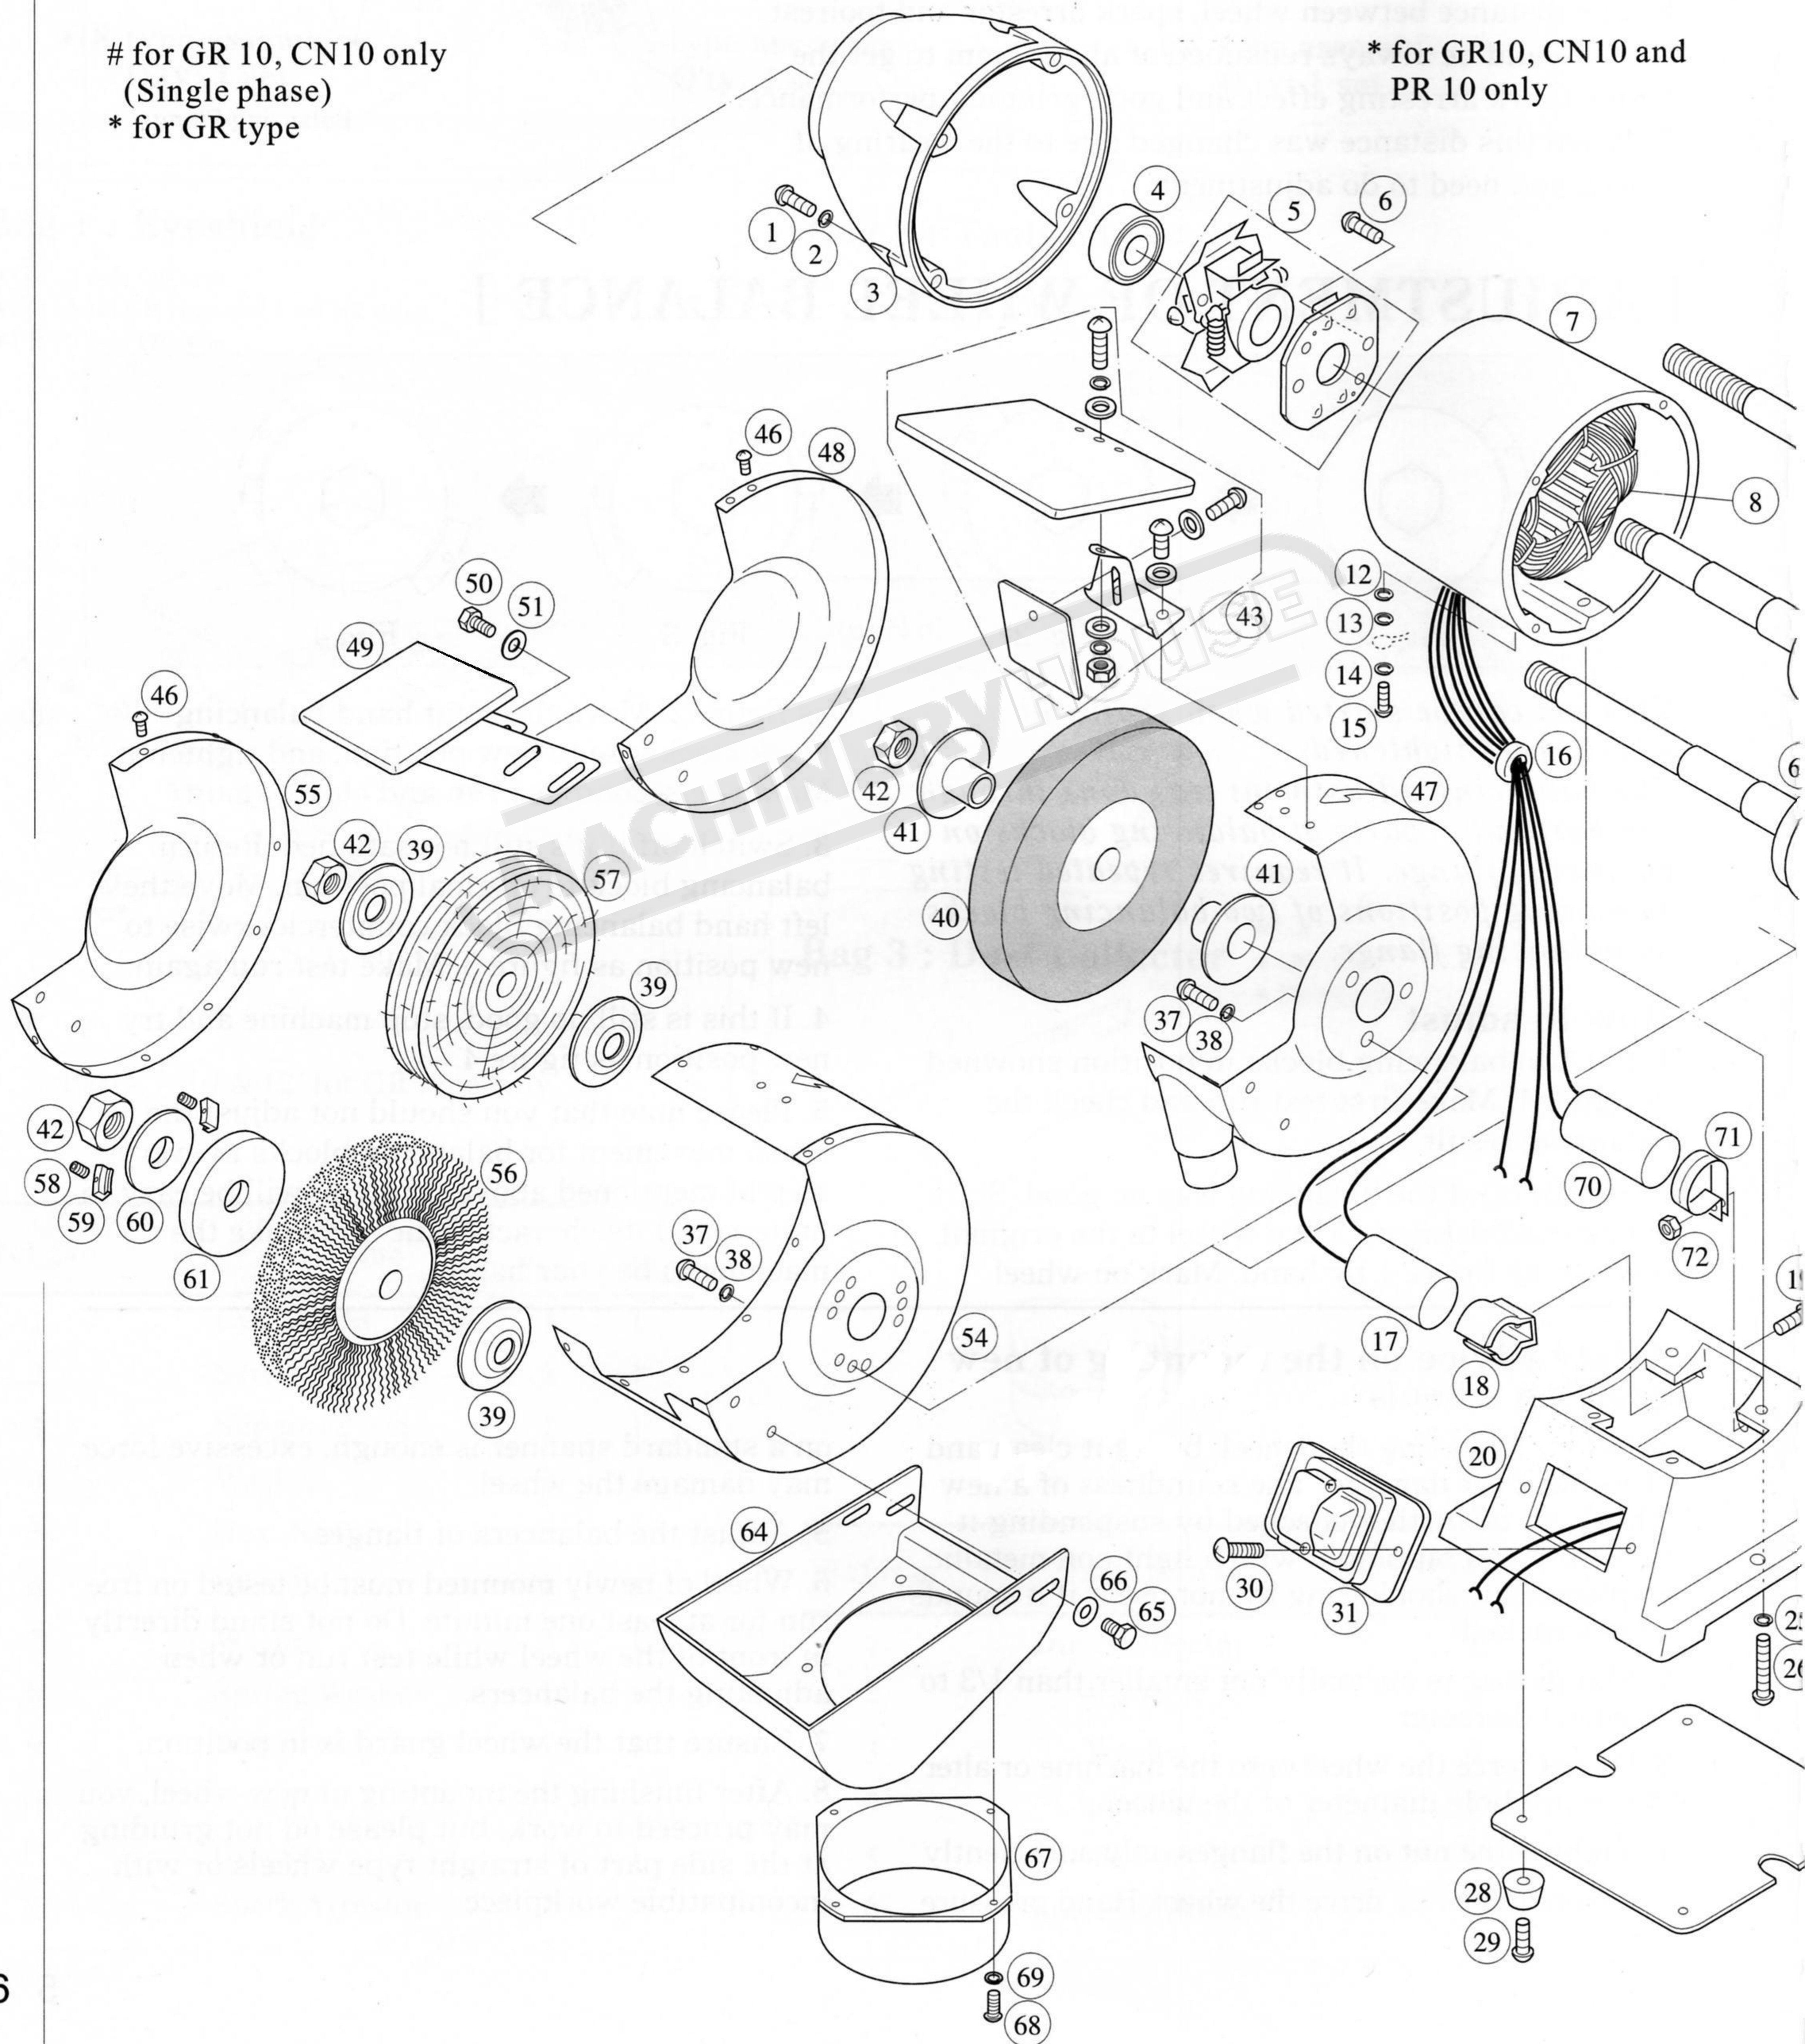

- |                         |                         |                      |                          |
|-------------------------|-------------------------|----------------------|--------------------------|
| 40. Grinding Wheel      | 50. Hex. Bolt           | 60. Washer           | 70. Starting Capacitor * |
| 41. Sleeve              | 51. Washer              | 61. Balancing Flange | 71. Clamp *              |
| 42. Hex. Nut            | 52. Right Int. Cover B  | 62. Rotor Shaft*1    | 72. Hex. Nut *           |
| 43. Eyeshield Set       | 53. Right Wheel Cover B | 63. Rotor Shaft*2    | 73. Wiring Board         |
| 44. Right Int. Cover A  | 54. Left Int. Cover B   | 64. Dust Collector   |                          |
| 45. Right Wheel Cover A | 55. Left Wheel Cover B  | 65. Hex. Bolt        |                          |
| 46. Screw               | 56. Wire Brush          | 66. Washer           |                          |
| 47. Left Int. Cover A   | 57. MOP/Buffer          | 67. Chip Outlet      |                          |
| 48. Left Wheel Cover A  | 58. Set Screw           | 68. Screw            |                          |
| 49. Toolrest            | 59. Balance Block       | 69. Spring Washer    |                          |

|                         |                |                       |
|-------------------------|----------------|-----------------------|
| 44+45+47+48 for GR type | *1 for CN type | *for GR 10, CN10 only |
| 47+48+52+53 for CN type | *2 for PR type | (Single phase)        |
| 52+53+54+55 for PR type |                |                       |

