


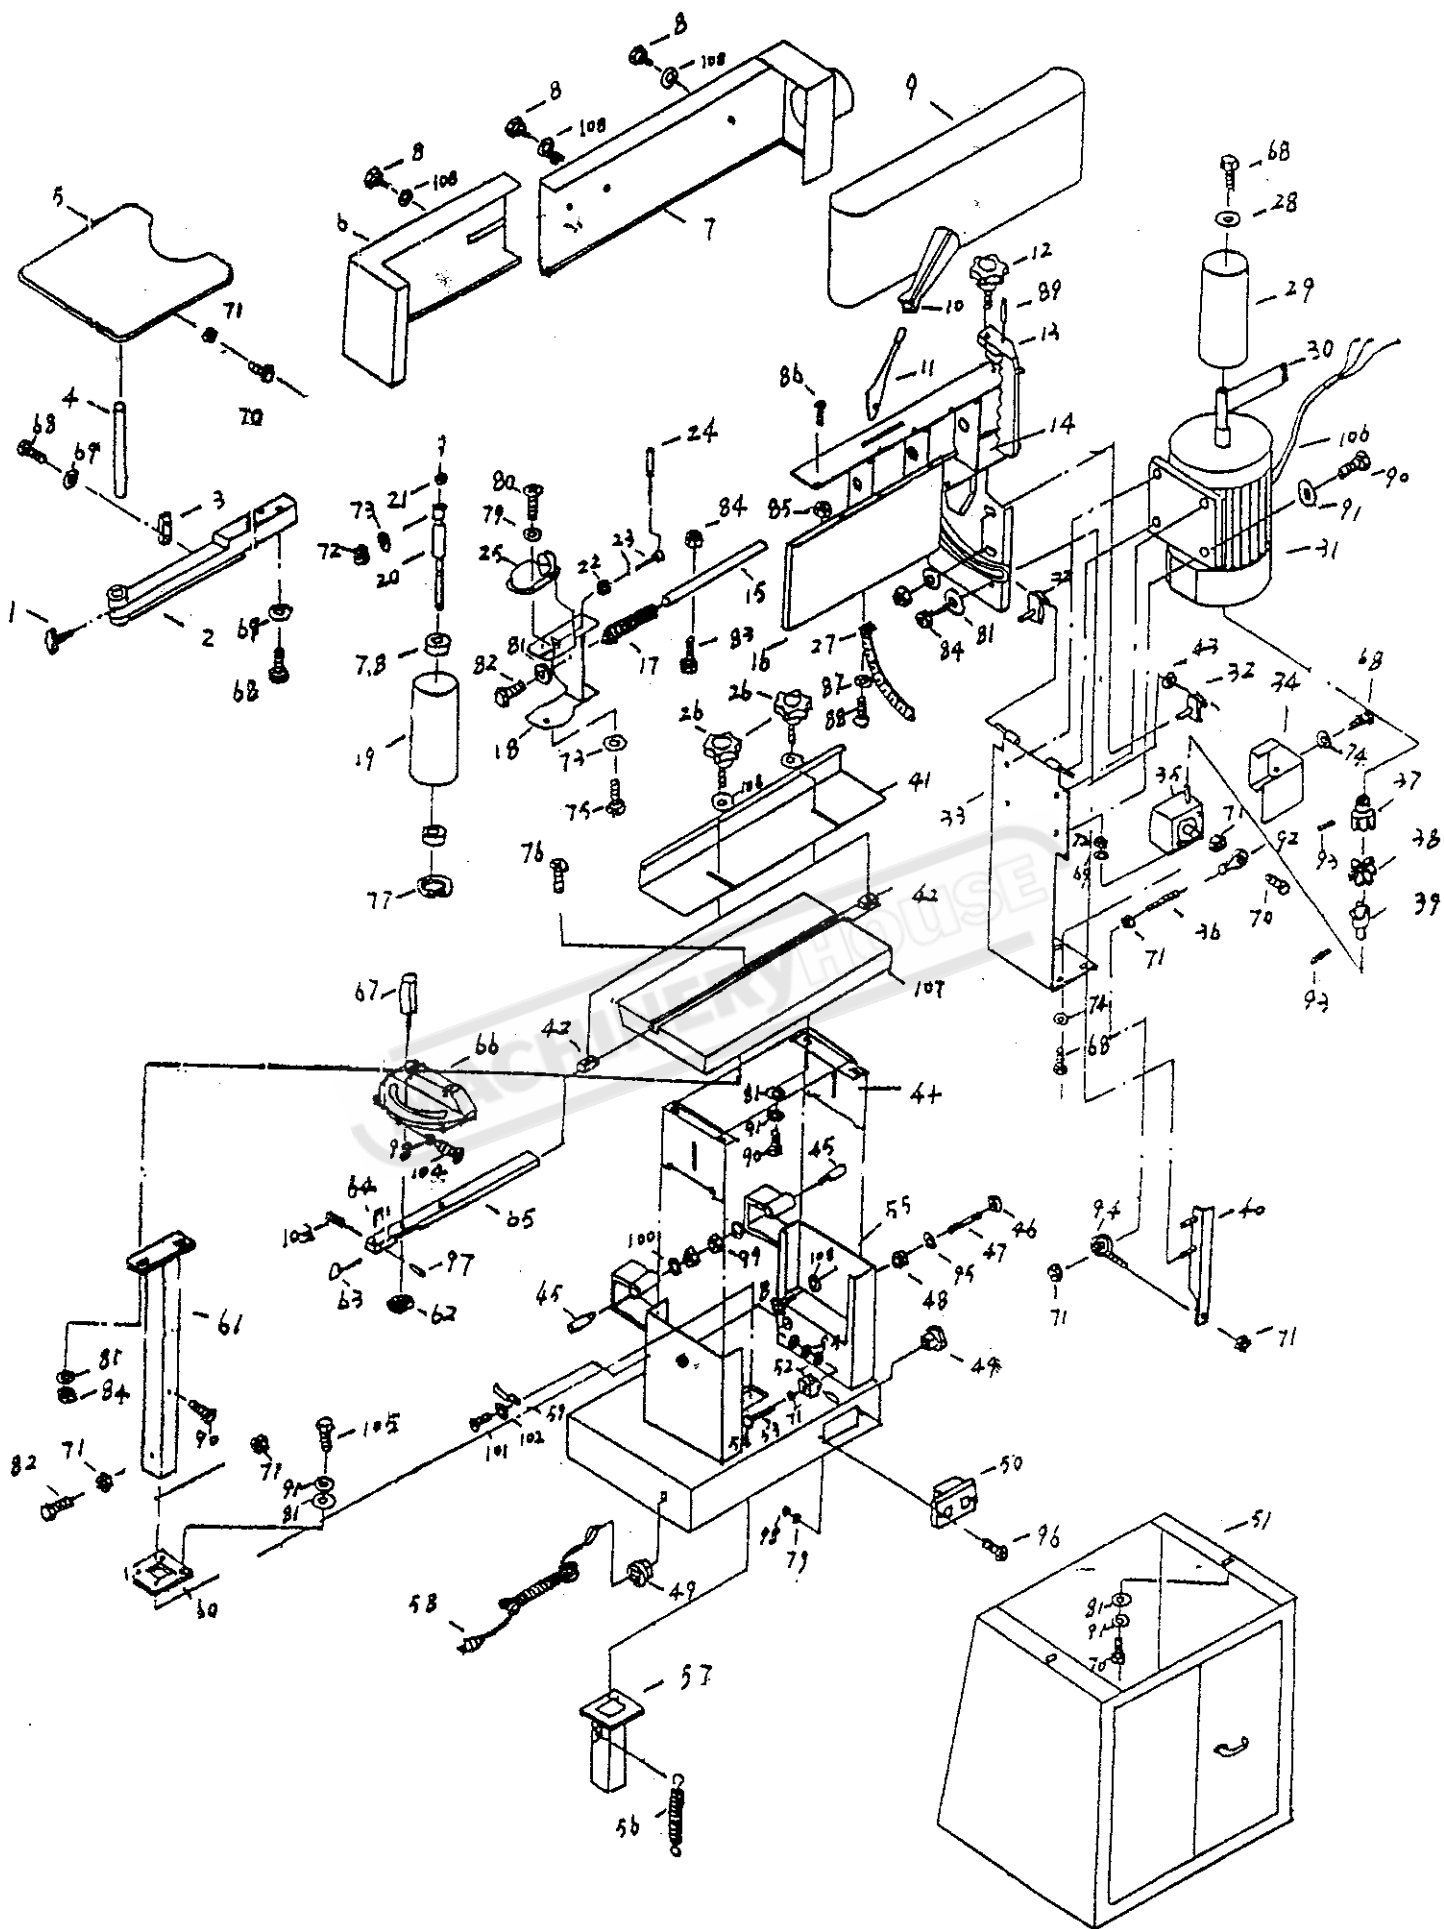

PARTS LIST

PART NO.	DESCRIPTION	QTY	PART NO.	DESCRIPTION	QTY
1	KNOB	1	38	ELASTOMER	1
2	LOCATING ARM	1	39	SHAFT COUPLING	1
3	LOCATING PLATE	1	40	ANGLE IRON FRAME	1
4	EXTENSION SUPPORT	1	41	FENCE	1
5	EXTENSION PLATFORM	1	42	GUIDE BLOCK	2
6	SECONDARY BELT COVER	1	43	COPPER WASHER	2
7	BELT COVER	1	44	LIFTING PLATE	2
8	KNOB	5	45	SCREW	2
9	SANDING BELT	1	46	REGULATING COLLAR	1
10	SAND CLAMP HANDLE	1	47	WORK TABLE BRACKET	1
11	BELT REPLACING PLATE	1	48	PARTITION RING	1
12	KNOB	1	49	CLAMPER	1
13	BRACKET	1	50	SWITCH	1
14	SANDING BELT PLATFORM	1	51	STAND	1
15	TENSION BAR	1	52	CAM ECCENTRIC	1
16	TABLE	1	53	HANDLE	1
17	SPRING	1	54	HAND KNOB	1
18	ROLLER ARM	1	55	BASE	1
19	DRIVER ROLLER	1	56	SPRING	2
20	SHAFT	1	57	GUIDE SLEEVE	1
21	GLOBULAR SLEEVE	1	58	POWER CORD	1
22	MICRO-INCHING NUT	1	59	WIDTH POINTER	1
23	MICRO-INCHING SCREW	1	60	CONNECTING PLATE	1
24	DRIVER WRENCH	1	61	GUIDE PILLAR	1
25	MICRO-INCHING BOX	1	62	LOCATING BLOCK	1
26	KNOB	2	63	LOCATING PLATE	1
27	TILT SCALE	1	64	POINTER	1
28	WASHER	1	65	GUIDE BAR	1
29	MOTOR ROLLER	1	66	MITER GAGE BODY	1
30	KEY	1	67	HAND KNOB	1
31	MOTOR	1	68	HEX HEAD SCREW	12
32	REVOLVE AXLE	1	69	GEAR WASHER	9
33	MOTOR BASE	1	70	HEX HEAD SCREW	4
34	PROTECTION COVER	1	71	NUT	1
35	GEAR CASE	1	72	NUT	5
36	SCREW M8X65	1	73	FLAT WASHER	2
37	SHAFT COUPLING	1	74	WASHER	6

PARTS LIST

PART NO.	DESCRIPTION	QTY	PART NO.	DESCRIPTION	QTY
75	HEX HEAD SCREW		93	SOCKET HEAD SET SCREW	2
76	SOCKET HEAD SET SCREW		94	BEARING	1
77	SPRING RING	1	95	WASHER	4
78	BEARING	2	96	PAN HD. SCREW	2
79	GEAR WASHER	6	97	SPRING ROLL PIN	1
80	PAN HD. SCREW	4	98	NUT	2
81	WASHER	13	99	NUT	2
82	HEX HEAD SCREW	3	100	SPRING WASHER	2
83	HEX HEAD SCREW	1	101	PAN HD. SCREW	1
84	NUT	9	102	GEAR WASHER	1
85	NUT	1	103	SOCKET HEAD SET SCREW	1
86	SECANT SET SCREW	8	104	PAN HD. SCREW	1
87	GEAR WASHER	1	105	SOCKET HEAD SET SCREW	4
88	PAN HD. SCREW	1	106	SWITCH CORD	1
89	SPRING ROLL PIN	1	107	TABLE	1
90	HEX HEAD SCREW	5	108	WASHER	7
91	GEAR WASHER	6			
92	BEARING	1			