



# PUMA 2100 / 2600 / 3100 series

Working range / Tooling system / Tool Interference Diagram

 


# Working range


Unit : mm (inch)

PUMA 2100 / 2100L  
12 station.


OD CLAMPER

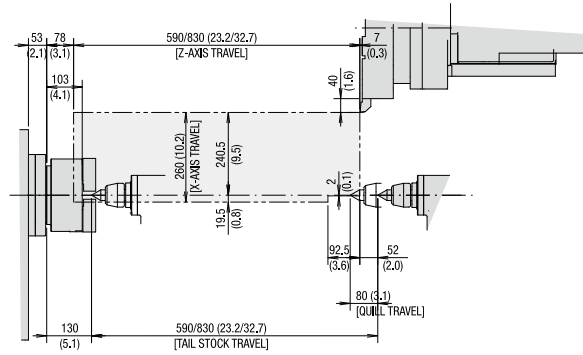


ID HOLDER

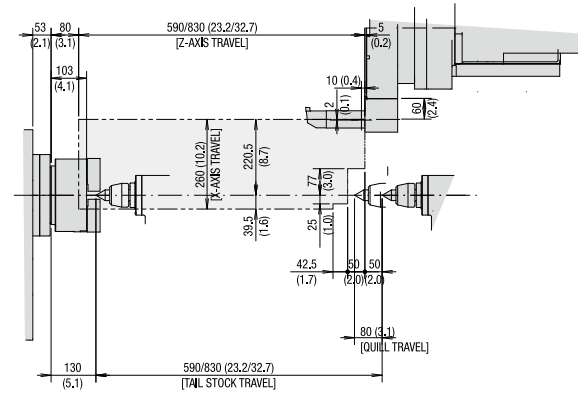 

FACE TOOL HOLDER

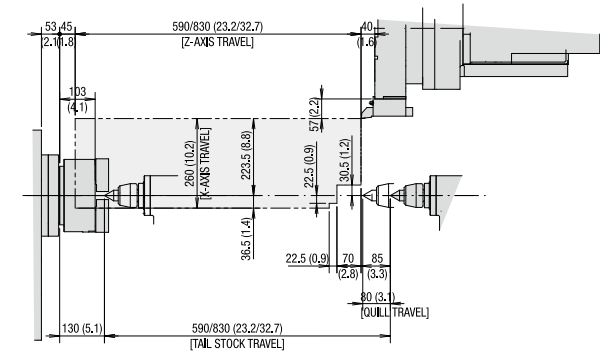 

EXTENDED OD HOLDER

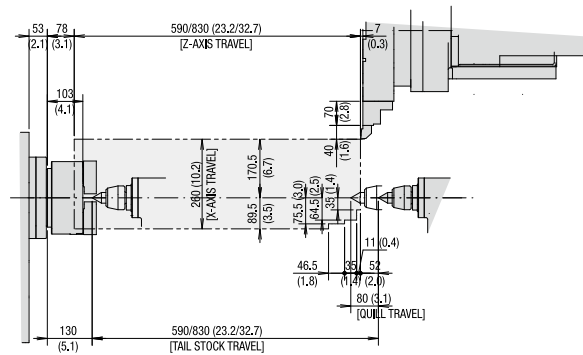 


# Working range


Unit : mm (inch)

PUMA 2100S / 2100LS  
12 station.

 
OD CLAMPER

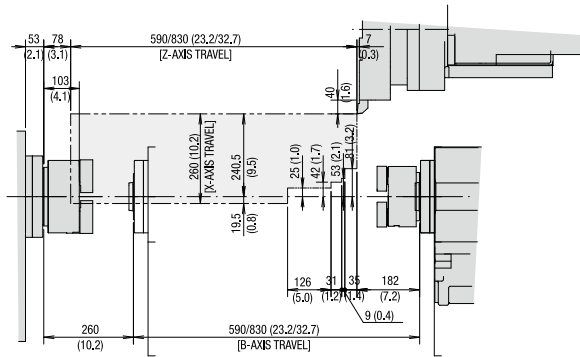


ID HOLDER

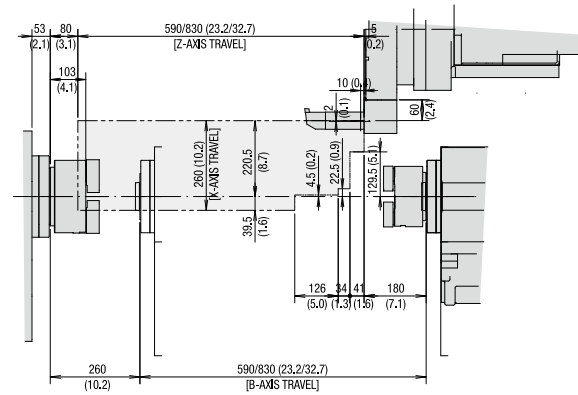 


FACE TOOL HOLDER

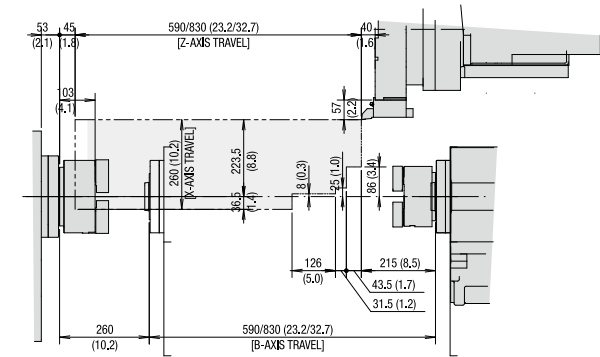 


DOUBLE OD HOLDER

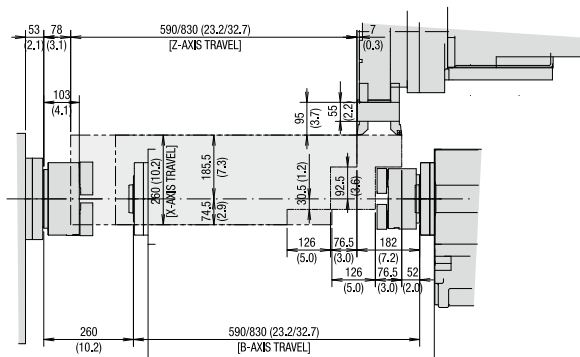 

DOUBLE ID HOLDER

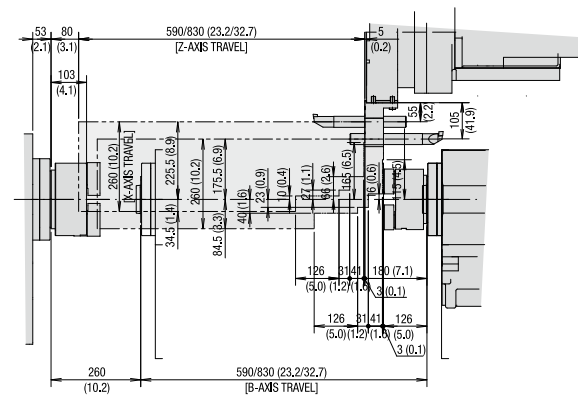 

CUT OFF HOLDER

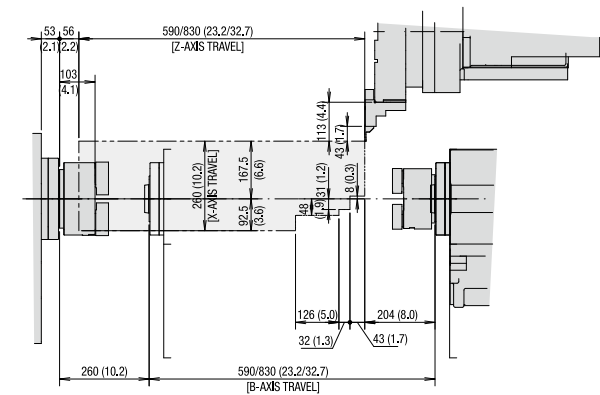 


# Working range


Unit : mm (inch)

PUMA 2100M / 2100Y / 2100LM / 2100LY  
12 station. - BMT55P

 
OD HOLDER

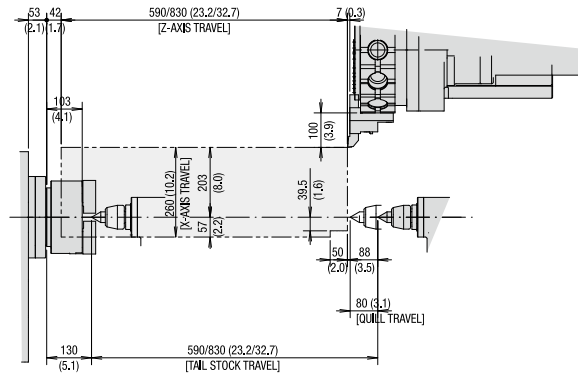


ID HOLDER

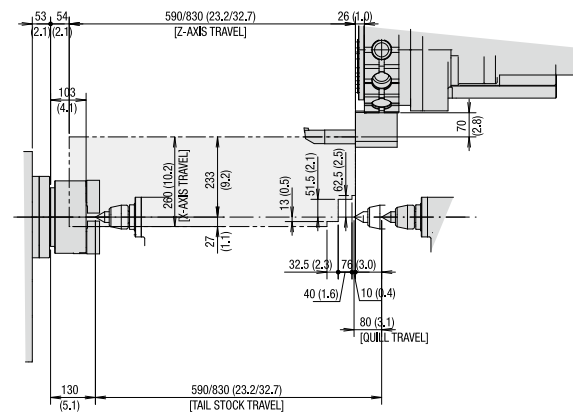 


FACE TOOL HOLDER

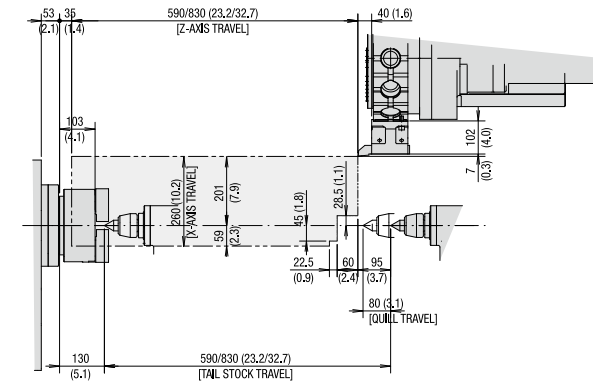 

STRAIGHT MILLING

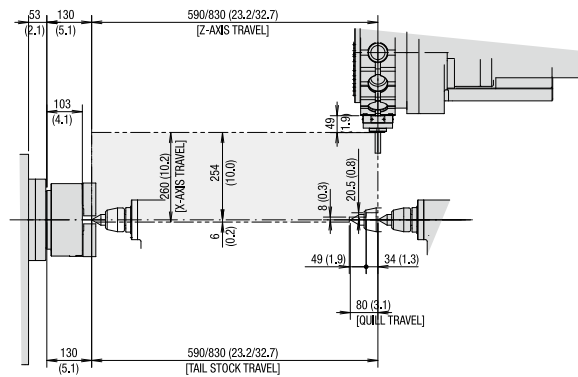 

ANGULAR MILLING (MAIN)

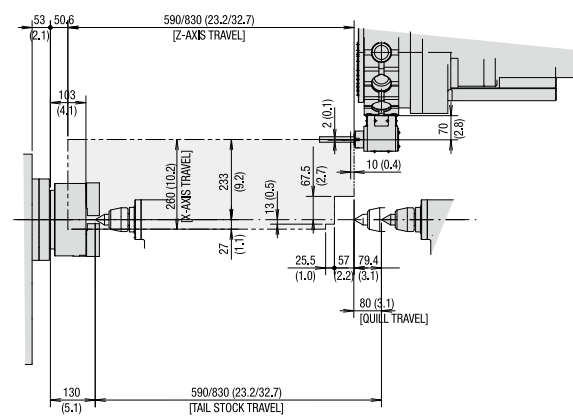 




# Working range


Unit : mm (inch)

PUMA 2100MS / 2100SY / 2100LMS / 2100LSY  
12 station. - BMT55P

 
OD HOLDER

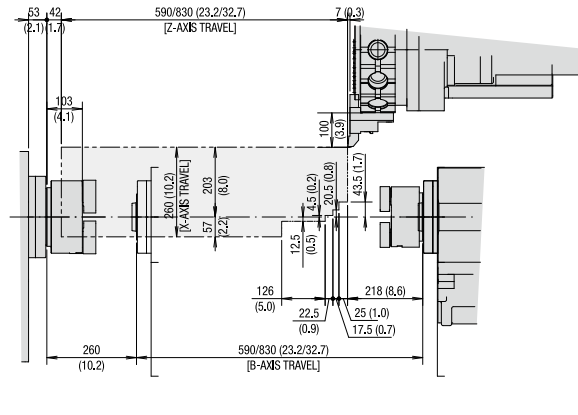


ID HOLDER

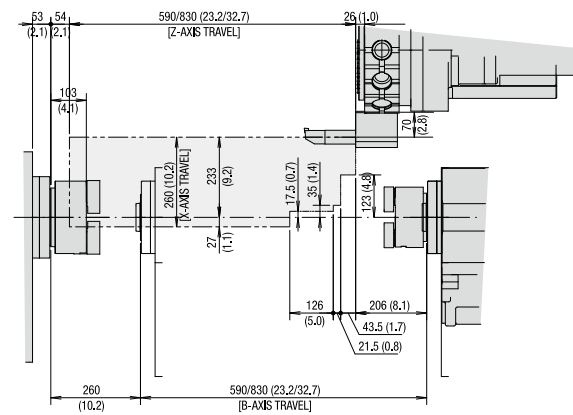 


FACE TOOL HOLDER

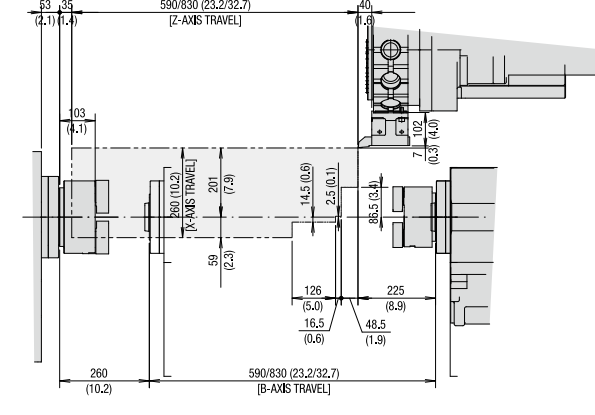 


DOUBLE OD HOLDER

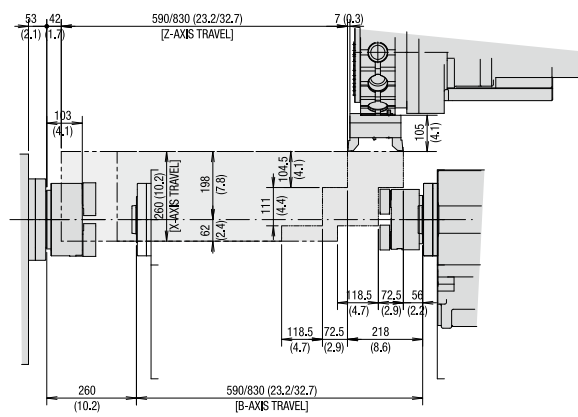 

DOUBLE ID HOLDER

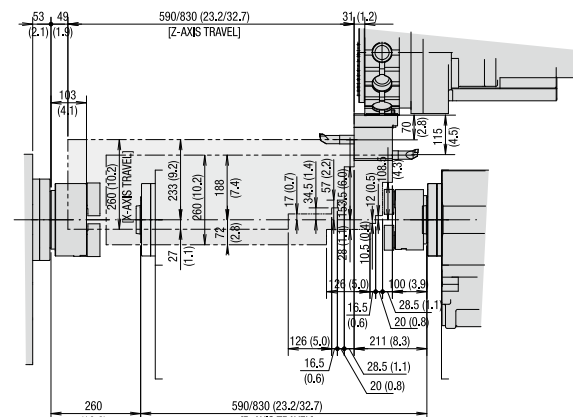 

CUT OFF HOLDER

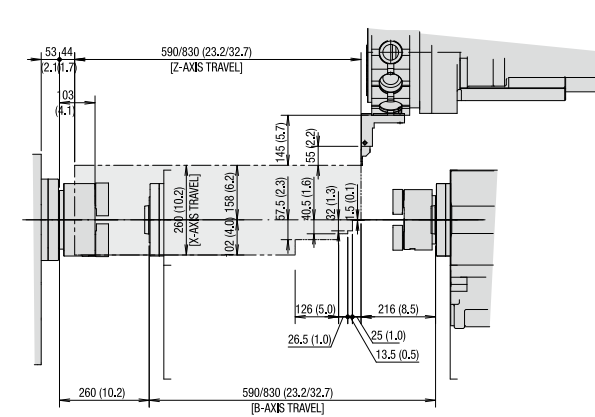 


# Working range


Unit : mm (inch)

PUMA 2100MS / 2100SY / 2100LMS / 2100LSY  
12 station. - BMT55P

 
STRAIGHT MILLING

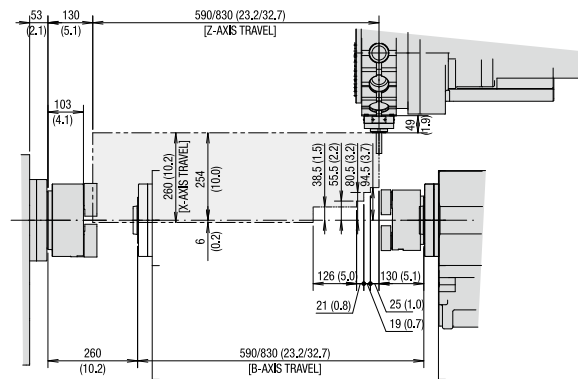

ANGULAR MILLING (SUB)

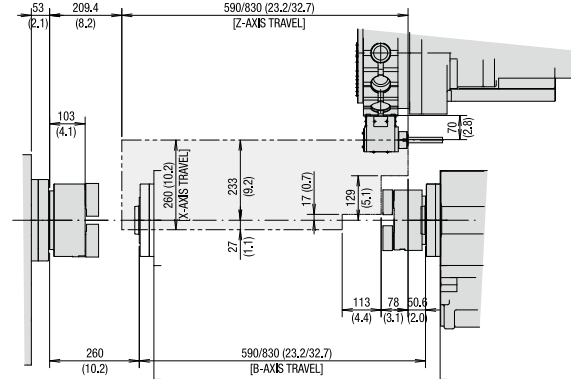 

ANGULAR MILLING (MAIN)

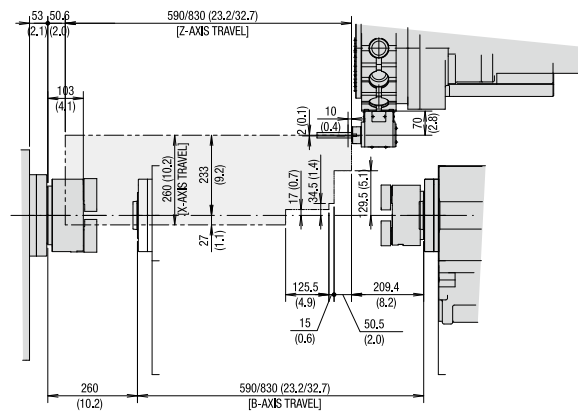 


# Working range


Unit : mm (inch)

PUMA 2100M / 2100Y / 2100LM / 2100LY **opt.**  
12 station. - BMT65P

 
OD HOLDER

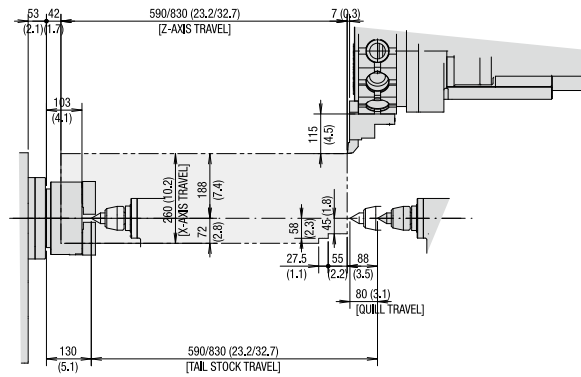


ID HOLDER

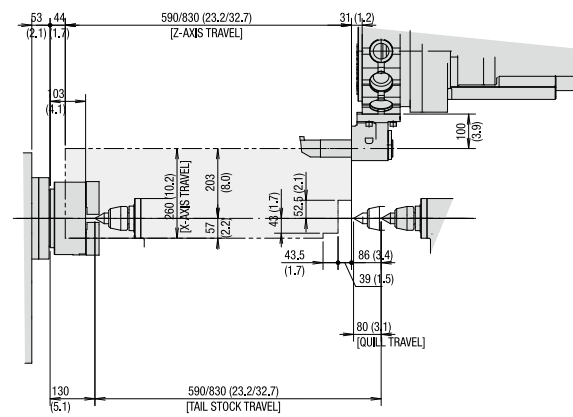 


FACE TOOL HOLDER

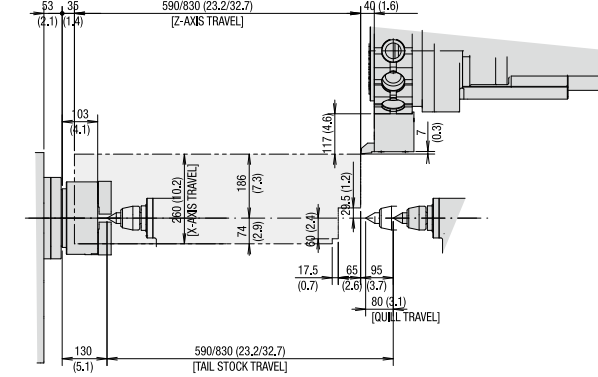 

STRAIGHT MILLING

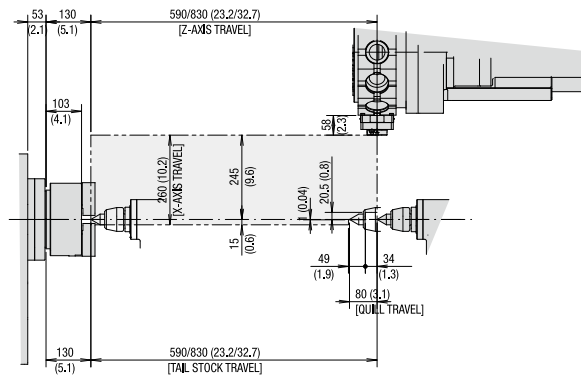 

ANGULAR MILLING (MAIN)

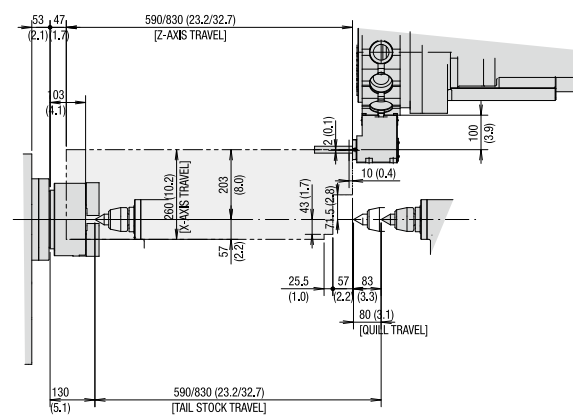 


# Working range


Unit : mm (inch)

PUMA 2100MS / 2100SY / 2100LMS / 2100LSY **opt.**  
12 station. - BMT65P

 
OD HOLDER

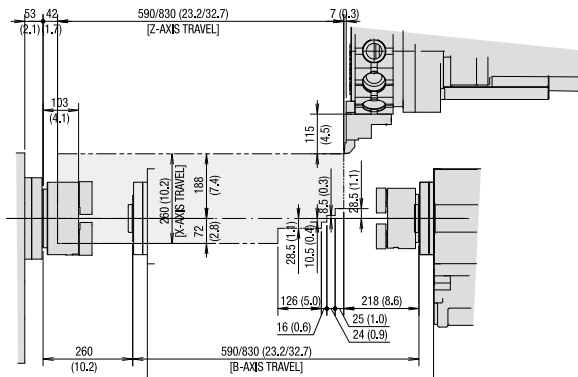


ID HOLDER

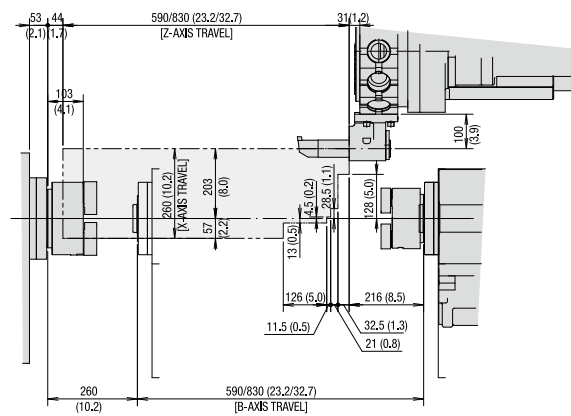 


FACE TOOL HOLDER

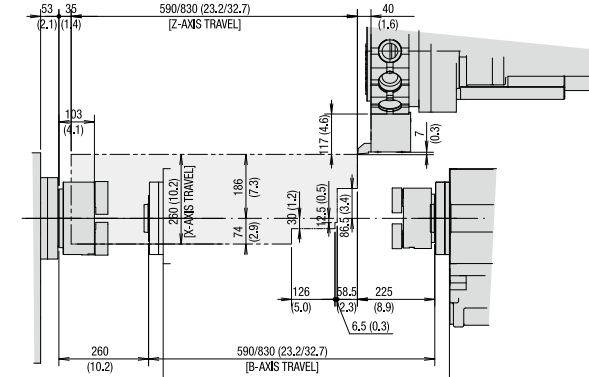 


DOUBLE OD HOLDER

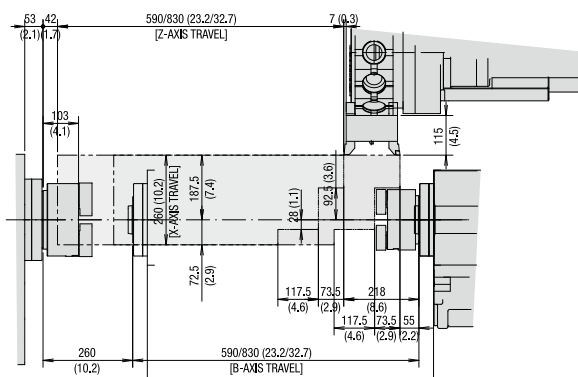 

DOUBLE ID HOLDER

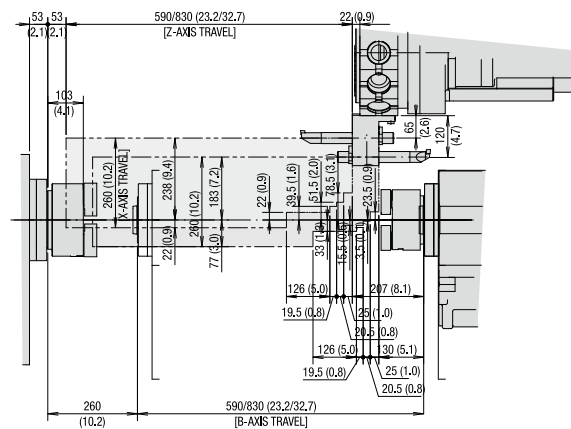 

CUT OFF HOLDER

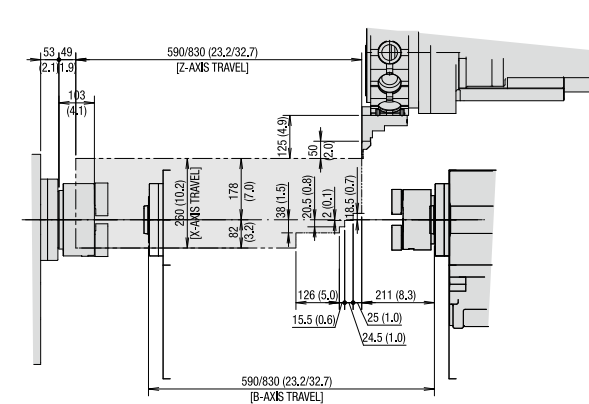 


# Working range


Unit : mm (inch)

PUMA 2100MS / 2100SY / 2100LMS / 2100LSY **opt.**  
 12 station. - BMT65P

 
STRAIGHT MILLING

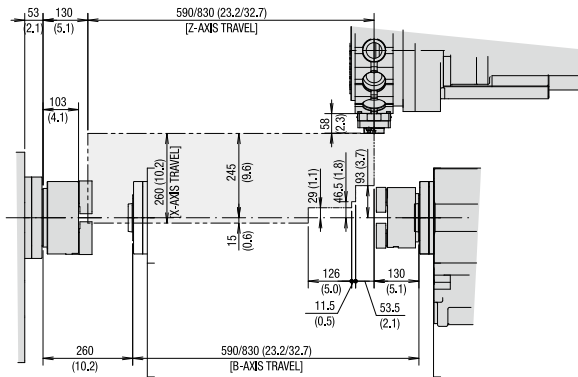

ANGULAR MILLING (SUB)

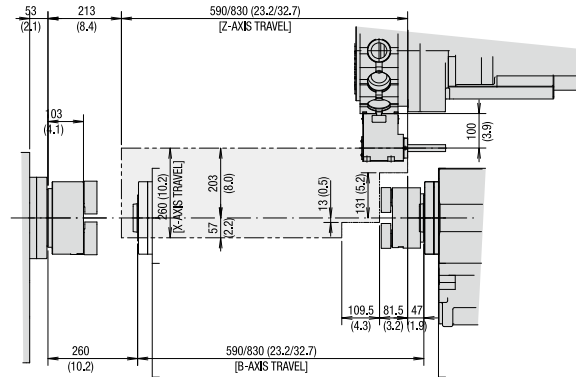 

ANGULAR MILLING (MAIN)

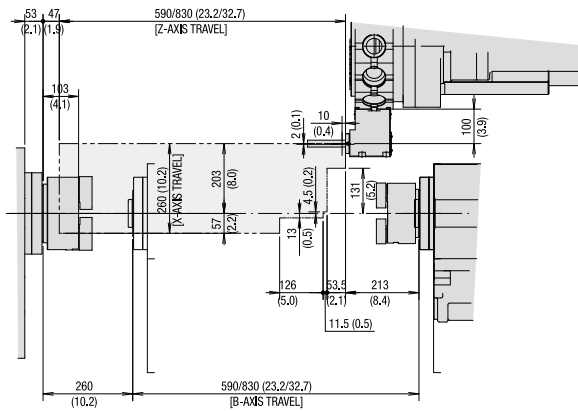 


# Working range


Unit : mm (inch)

PUMA 2600 / 2600L  
12 station.

 
OD CLAMPER

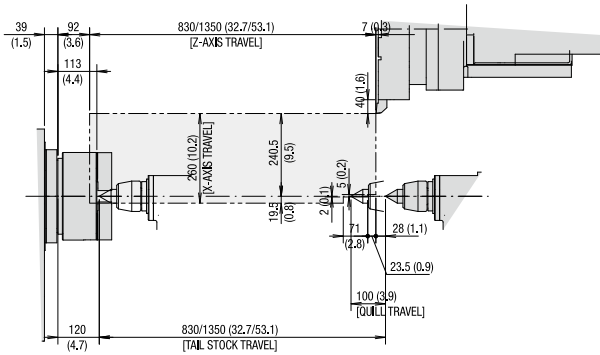


ID HOLDER

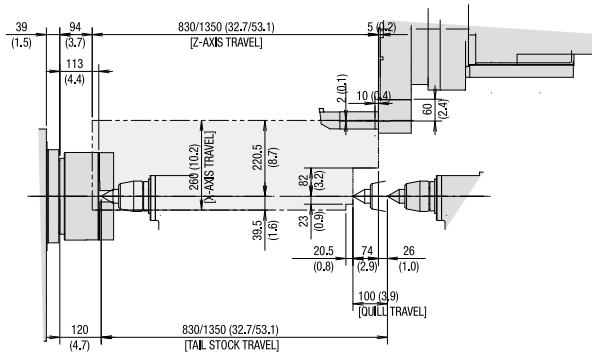 

FACE TOOL HOLDER

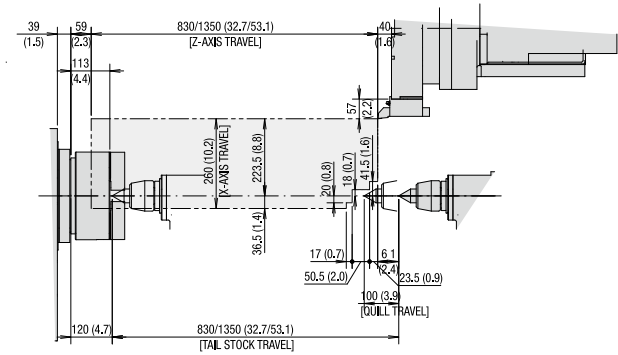 

EXTENDED OD HOLDER

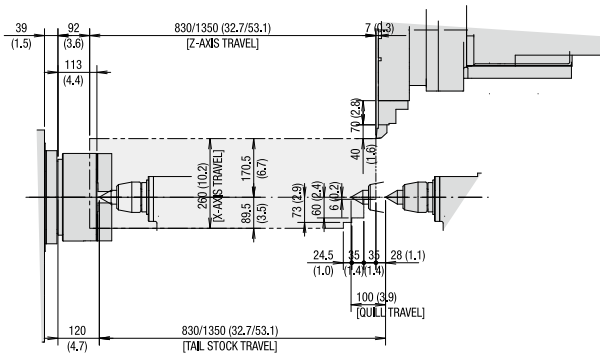 


# Working range


Unit : mm (inch)

PUMA 2600S / 2600LS  
12 station.

 
OD CLAMPER

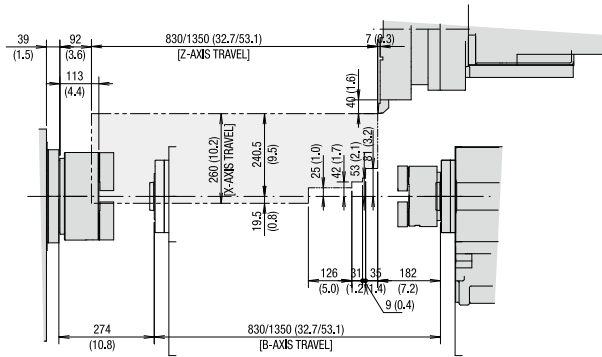


ID HOLDER

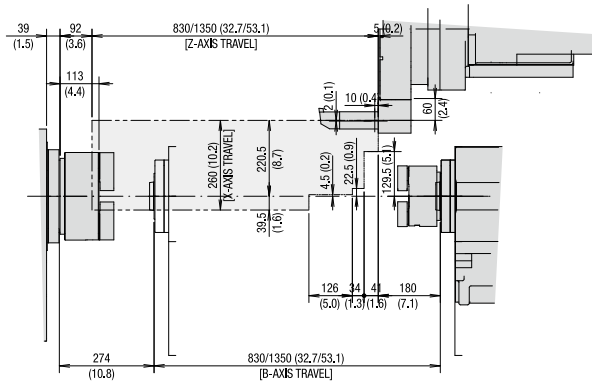 


FACE TOOL HOLDER

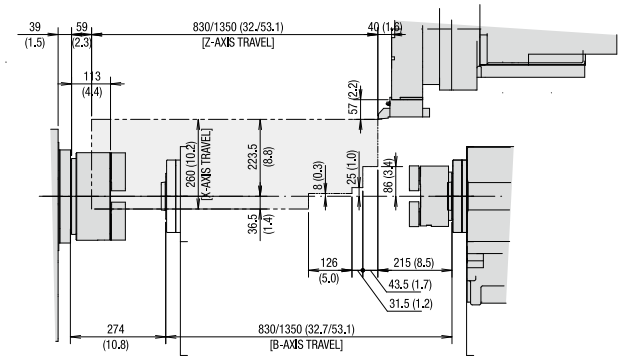 


DOUBLE OD HOLDER

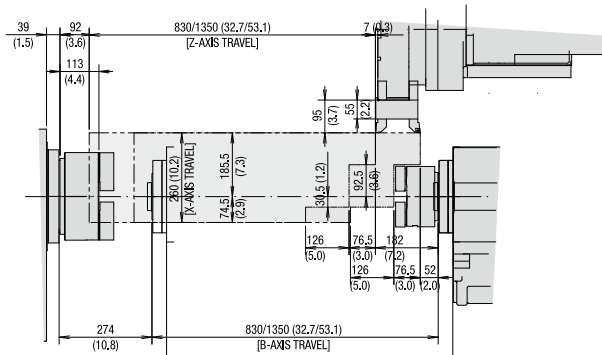 

DOUBLE ID HOLDER

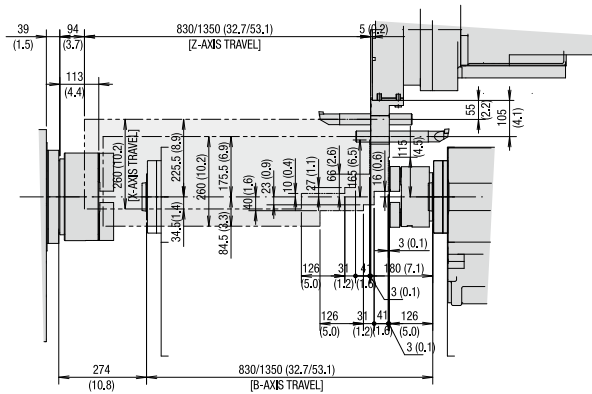 

CUT OFF HOLDER

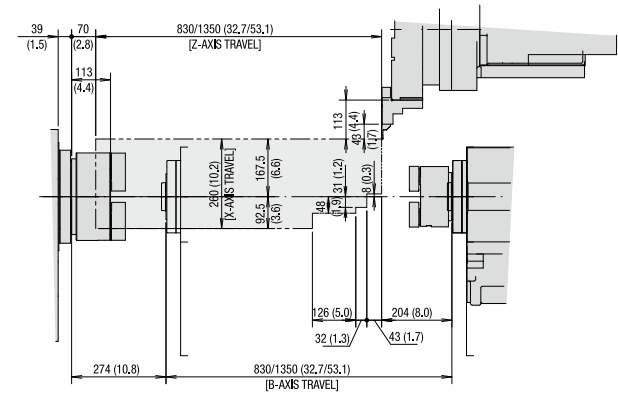 


# Working range


Unit : mm (inch)

PUMA 2600M / 2600Y / 2600LM / 2600LY  
12 station. - BMT65P

 
OD HOLDER

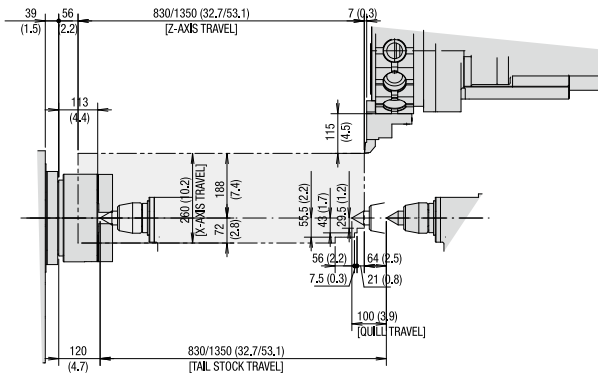


ID HOLDER

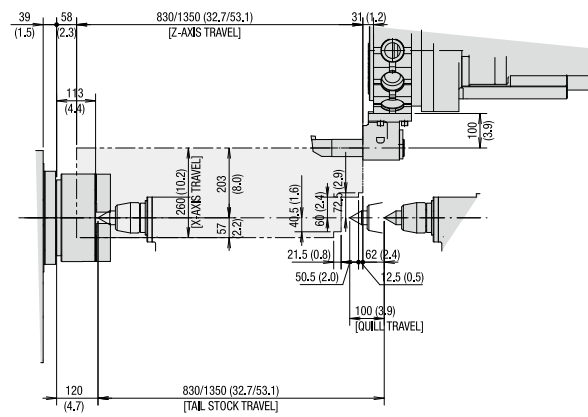 


FACE TOOL HOLDER

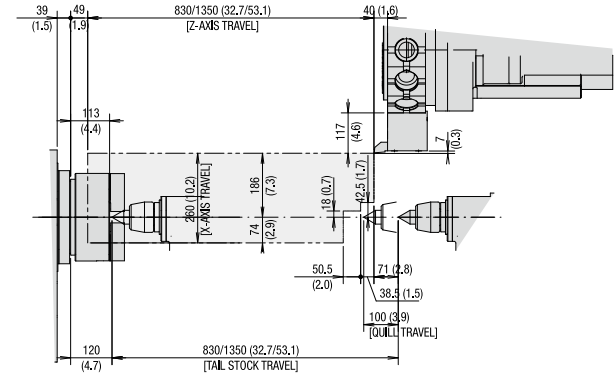 

STRAIGHT MILLING

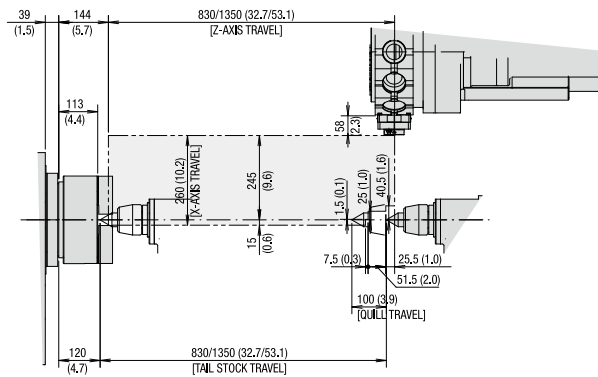 

ANGULAR MILLING (MAIN)

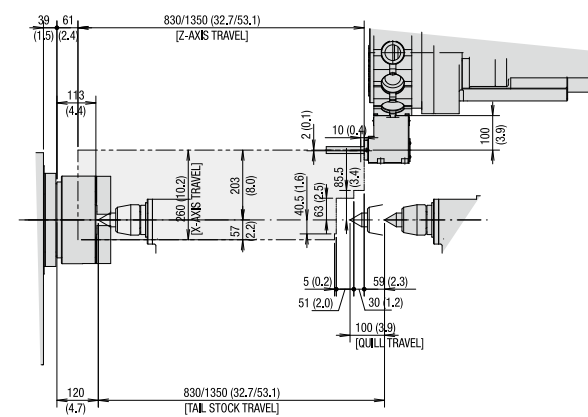 




# Working range


Unit : mm (inch)

PUMA 2600MS / 2600SY / 2600LMS / 2600LSY  
12 station. - BMT65P

 
OD HOLDER

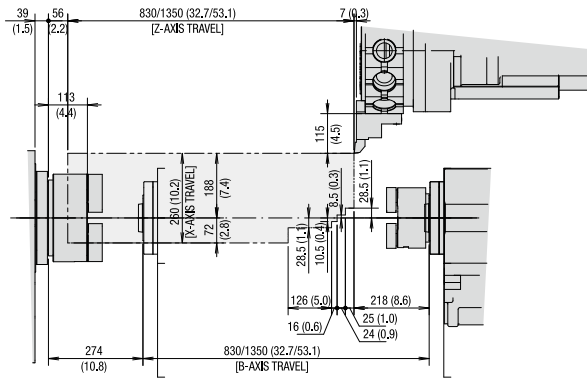


ID HOLDER

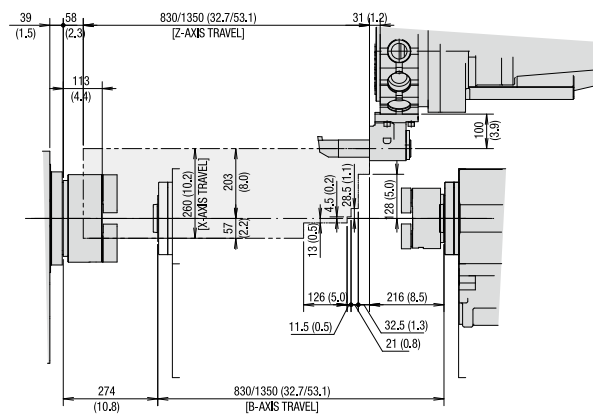 


FACE TOOL HOLDER

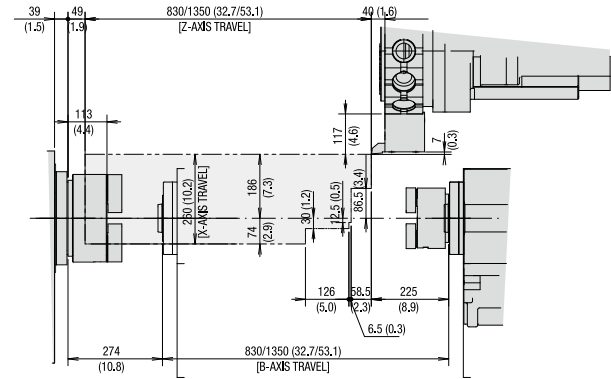 


DOUBLE OD HOLDER

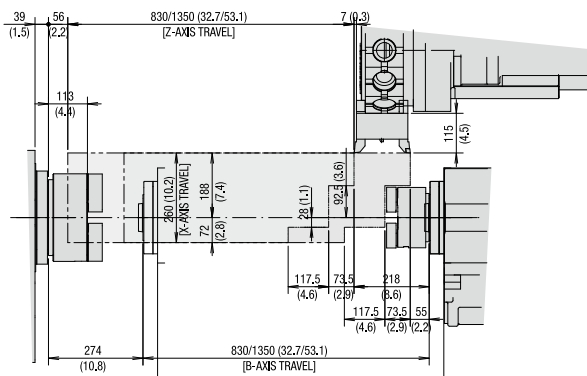 

DOUBLE ID HOLDER

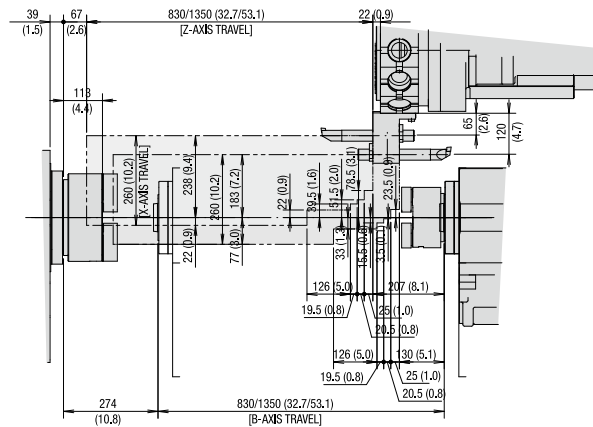 

CUT OFF HOLDER

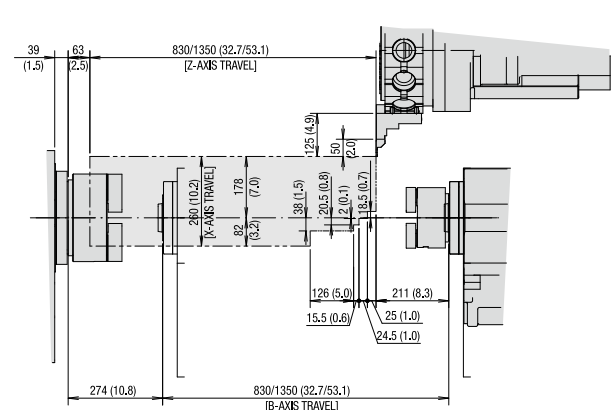 


# Working range


Unit : mm (inch)

PUMA 2600MS / 2600SY / 2600LMS / 2600LSY  
12 station. - BMT65P

 
STRAIGHT MILLING

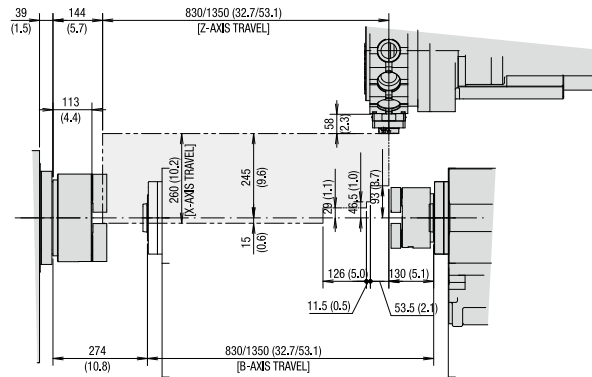

ANGULAR MILLING (SUB)

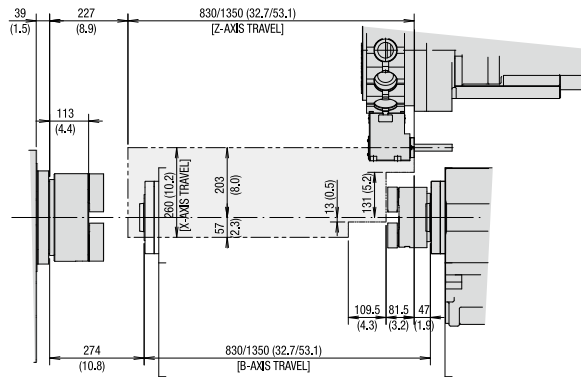 

ANGULAR MILLING (MAIN)

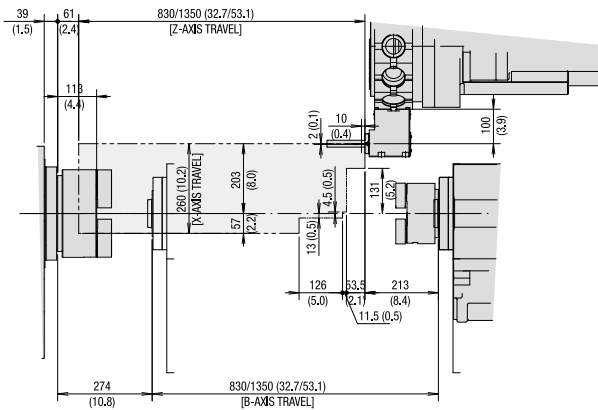 


# Working range


Unit : mm (inch)

## PUMA 3100 / 3100L 10 station.

 
OD CLAMPER

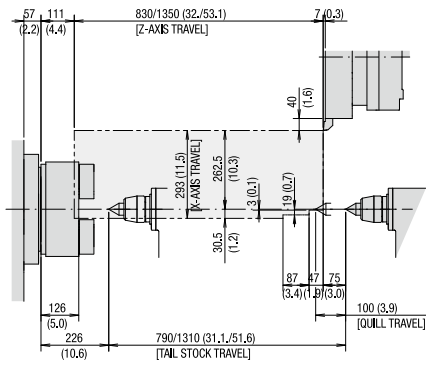


ID HOLDER

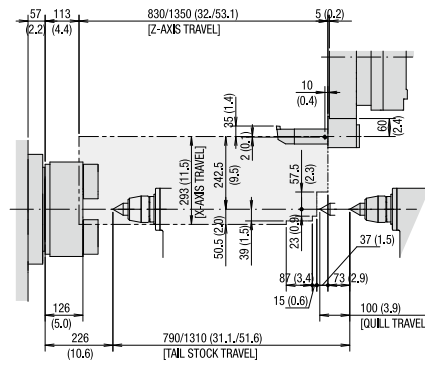 

FACE TOOL HOLDER

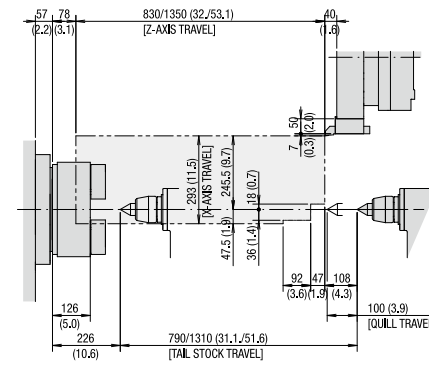 

EXTEND OD HOLDER

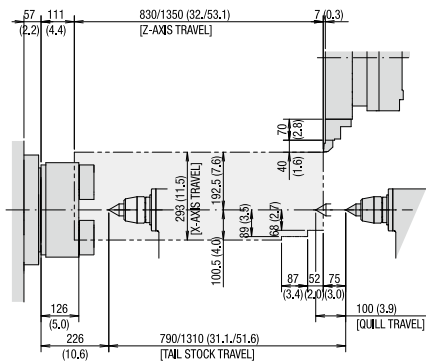 


# Working range


Unit : mm (inch)

PUMA 3100M / 3100Y / 3100LM / 3100LY  
12 station. - BMT65P

 
OD HOLDER

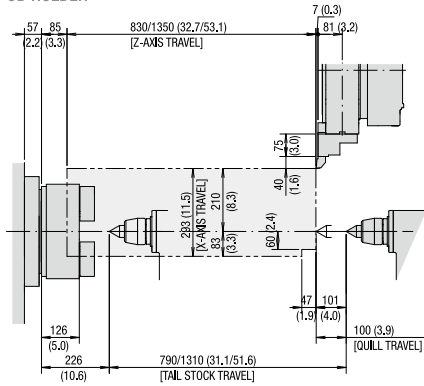


ID HOLDER

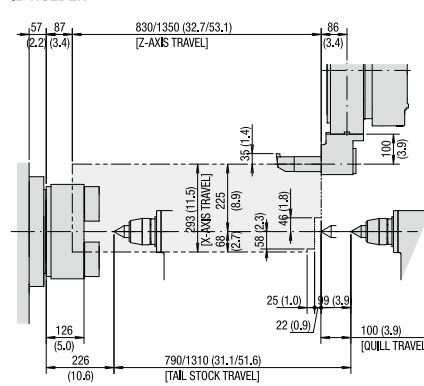 


FACE TOOL HOLDER

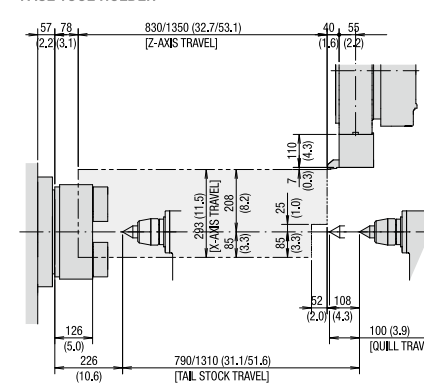 


EXTEND OD HOLDER

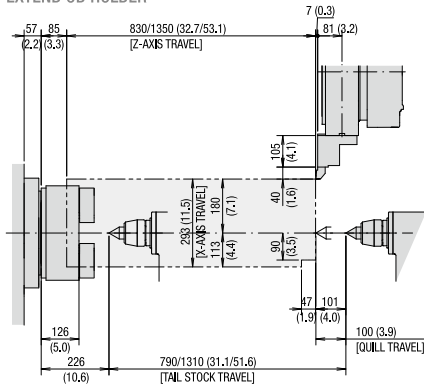 

STRAIGHT MILLING

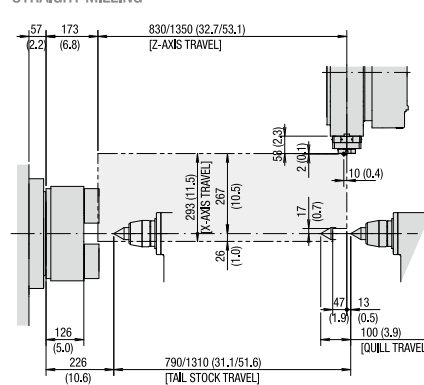 

ANGULAR MILLING

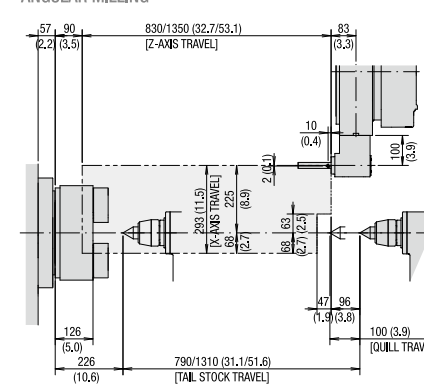 


# Working range


Unit : mm (inch)

PUMA 3100XL / 3100UL  
10 station.

 
OD CLAMPER

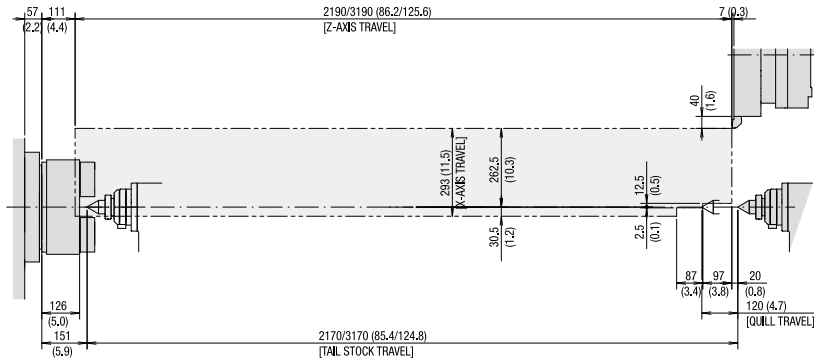


ID HOLDER

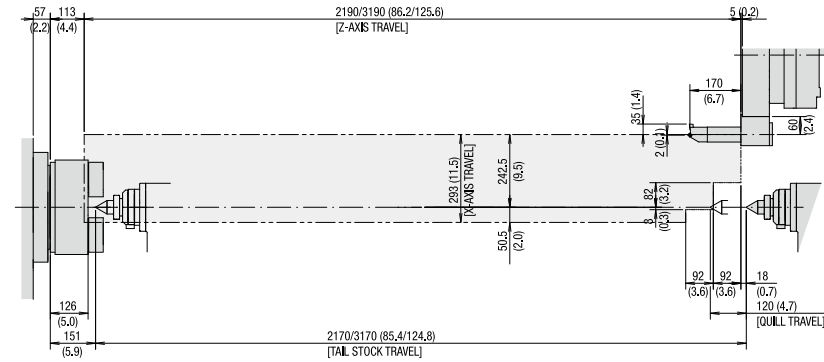 

FACE TOOL HOLDER

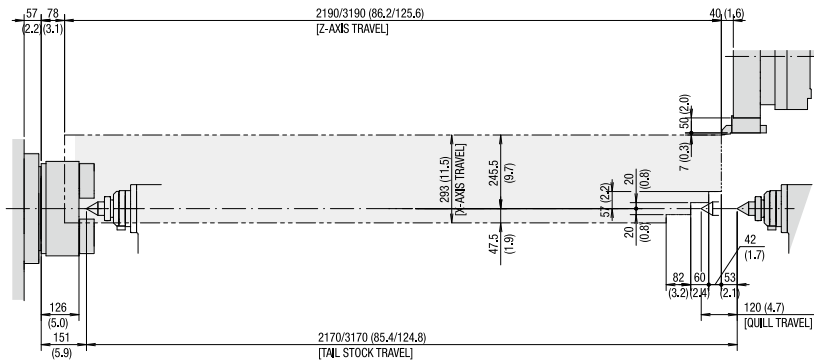 

EXTEND OD HOLDER

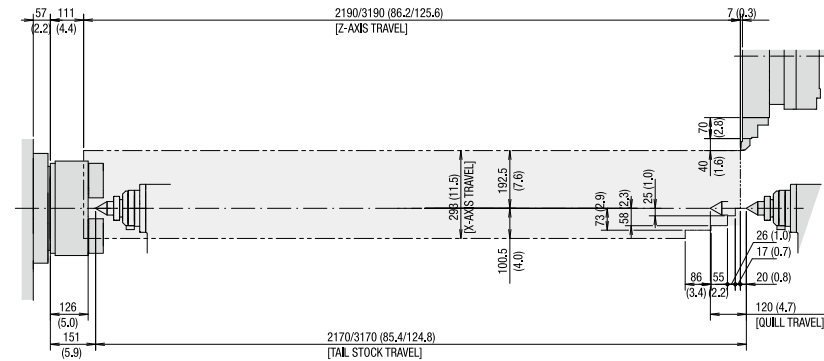 


# Working range


Unit : mm (inch)

PUMA 3100XLM / 3100XLY / 3100ULM / 3100ULY  
12 station. - BMT65P

 
OD HOLDER

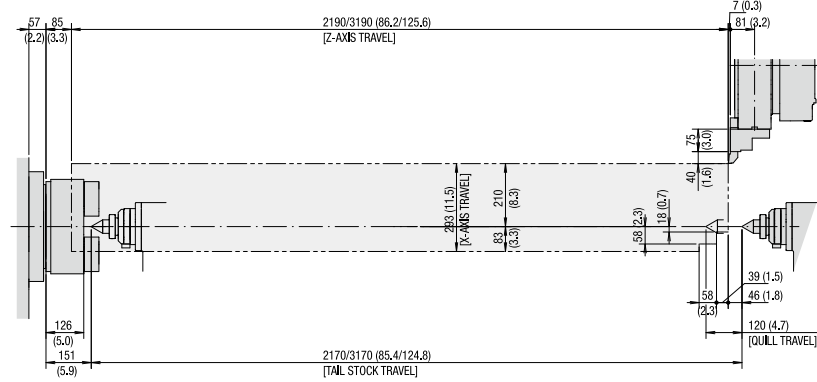

ID HOLDER

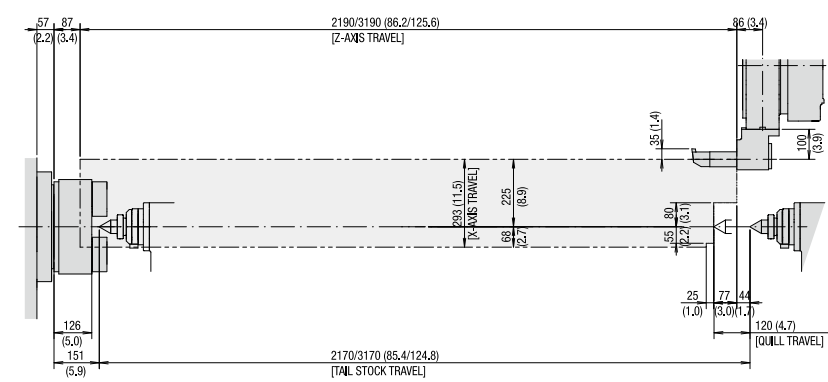 

FACE TOOL HOLDER

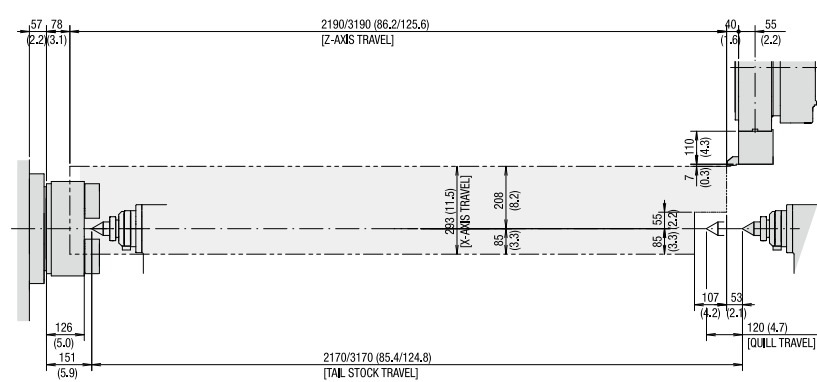 


# Working range


Unit : mm (inch)

PUMA 3100XLM / 3100XLY / 3100ULM / 3100ULY  
12 station. - BMT65P

 
EXTEND OD HOLDER

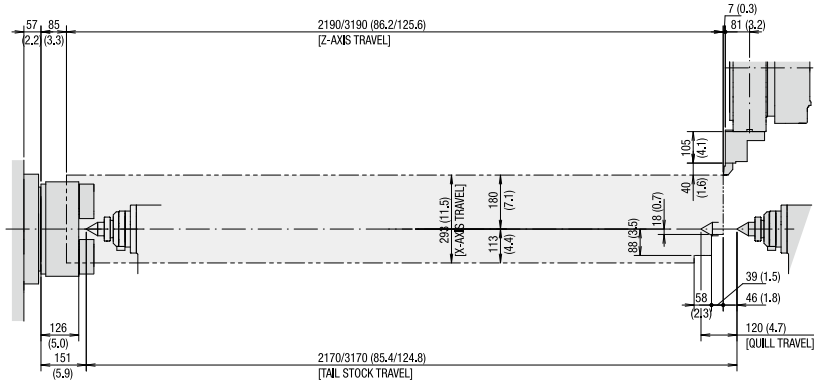

STRAIGHT MILLING

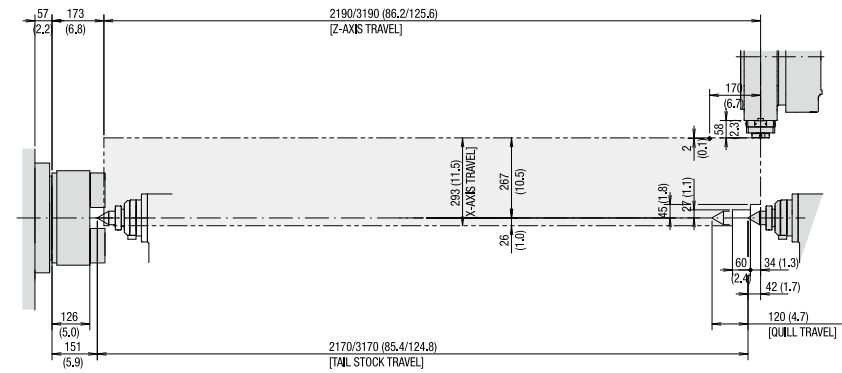 


ANGULAR MILLING

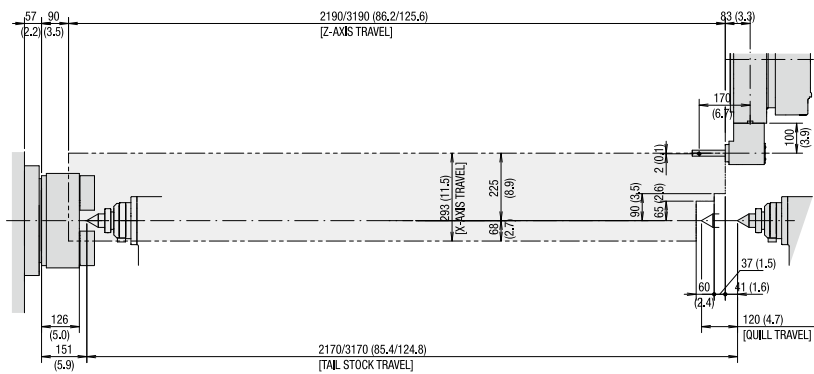 

# Tooling system

Unit : mm (inch)

 PUMA 2100 / 2100L / 2600 / 2600L Std.

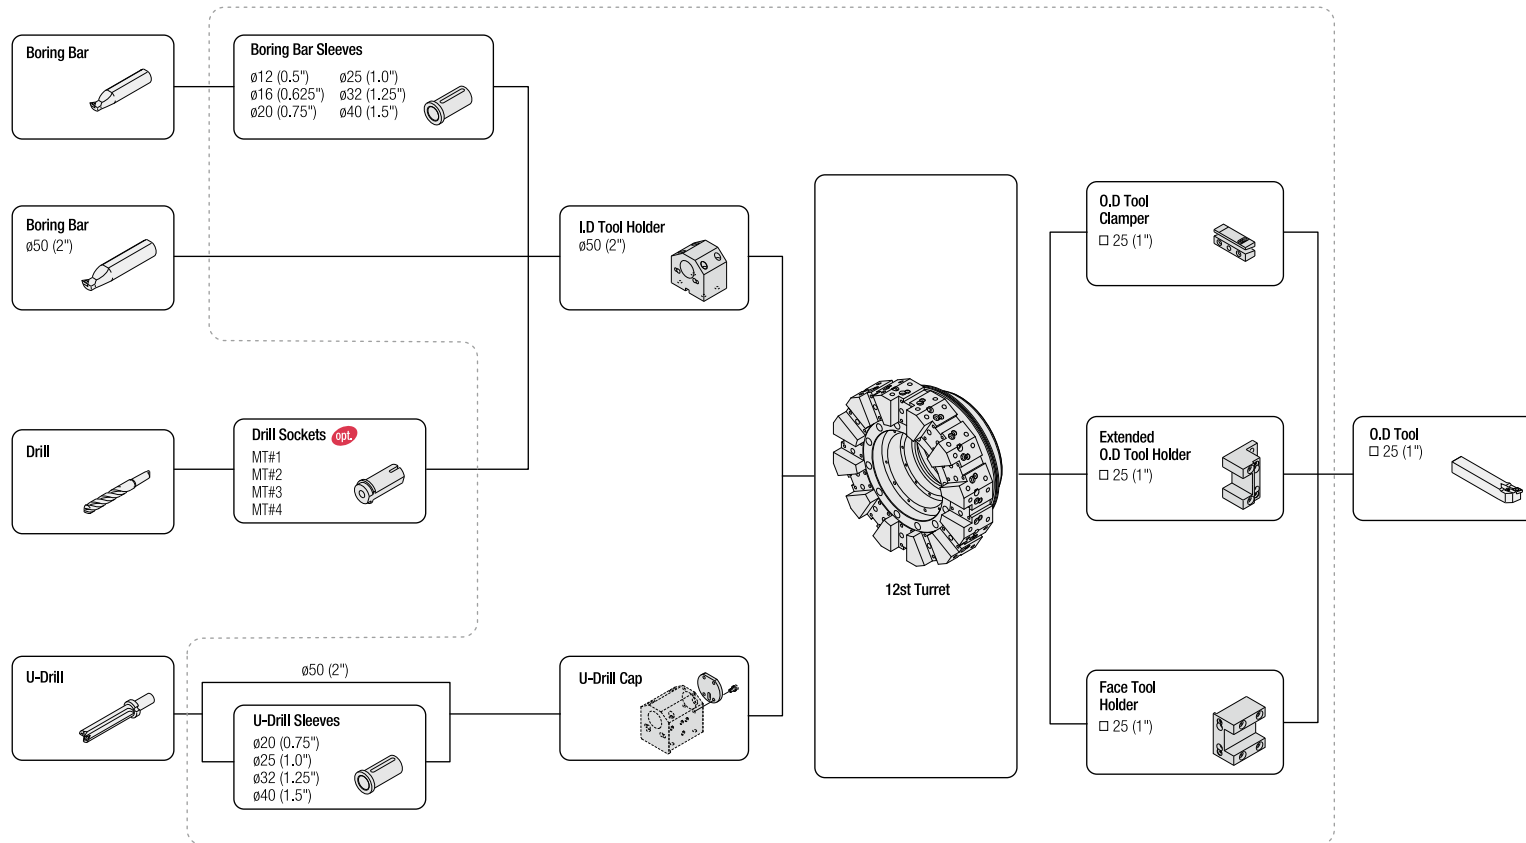


• Specifications are subject to change without prior notice.



# Tooling system

 Unit : mm (inch)

PUMA 2100S / 2100LS / 2600S / 2600LS **Std.**

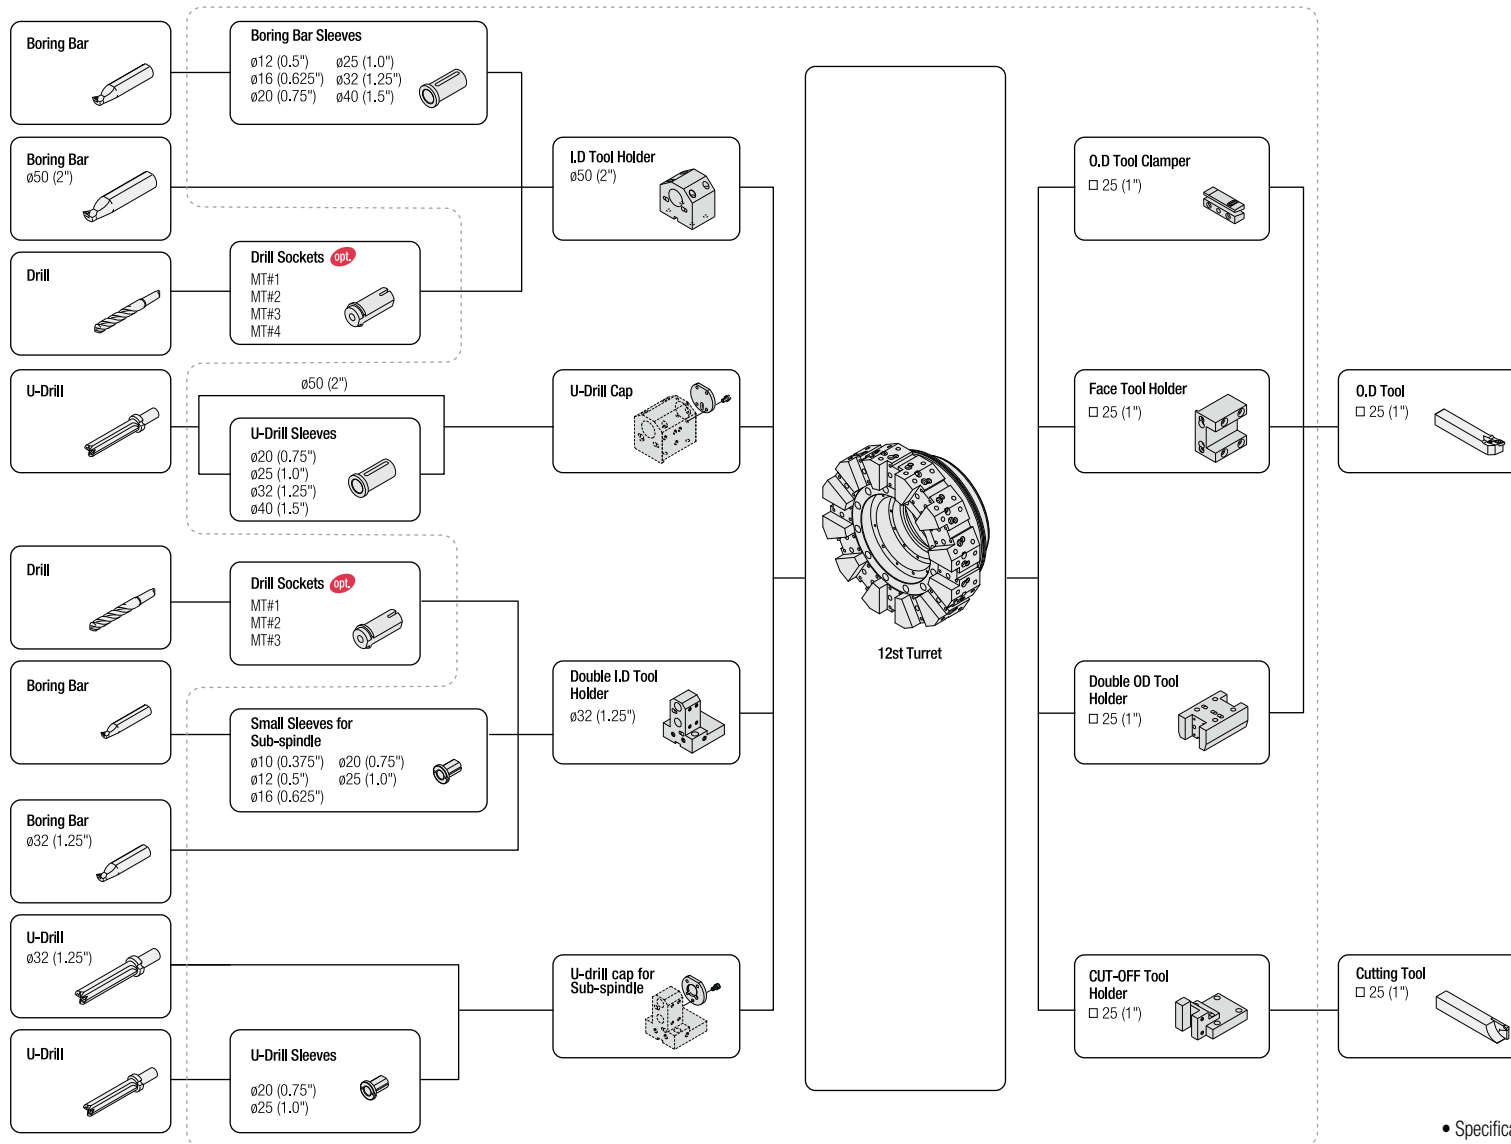


• Specifications are subject to change without prior notice.

# Tooling system

 Unit : mm (inch)

PUMA 2100M / 2100LM / 2100Y / 2100LY Std.

12 station. - BMT55P

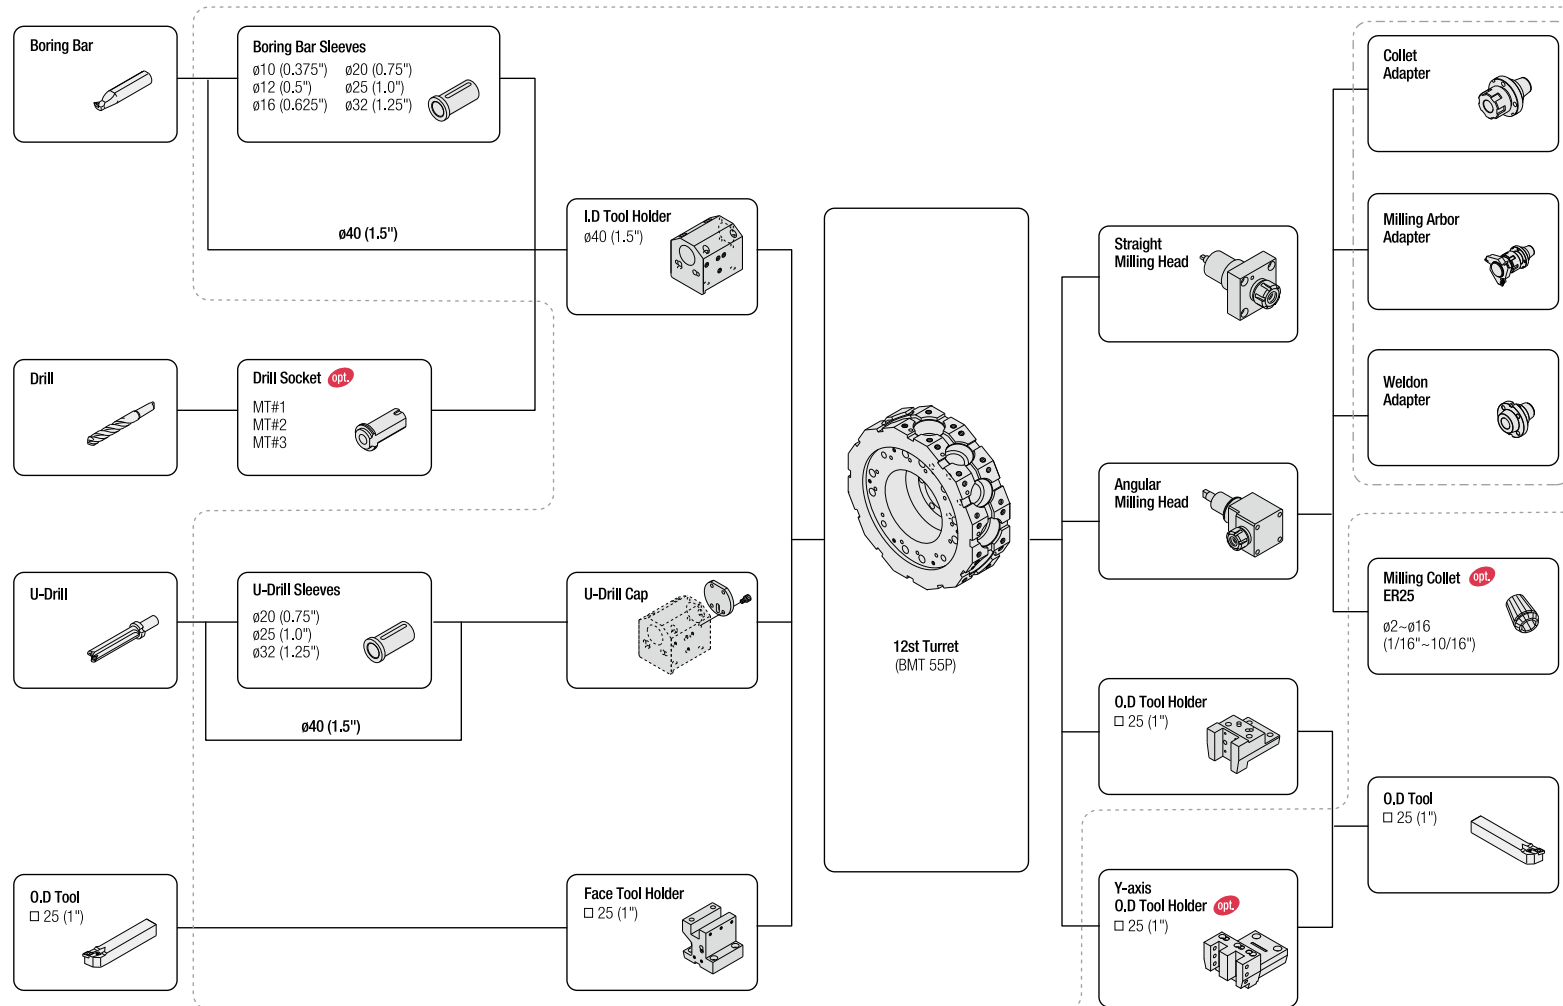


• Specifications are subject to change without prior notice.

# Tooling system

 Unit : mm (inch)

PUMA 2100M / 2100LM / 2100Y / 2100LY **opt.**

24 station. - BMT55P

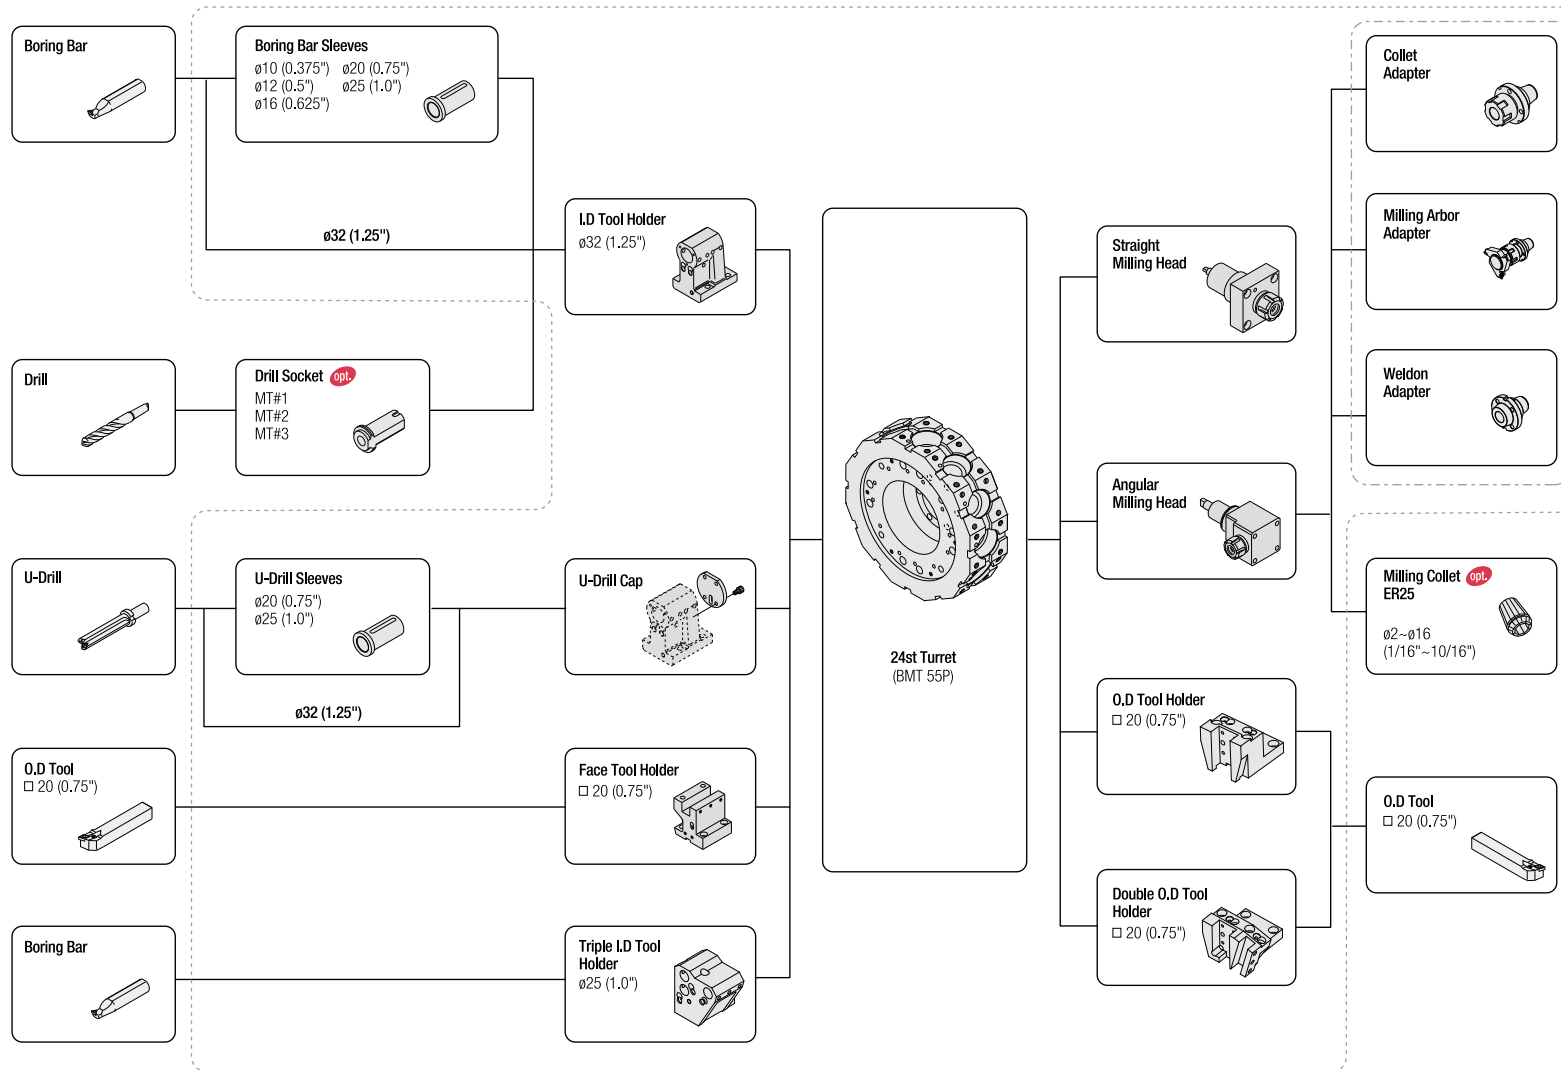


# Tooling system

Unit : mm (inch)

PUMA 2100MS / 2100LMS / 2100SY / 2100LSY **Std.**

 12 station. - BMT55P

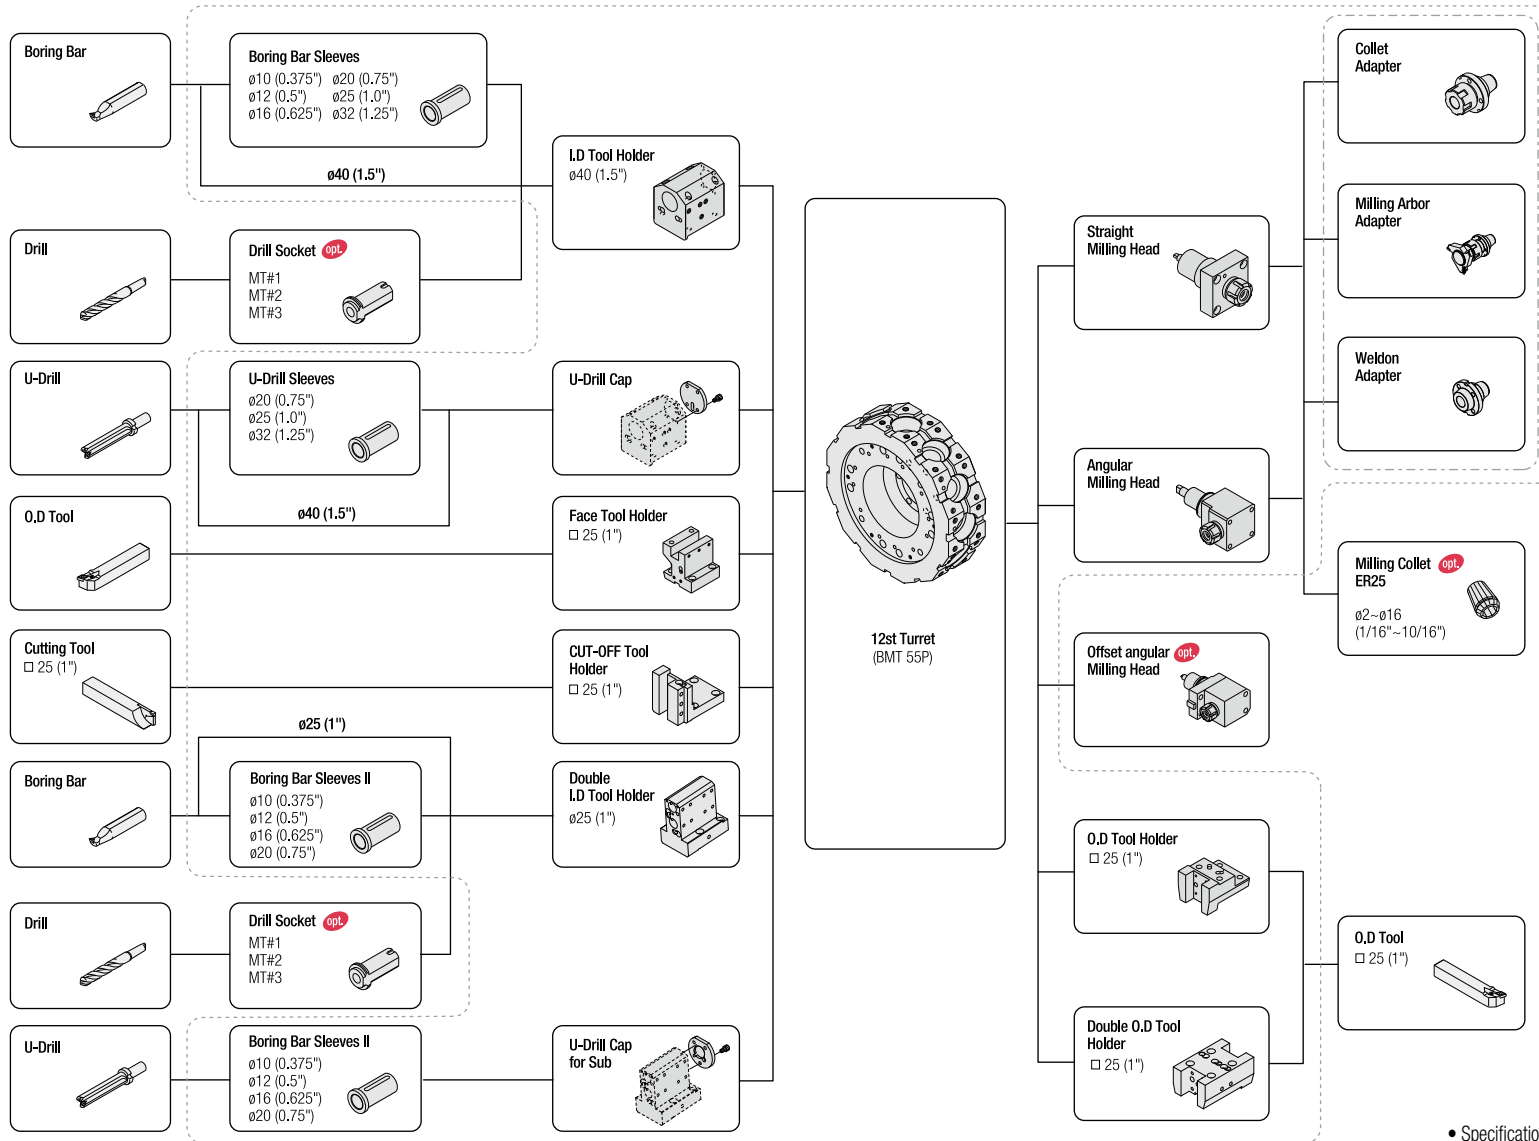


• Specifications are subject to change without prior notice.

# Tooling system

 Unit : mm (inch)

PUMA 2100MS / 2100LMS / 2100SY / 2100LSY **opt.**  
24 station. - BMT55P

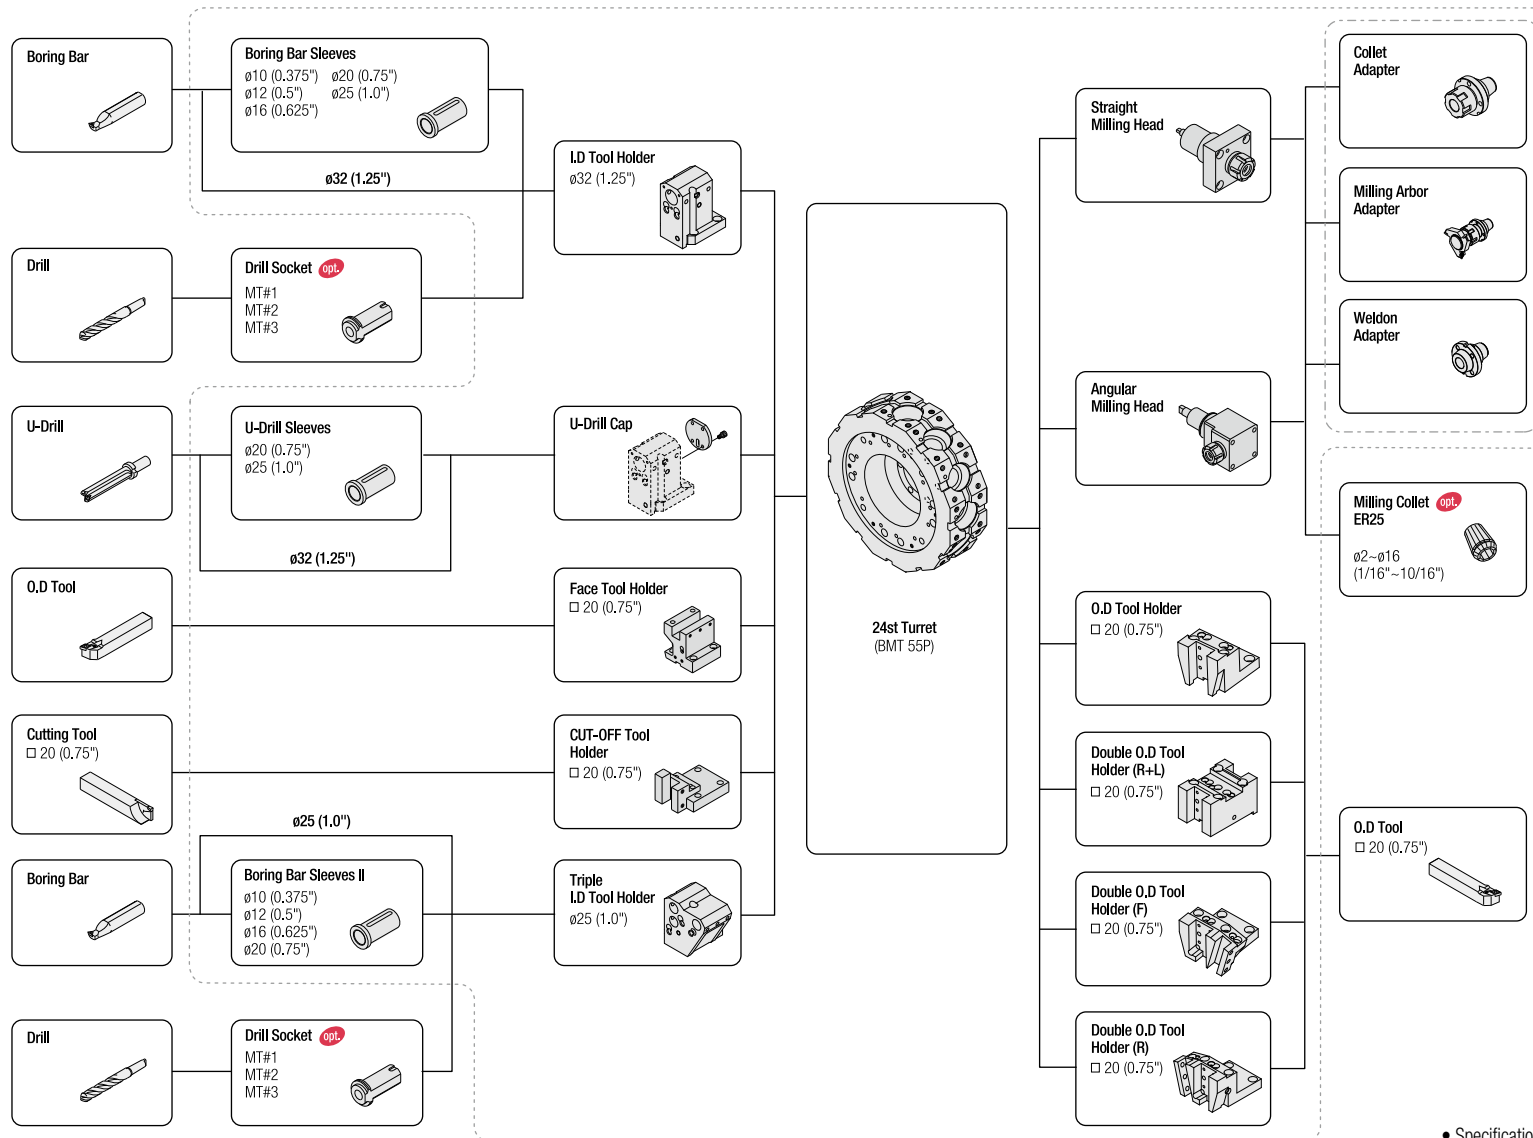


• Specifications are subject to change without prior notice.

# Tooling system

 Unit : mm (inch)

PUMA 2600M / 2600LM / 2600Y / 2600LY **Std.**

12 station. - BMT65P

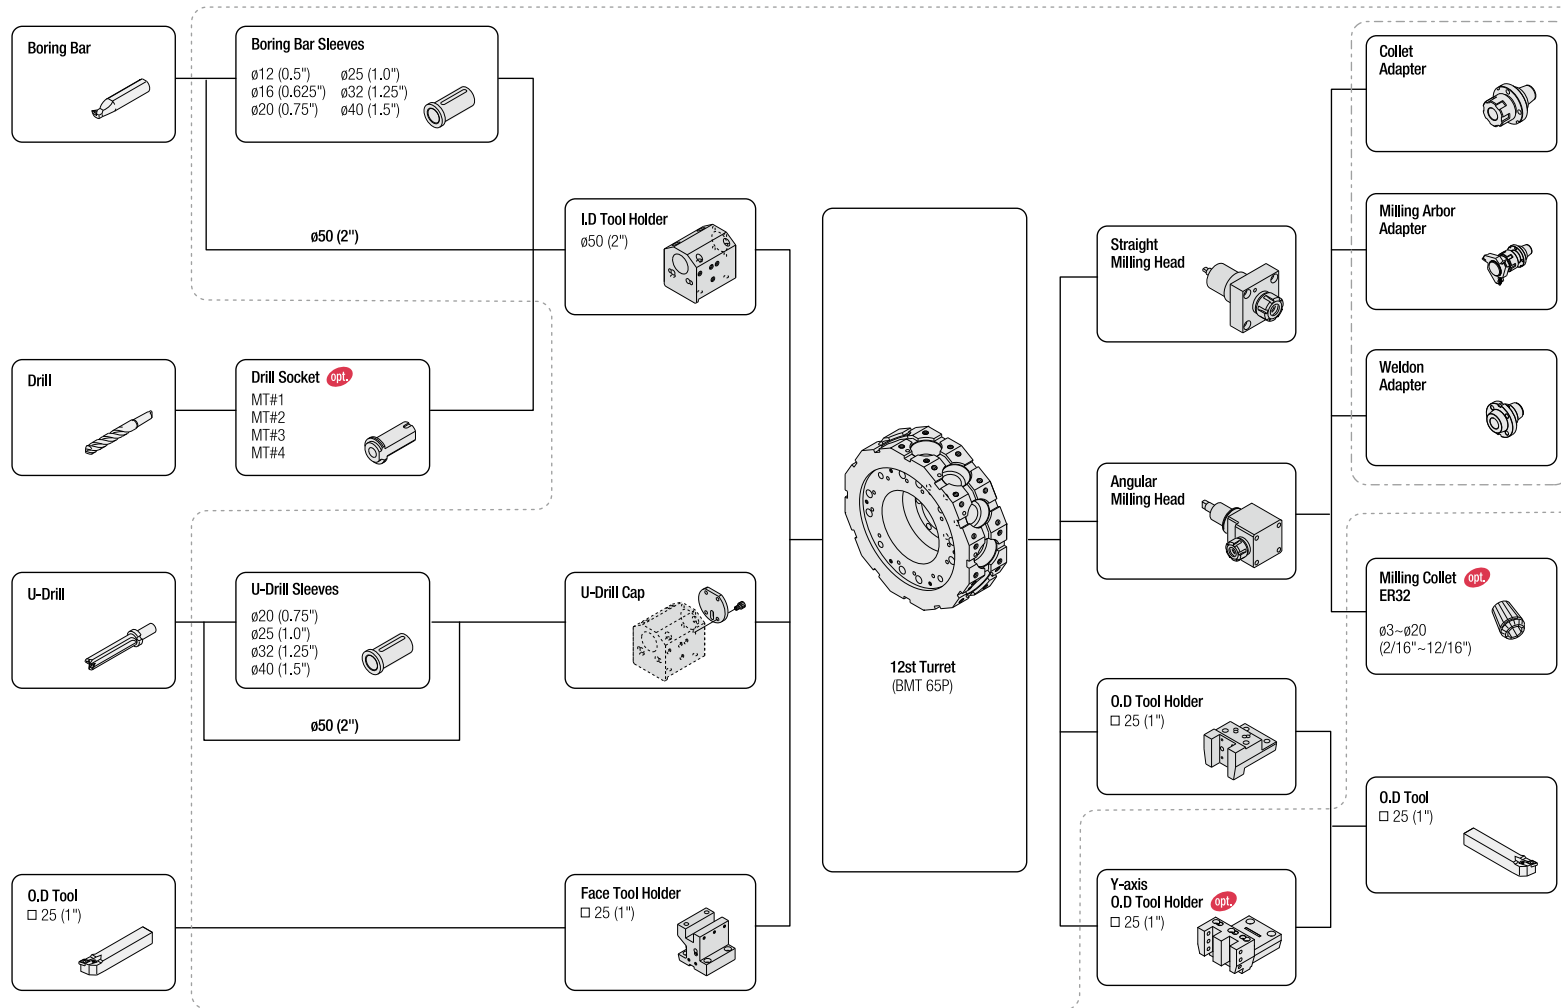


• Specifications are subject to change without prior notice.

# Tooling system

 Unit : mm (inch)

PUMA 2600M / 2600LM / 2600Y / 2600LY **opt.**

24 station. - BMT65P

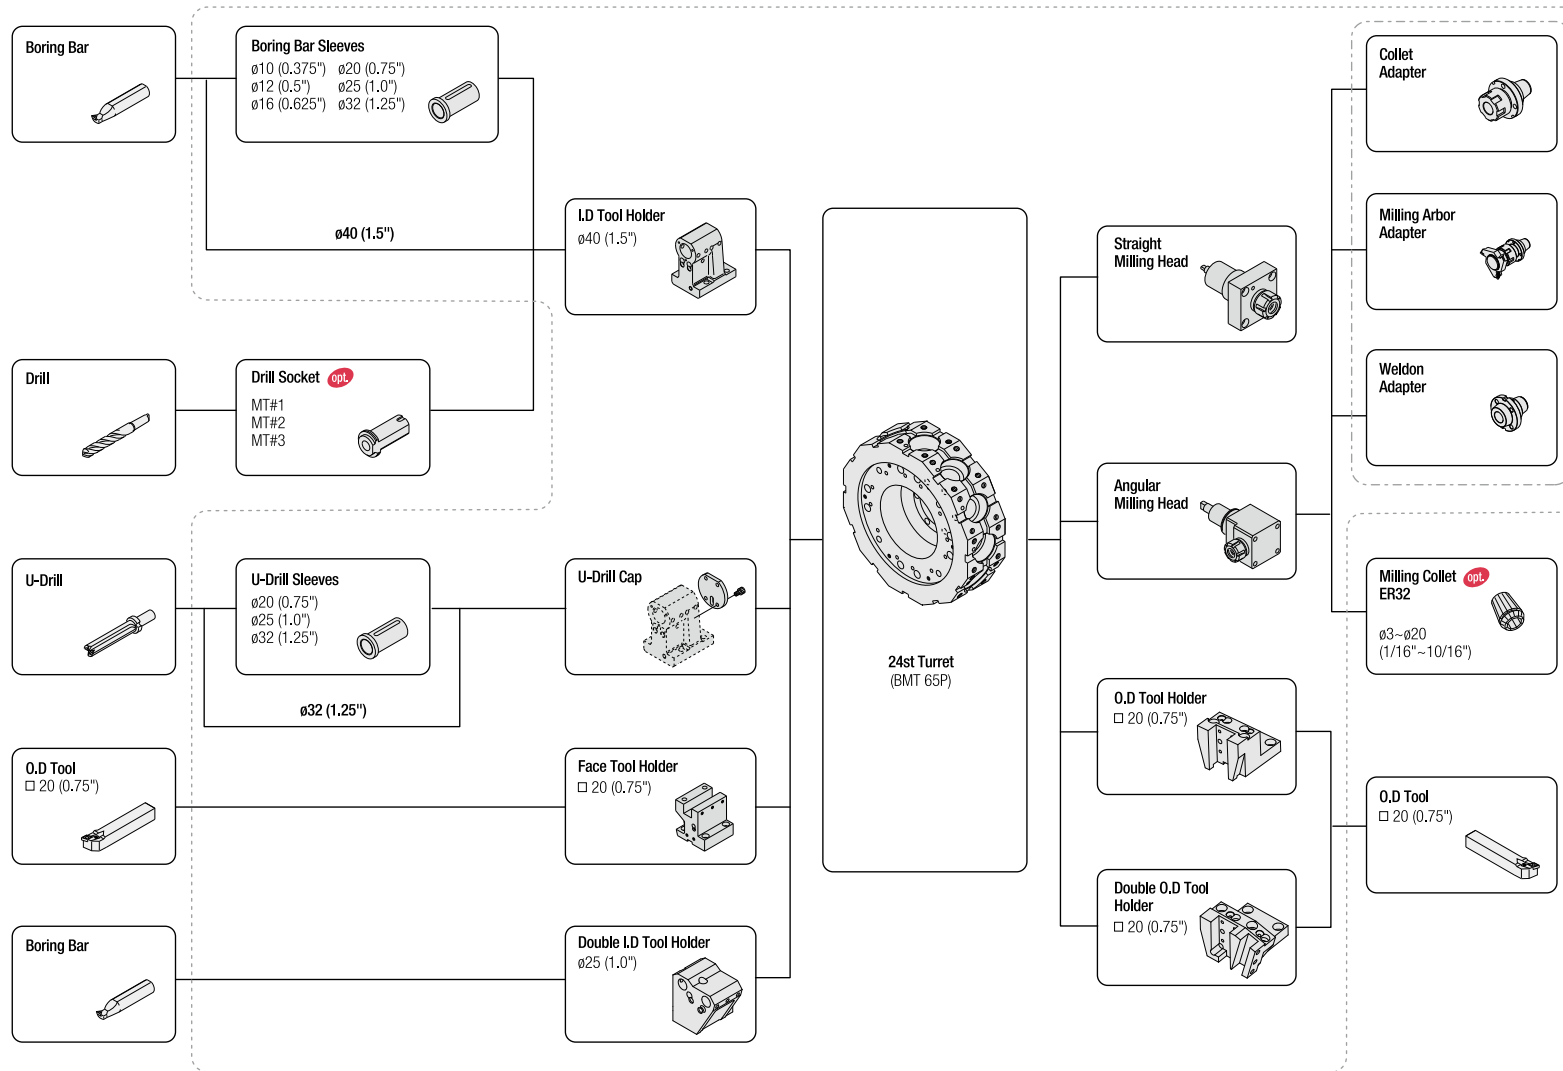


• Specifications are subject to change without prior notice.

# Tooling system

 Unit : mm (inch)

PUMA 2600MS / 2600LMS / 2600SY / 2600LSY **Std.**

12 station. - BMT65P

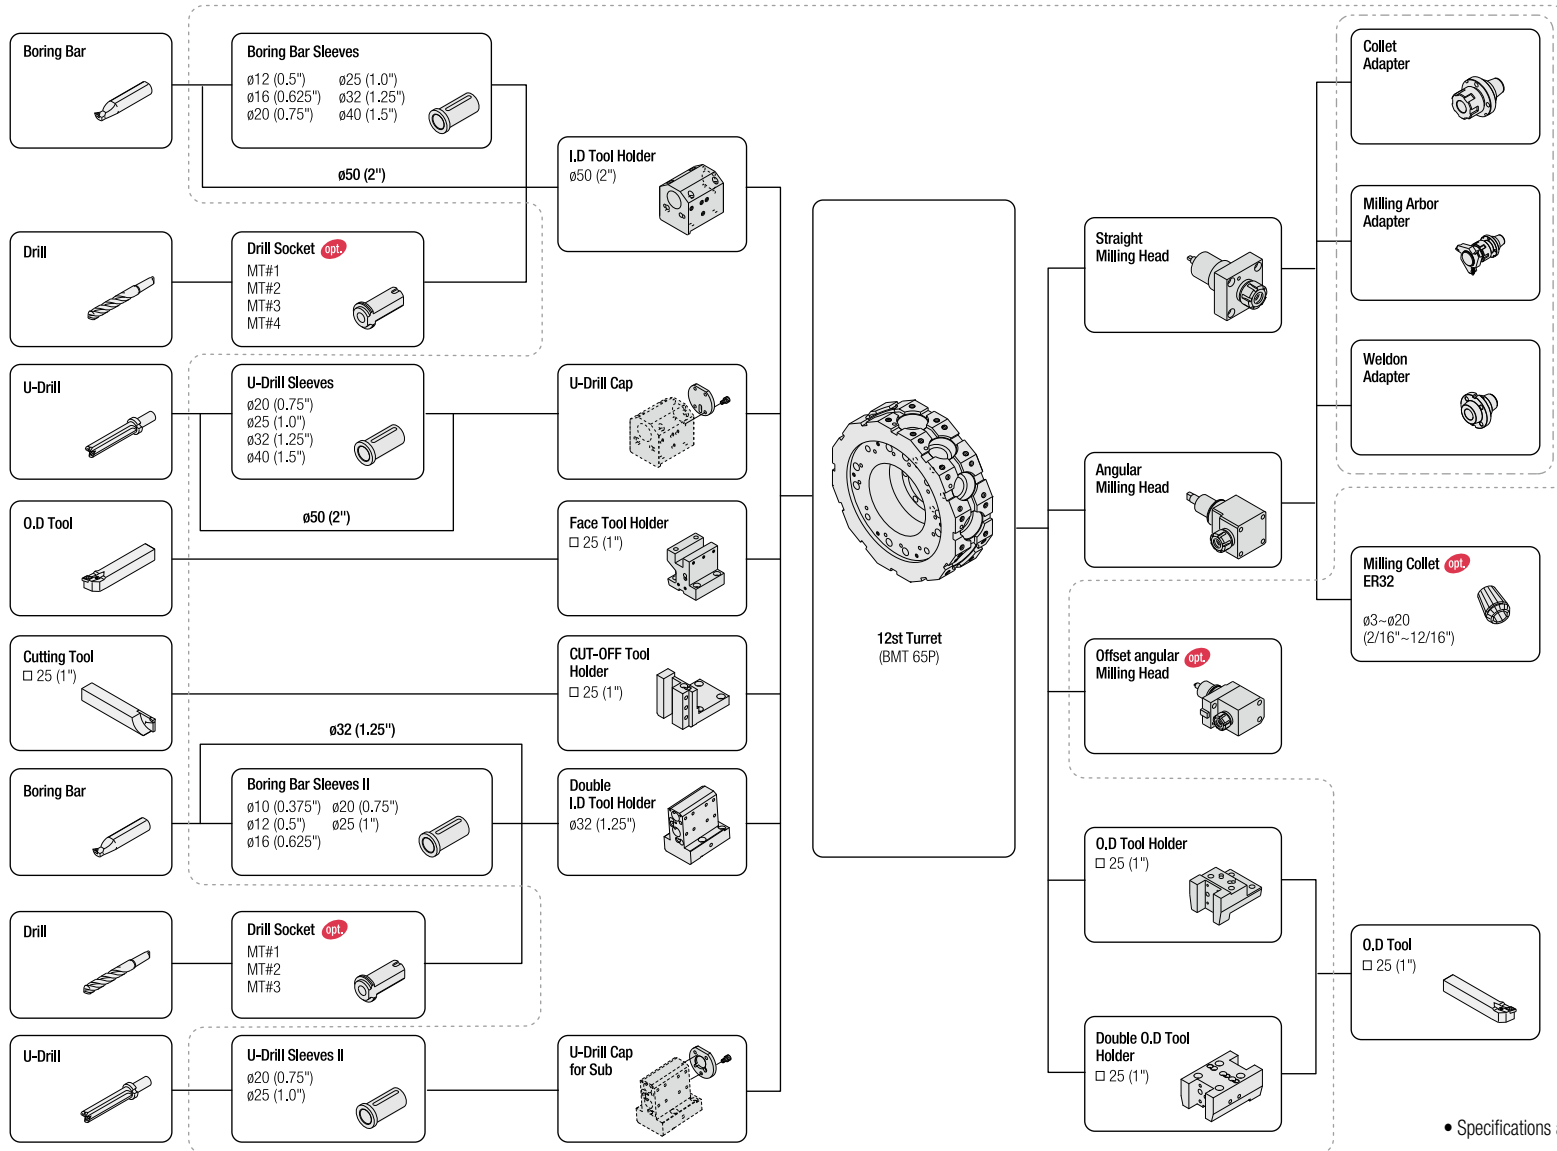


• Specifications are subject to change without prior notice.



# Tooling system

 Unit : mm (inch)

PUMA 2600MS / 2600LMS / 2600SY / 2600LSY **opt.**  
24 station. - BMT65P

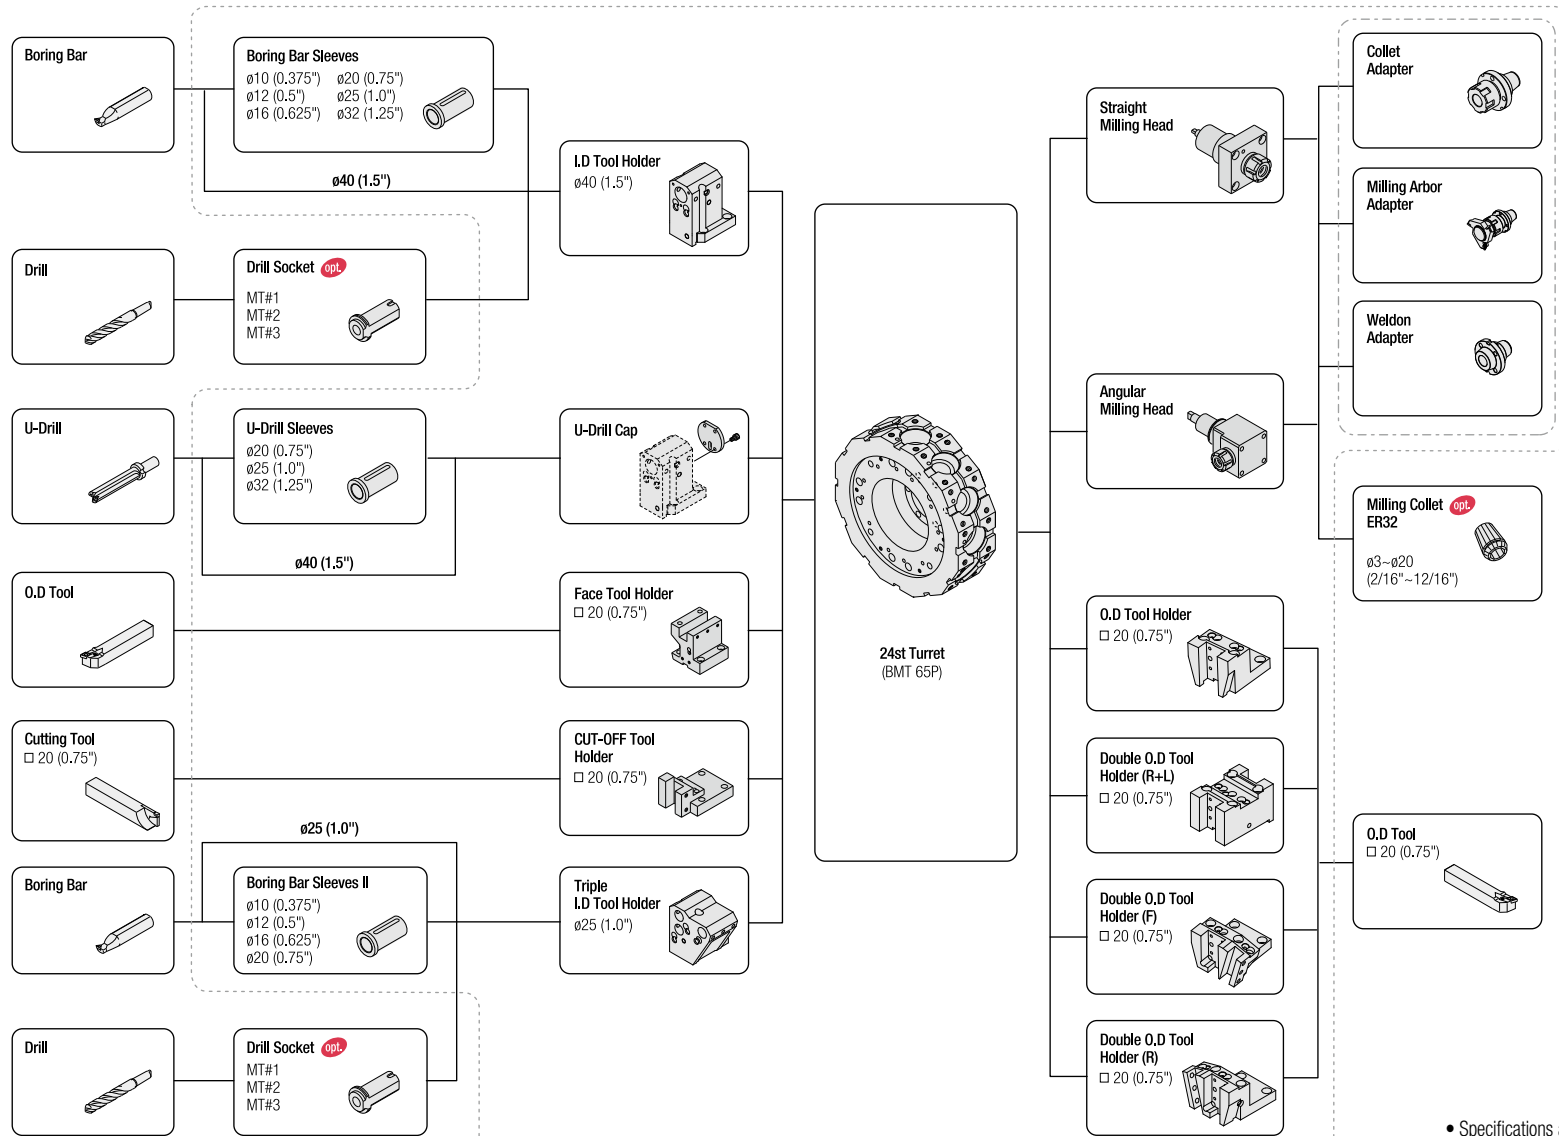


• Specifications are subject to change without prior notice.

# Tooling system

 Unit : mm (inch)

PUMA 3100 / 3100L / 3100XL / 3100UL **Std.**

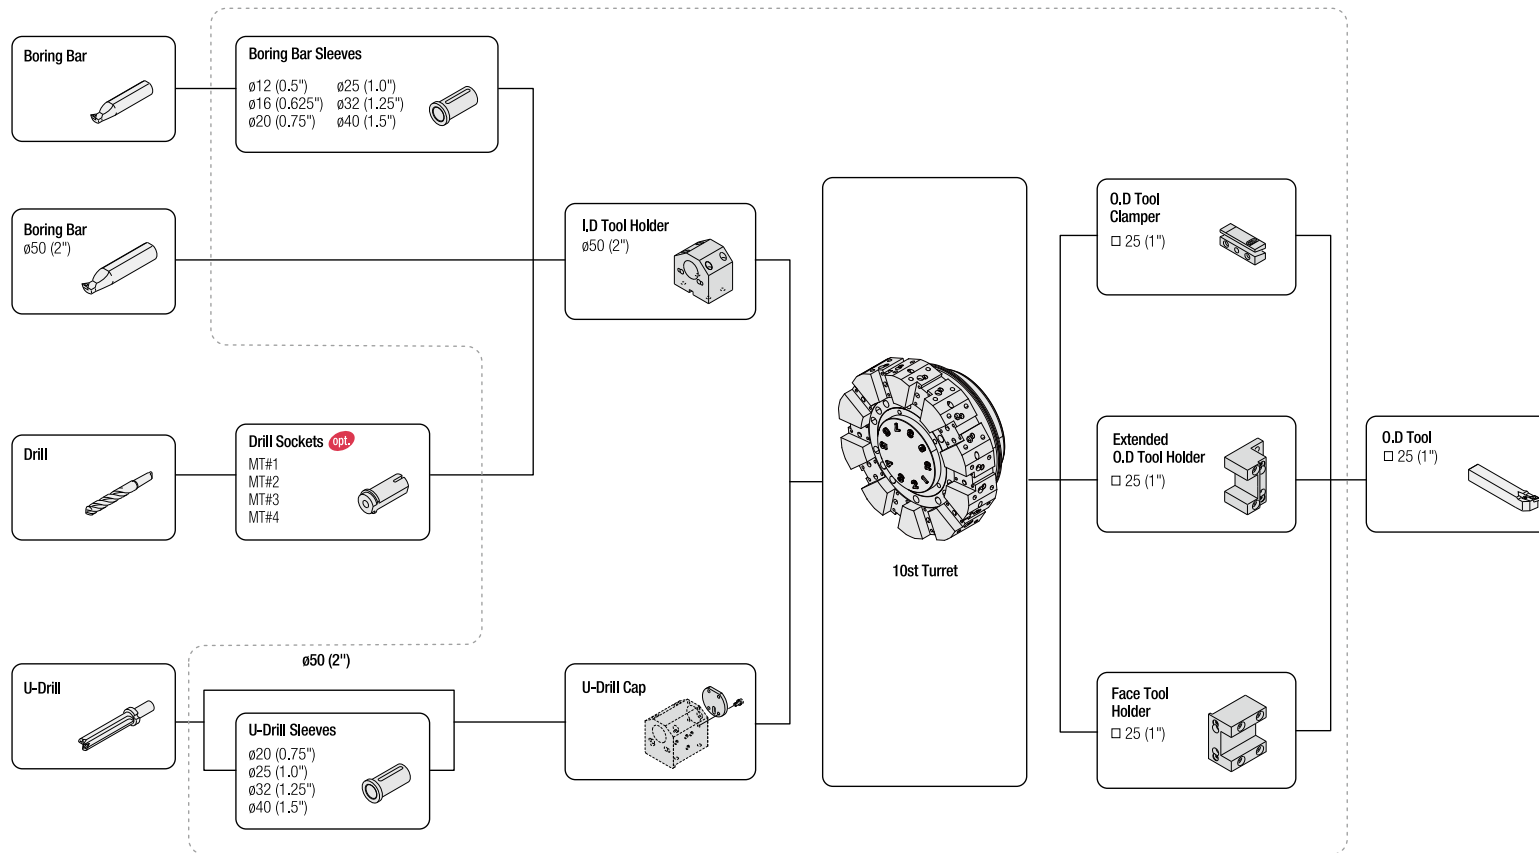


• Specifications are subject to change without prior notice.

# Tooling system

 Unit : mm (inch)

PUMA 3100M / 3100LM / 3100XLM / 3100ULM / 3100Y / 3100LY / 3100 XLY / 3100ULY **Std.**  
 12 station. - BMT65P

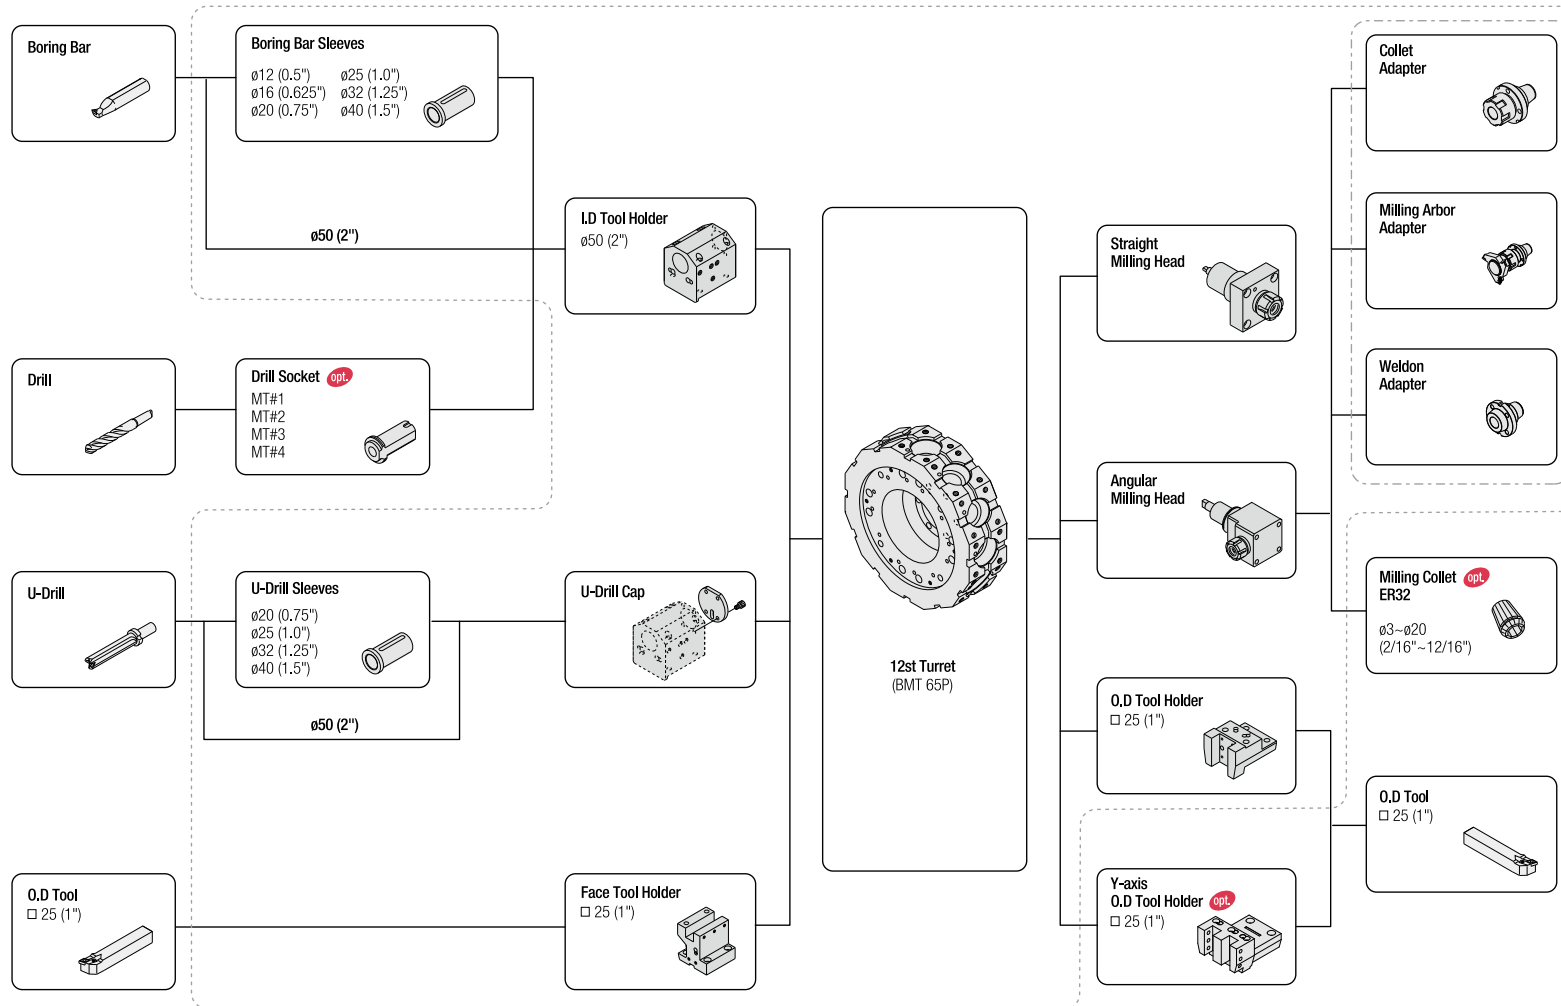



• Specifications are subject to change without prior notice.

# Tool Interference Diagram

  Unit : mm (inch)

PUMA 2100 / 2100L / 2600 / 2600L  
12 station.

PUMA 2100S / 2100LS / 2600S 2600LS  
12 station.

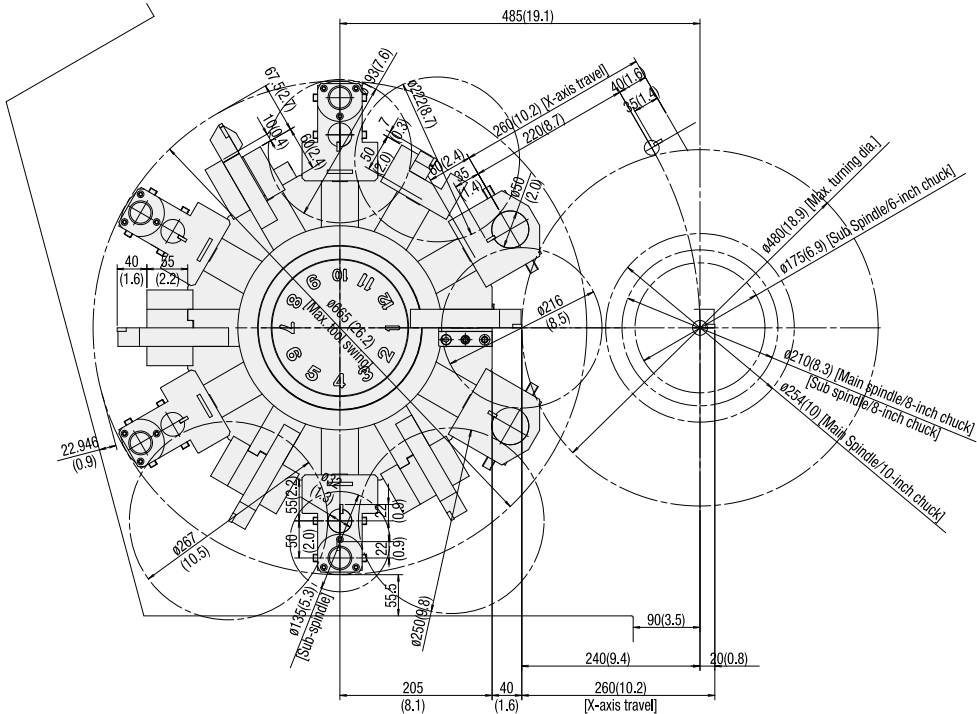
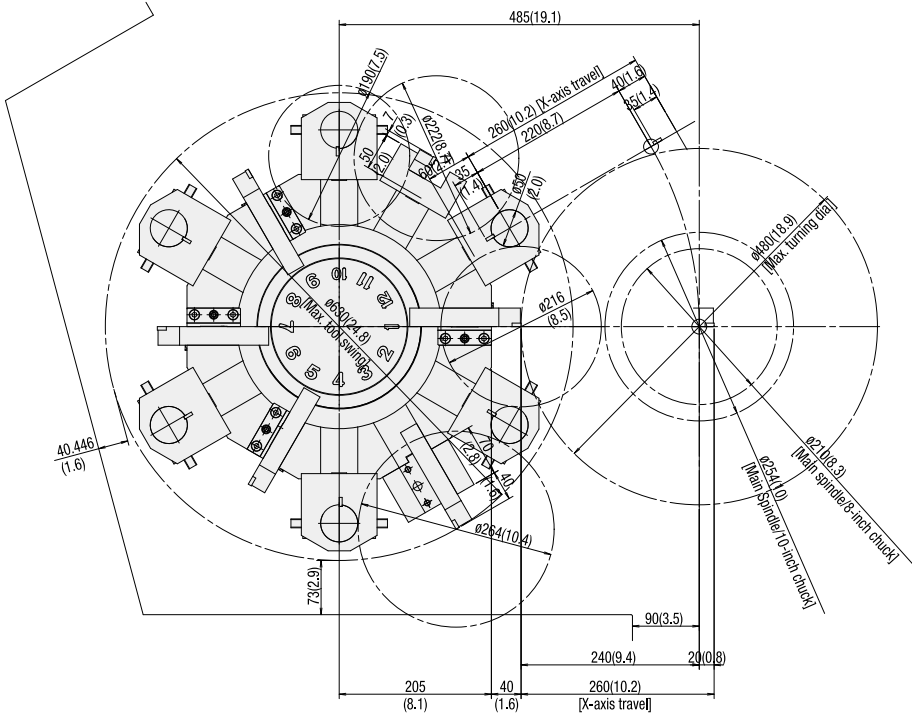


# Tool Interference Diagram

Unit : mm (inch)

PUMA 2100M / 2100LM  
12 station. - BMT55P

  PUMA 2100MS / 2100LMS  
12 station. - BMT55P

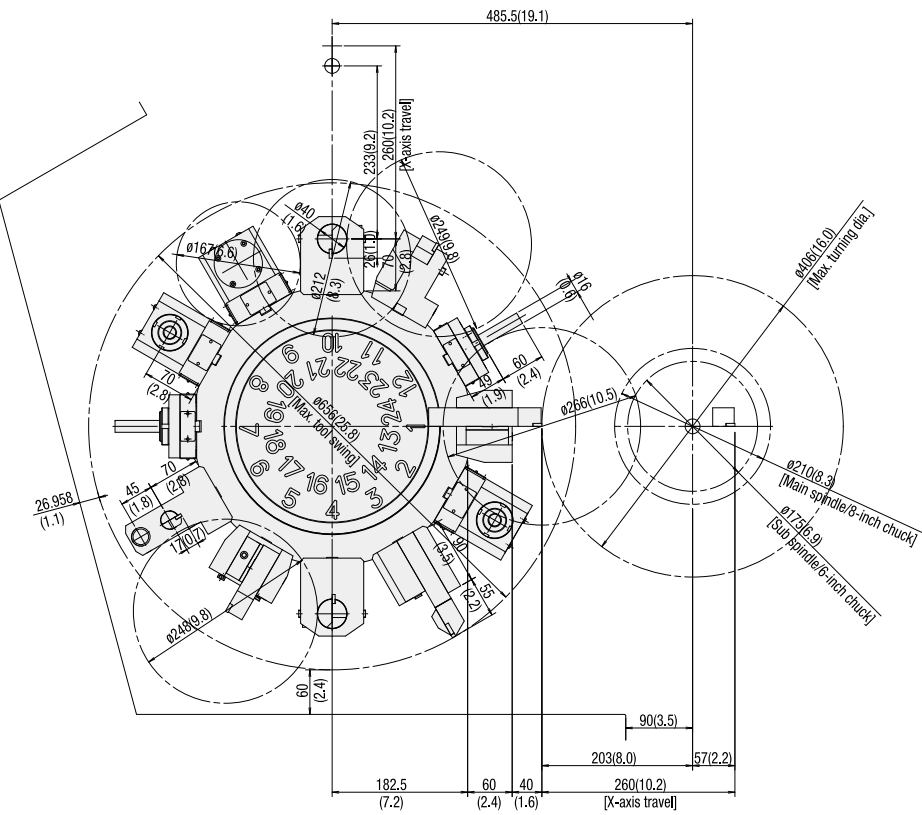
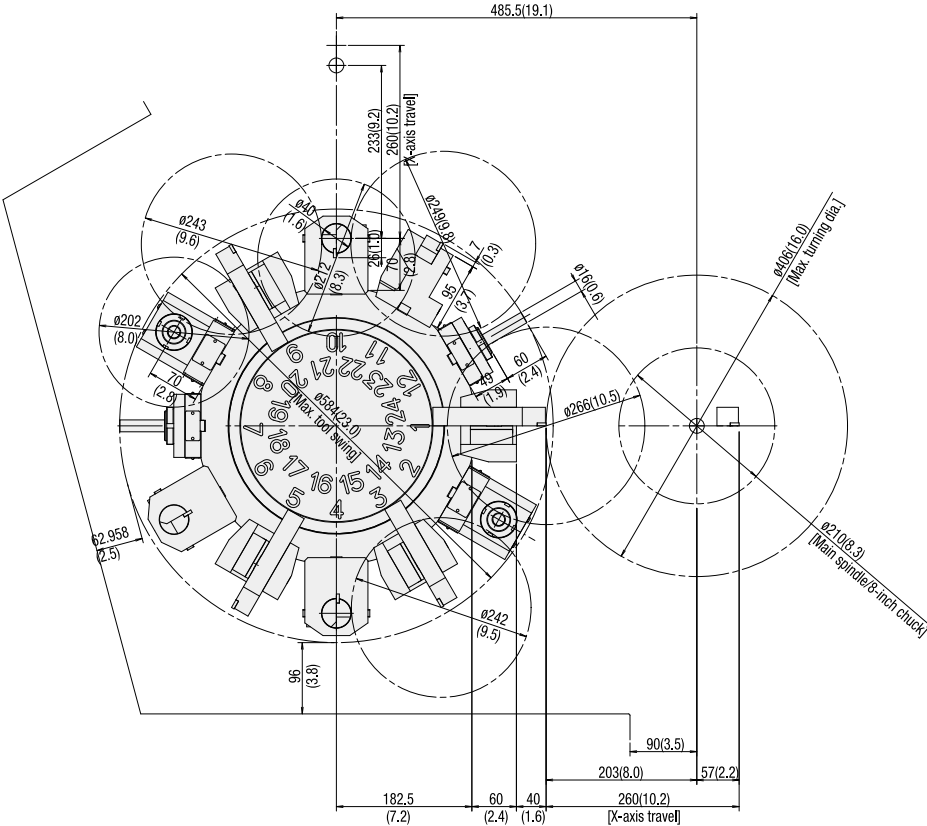


# Tool Interference Diagram

Unit : mm (inch)

PUMA 2100M / 2100LM / 2600M / 2600LM  
12 station. - BMT65P

  PUMA 2100MS / 2100LMS / 2600MS / 2600LMS  
12 station. - BMT65P

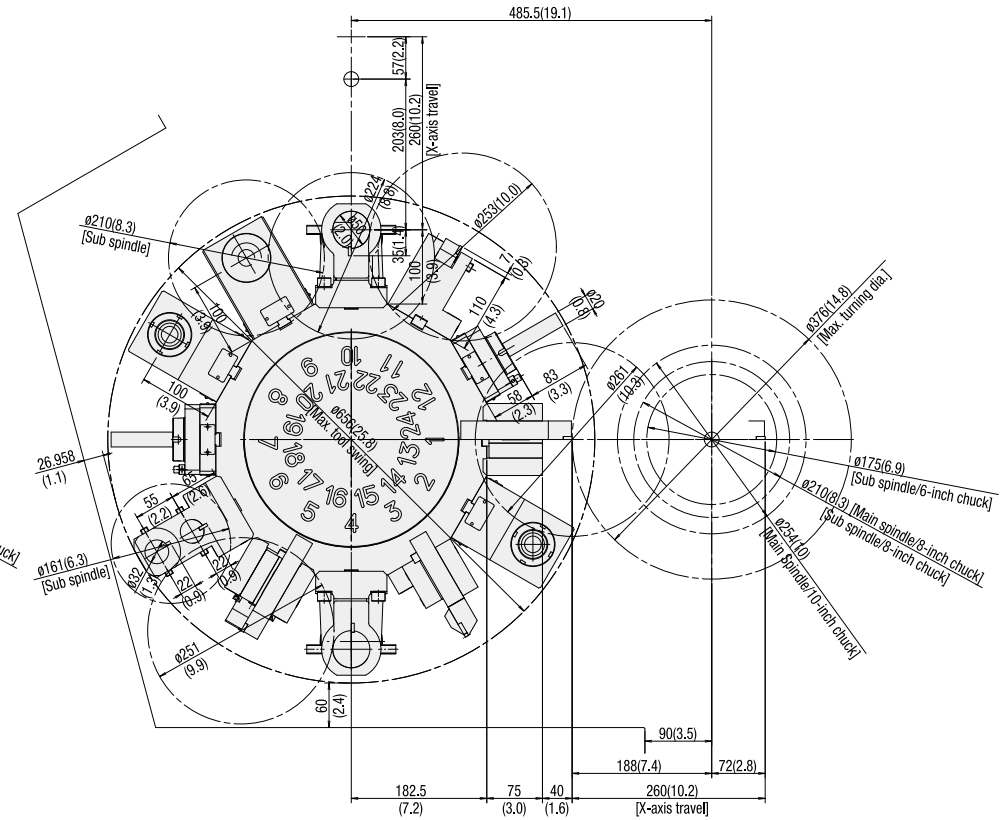
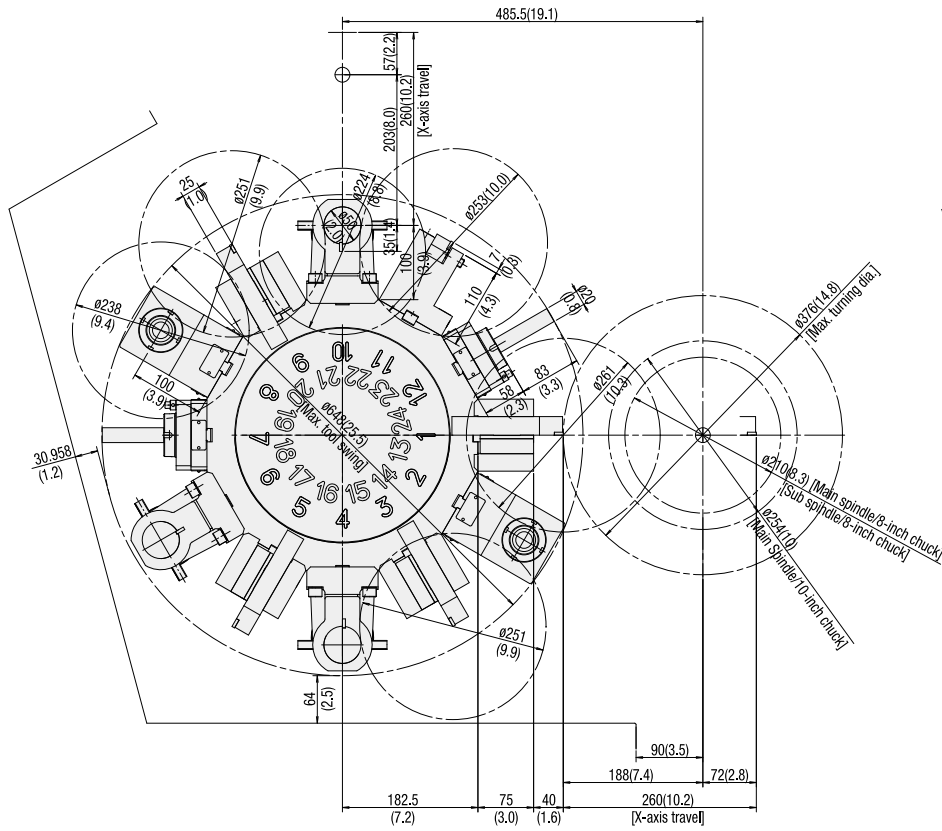


# Tool Interference Diagram

Unit : mm (inch)

PUMA 2100M / 2100LM  
24 station. - BMT55P

  PUMA 2100MS / 2100LMS  
24 station. - BMT55P

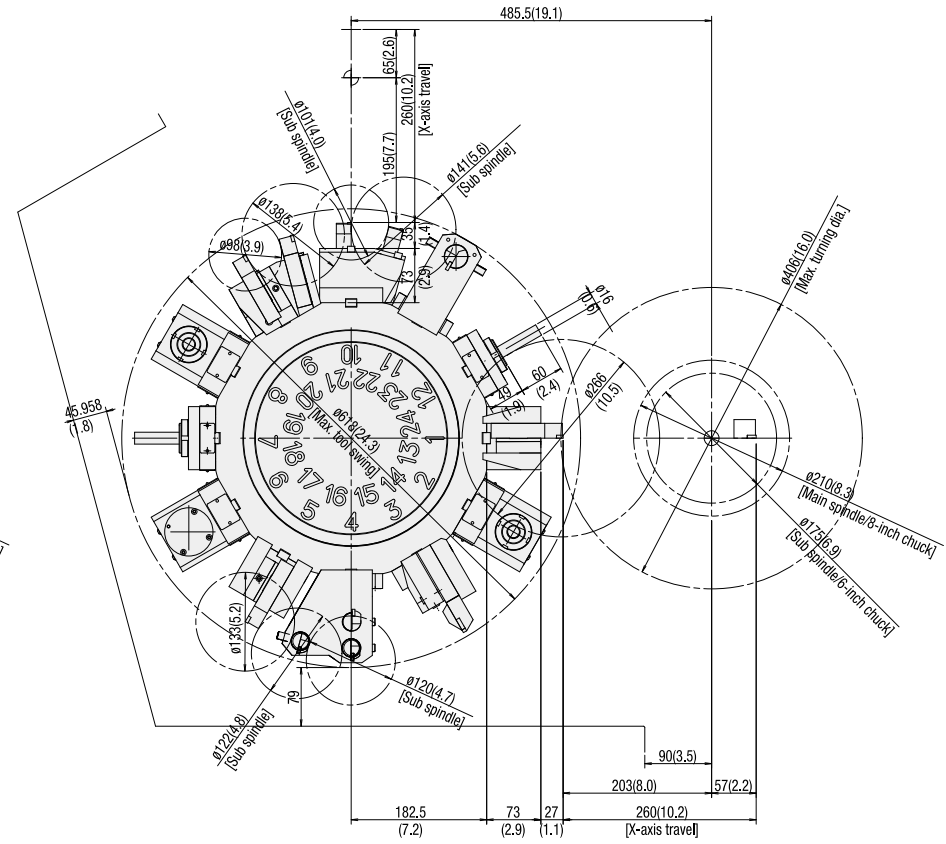
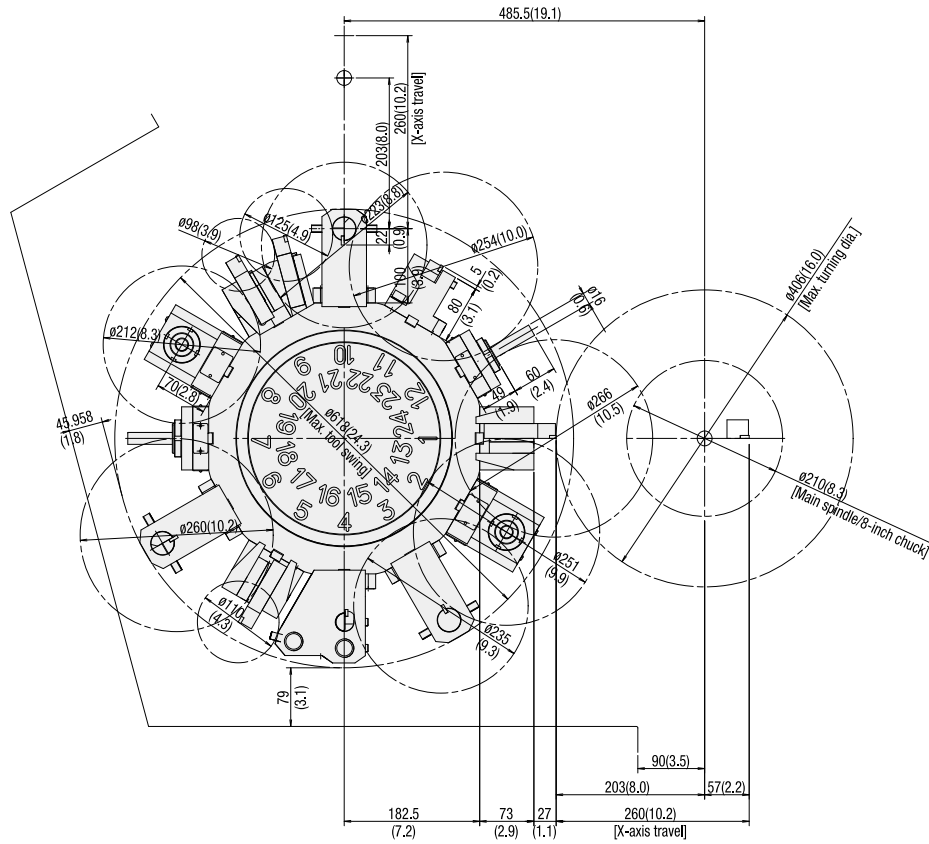


# Tool Interference Diagram

Unit : mm (inch)

PUMA 2100M / 2100LM / 2600M / 2600LM  
24 station. - BMT65P

  PUMA 2100MS / 2100LMS / 2600MS / 2600LMS  
24 station. - BMT65P

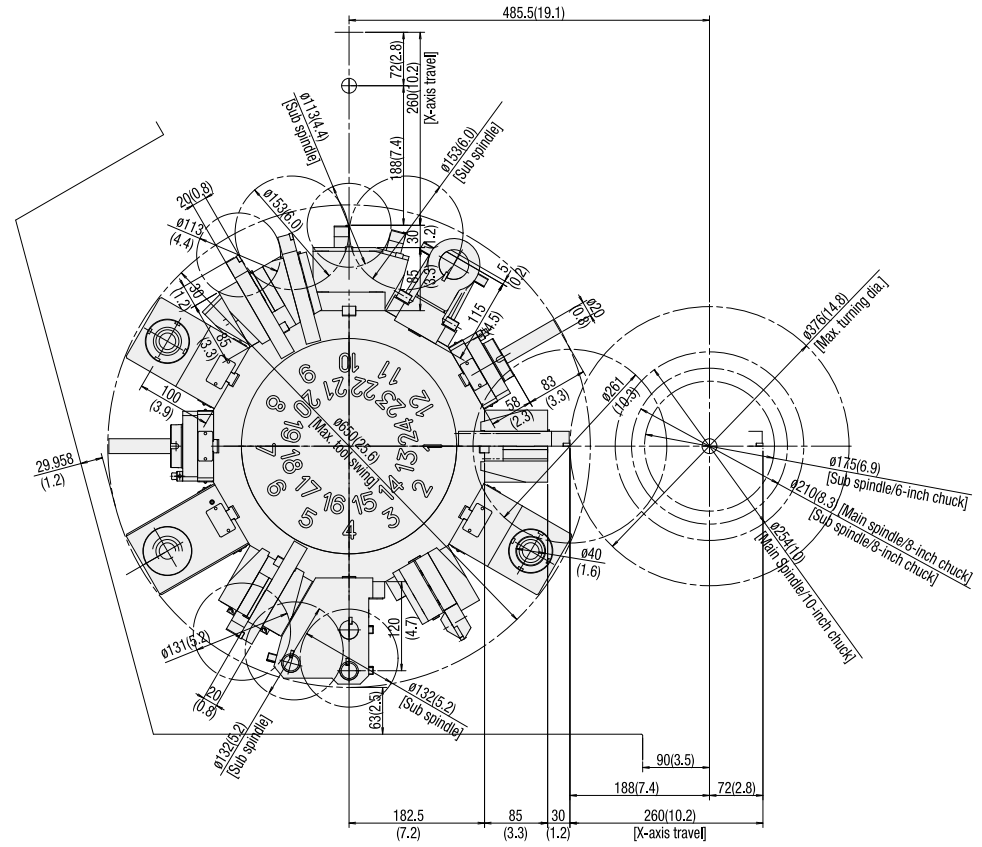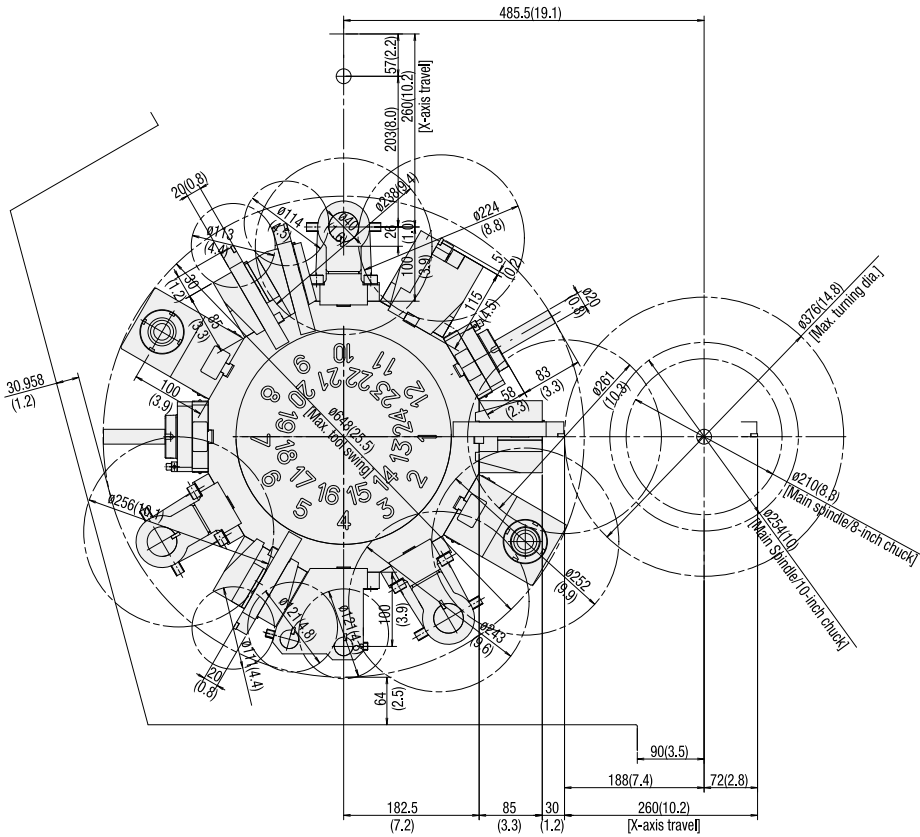







# Tool Interference Diagram

Unit : mm (inch)

PUMA 2100SY / 2100LSY  
12 station. - BMT55P

    PUMA 2100Y / 2100LY  
12 station. - BMT55P

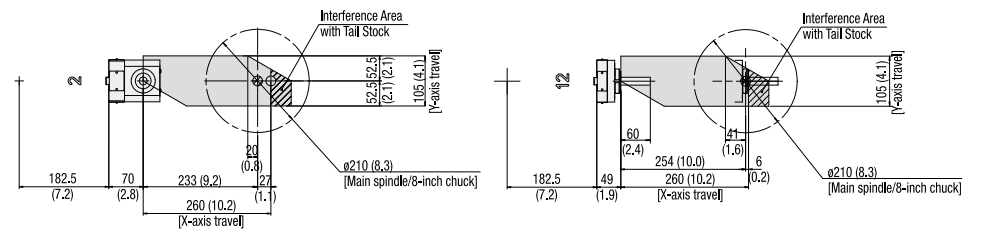
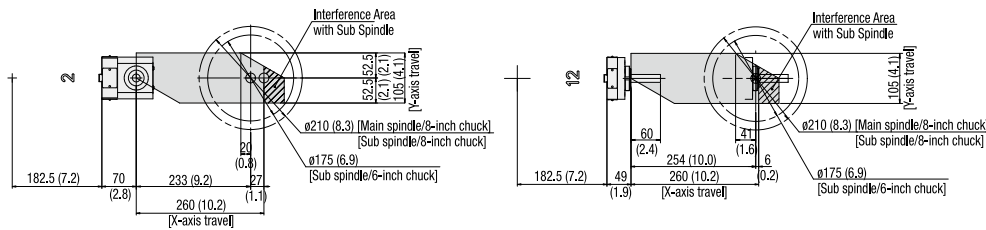
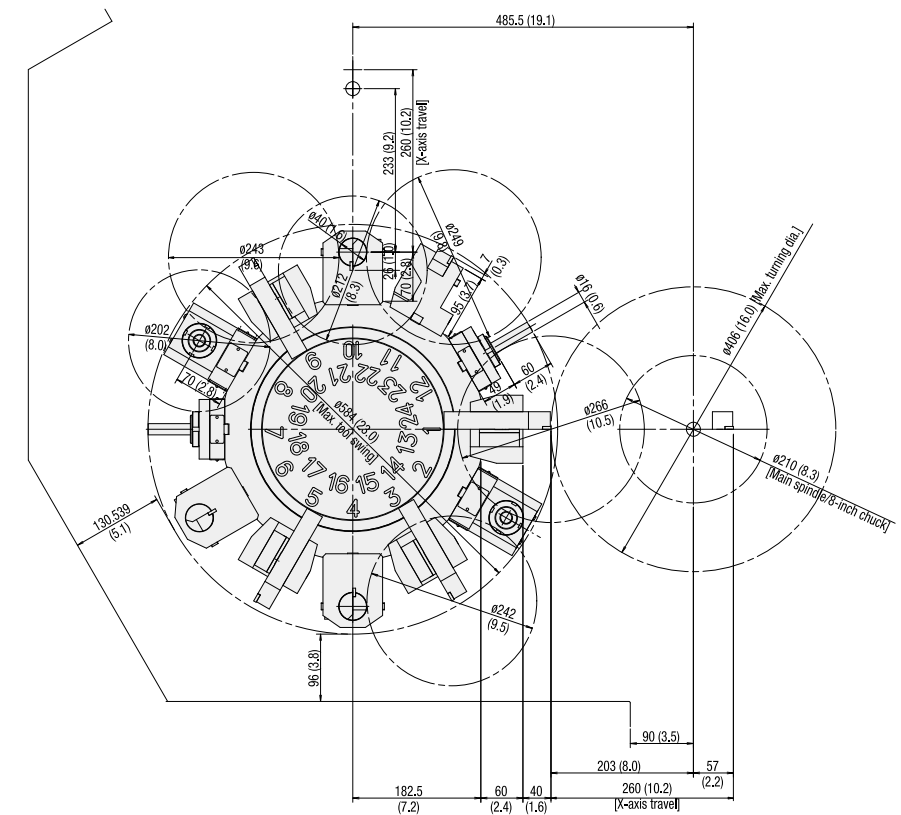
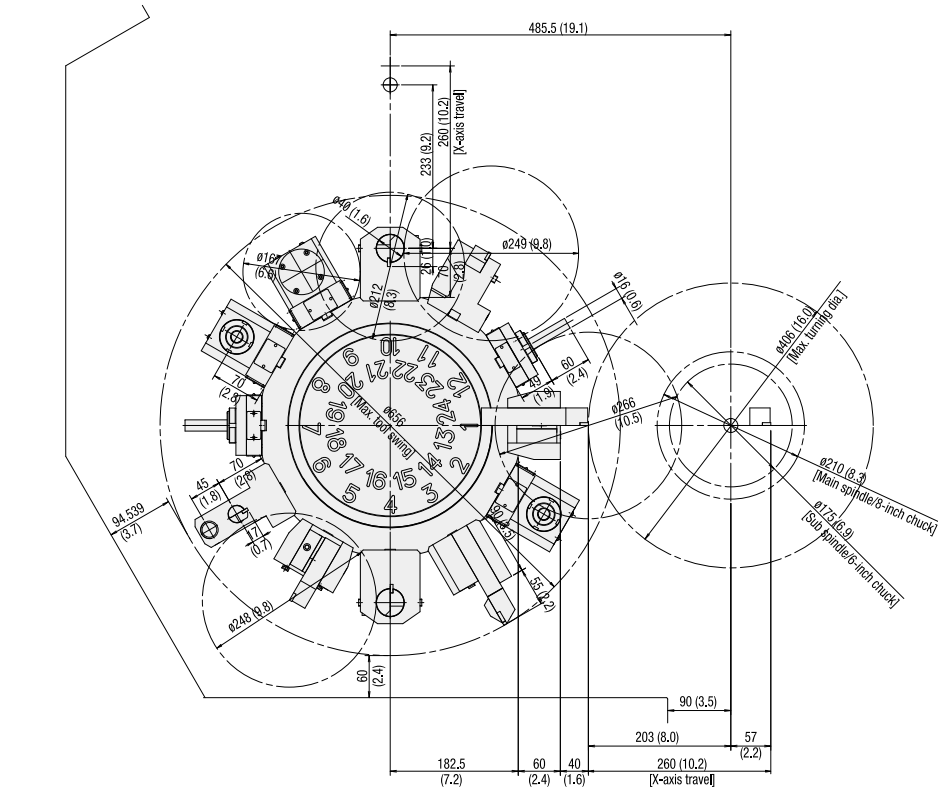


# Tool Interference Diagram

Unit : mm (inch)

PUMA 2100SY / 2100LSY / 2600SY / 2600LSY  
12 station. - BMT65P

    PUMA 2100Y / 2100LY / 2600Y / 2600LY  
12 station. - BMT65P

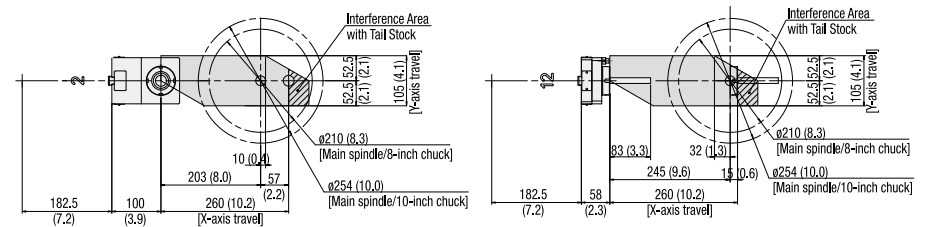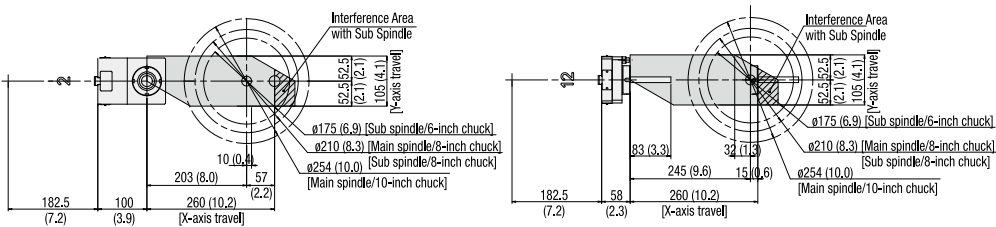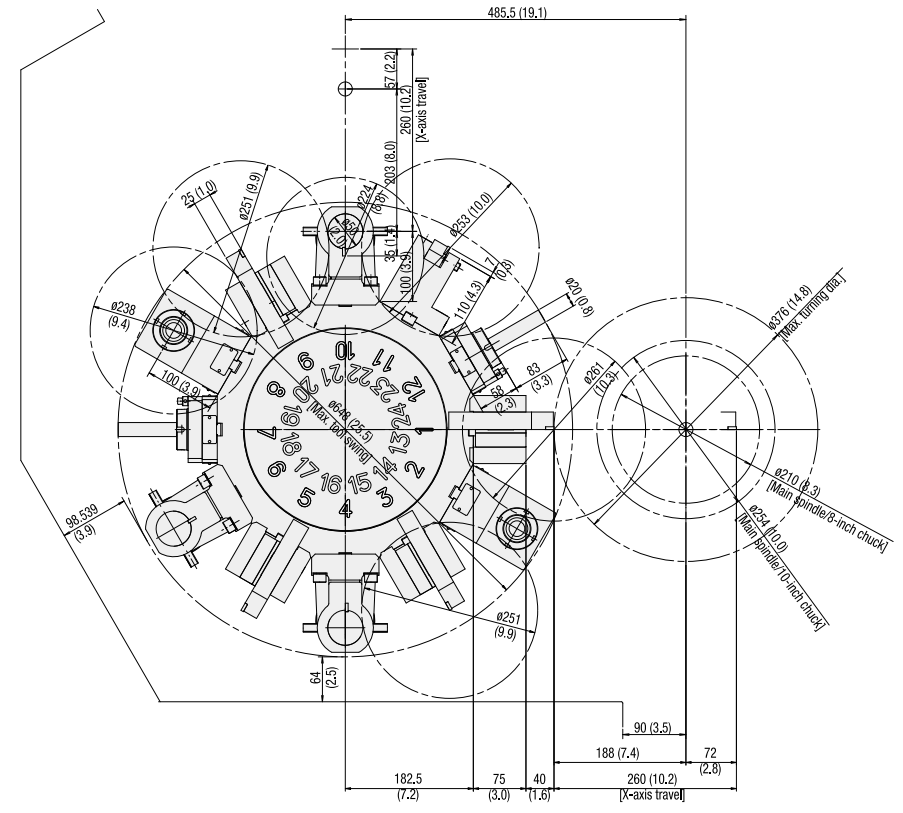
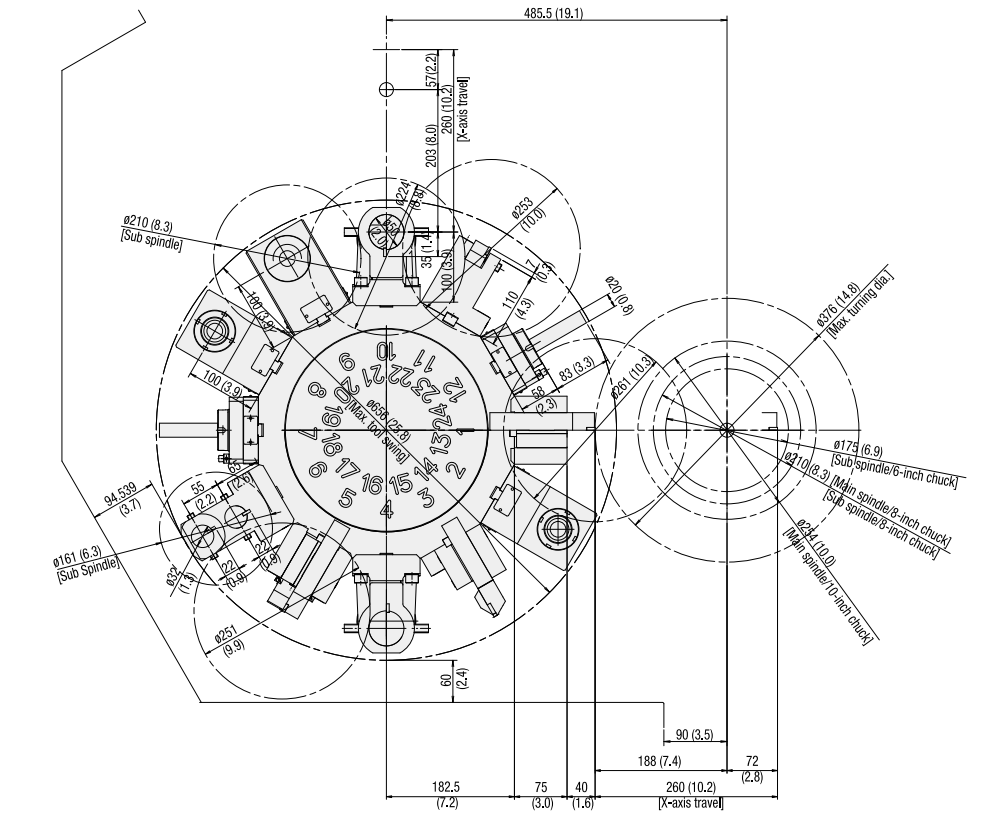


# Tool Interference Diagram

Unit : mm (inch)

PUMA 2100SY / 2100LSY  
24 station. - BMT55P

  PUMA 2100Y / 2100LY  
24 station. - BMT55P

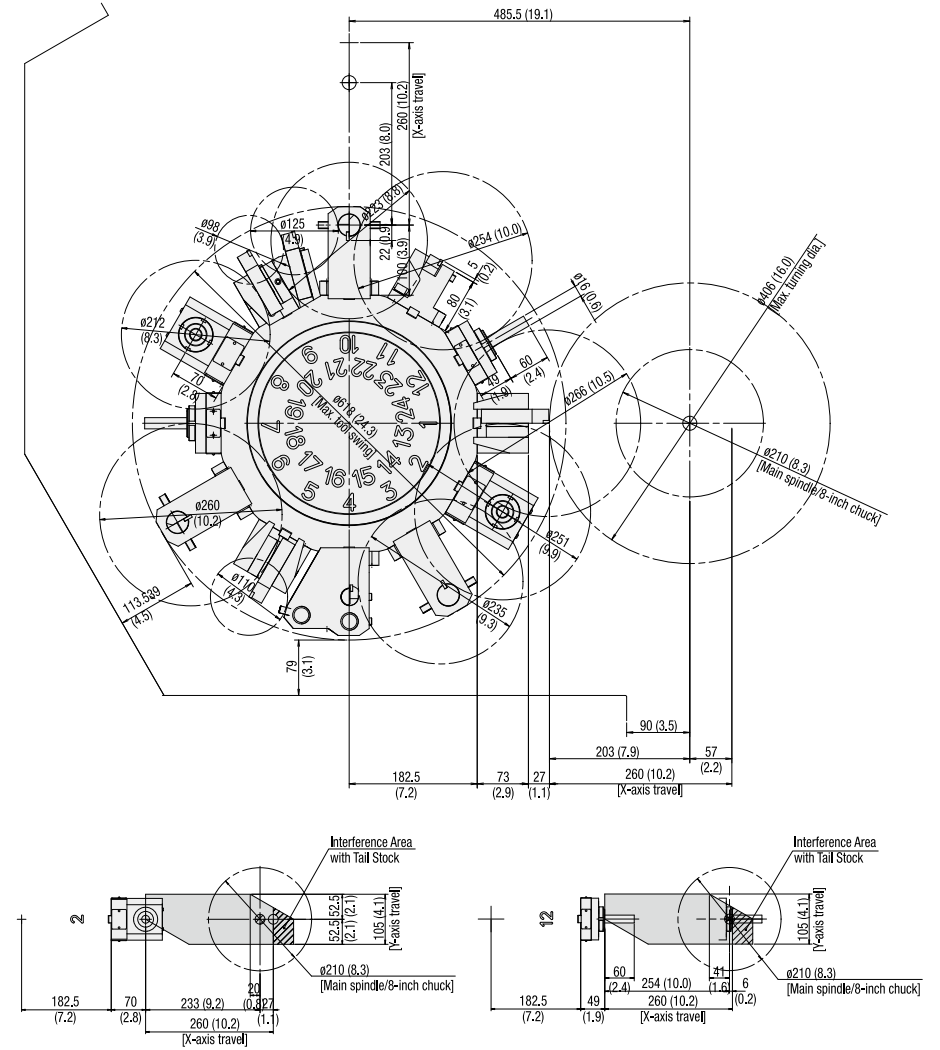
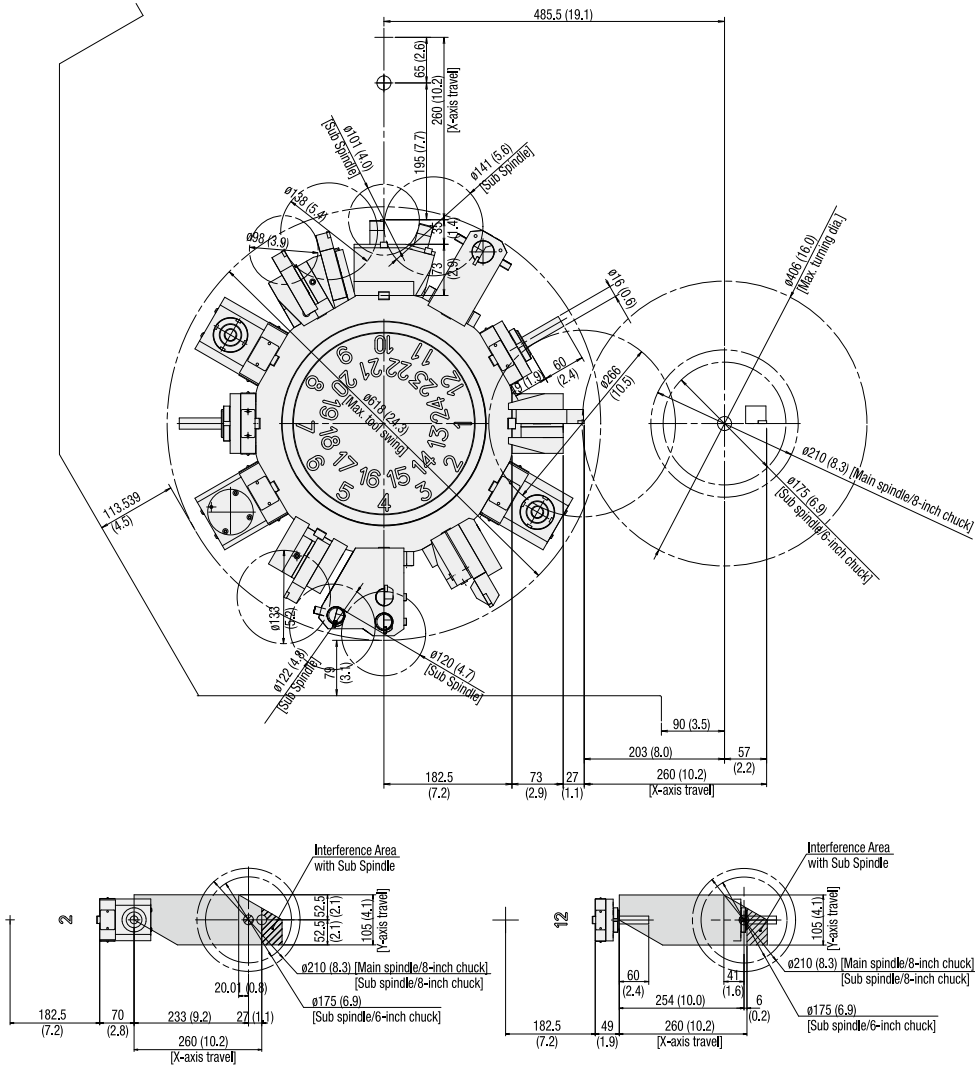


# Tool Interference Diagram

Unit : mm (inch)

PUMA 2100SY / 2100LSY / 2600SY / 2600LSY  
24 station. - BMT65P

  PUMA 2100Y / 2100LY / 2600Y / 2600LY  
24 station. - BMT65P

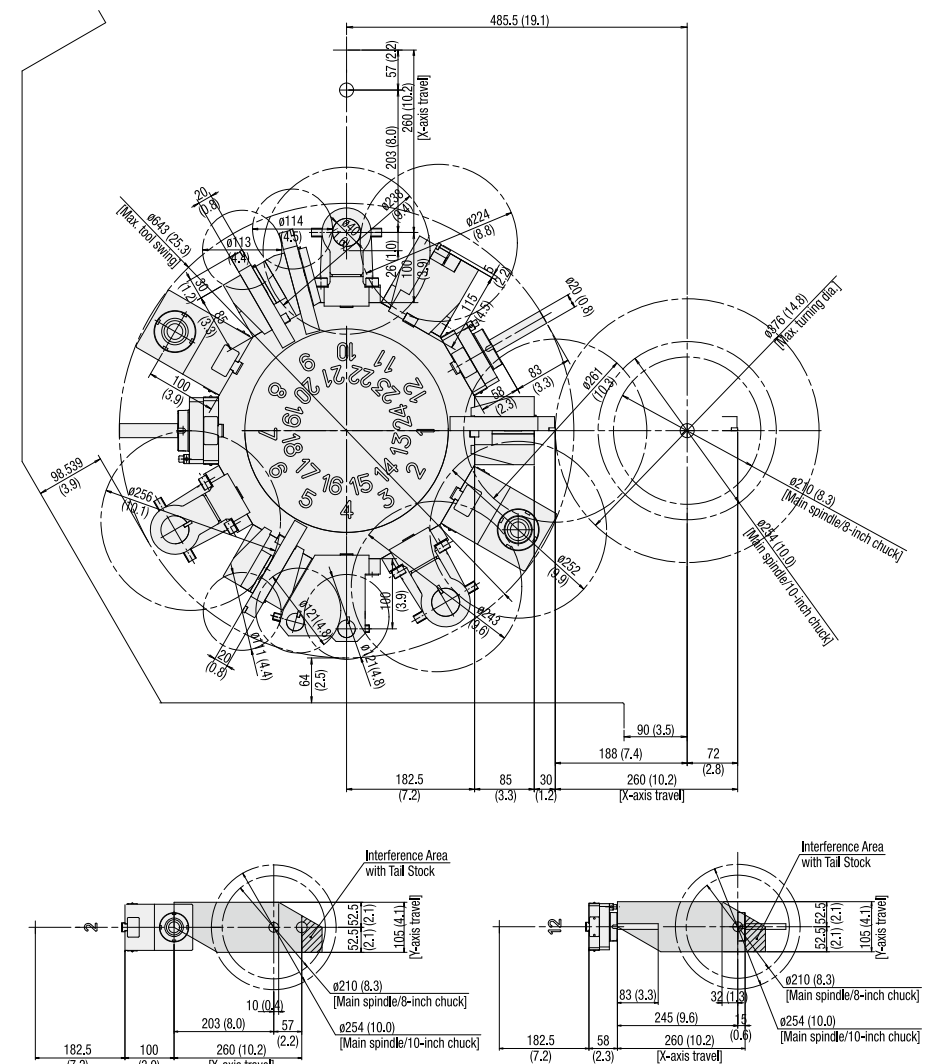
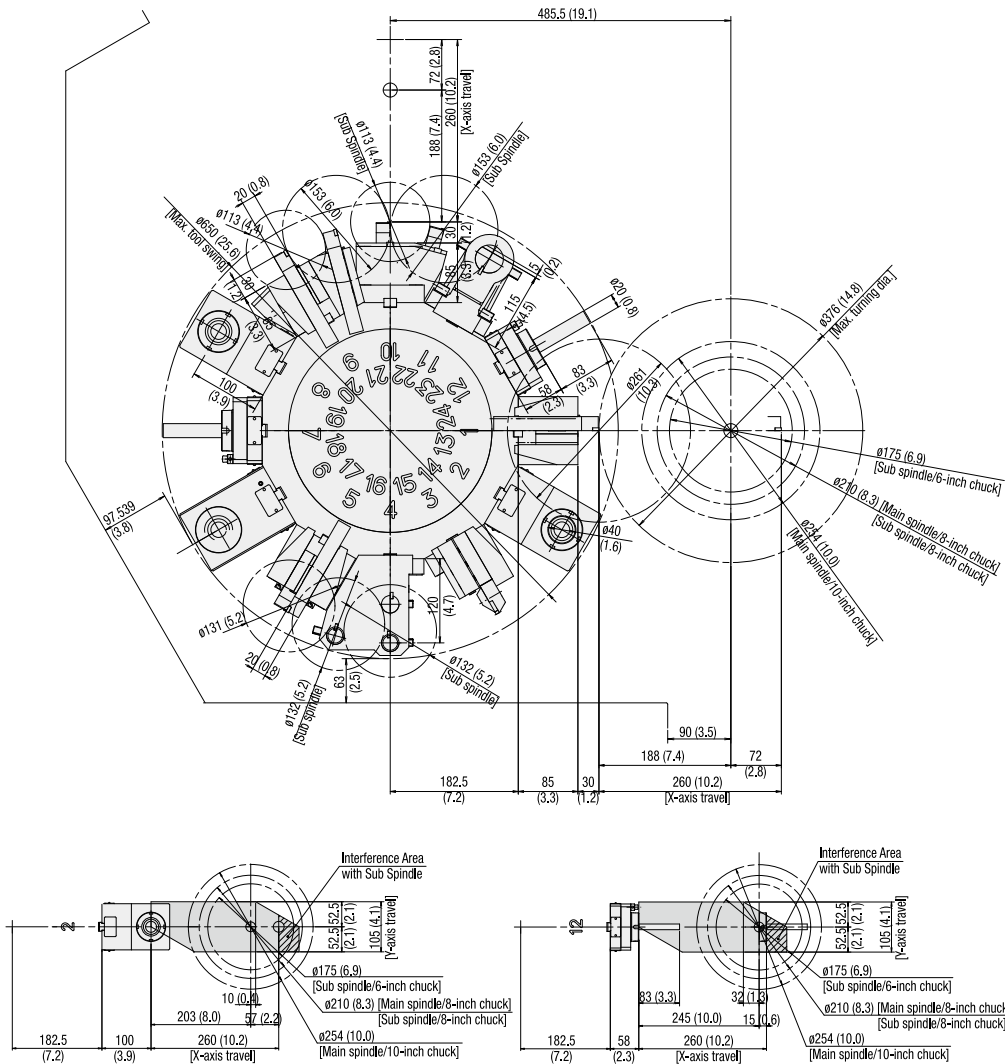


# Tool Interference Diagram

Unit : mm (inch)

PUMA 3100 / 3100L  
10 station

 
 
PUMA 3100XL / 3100UL  
10 station

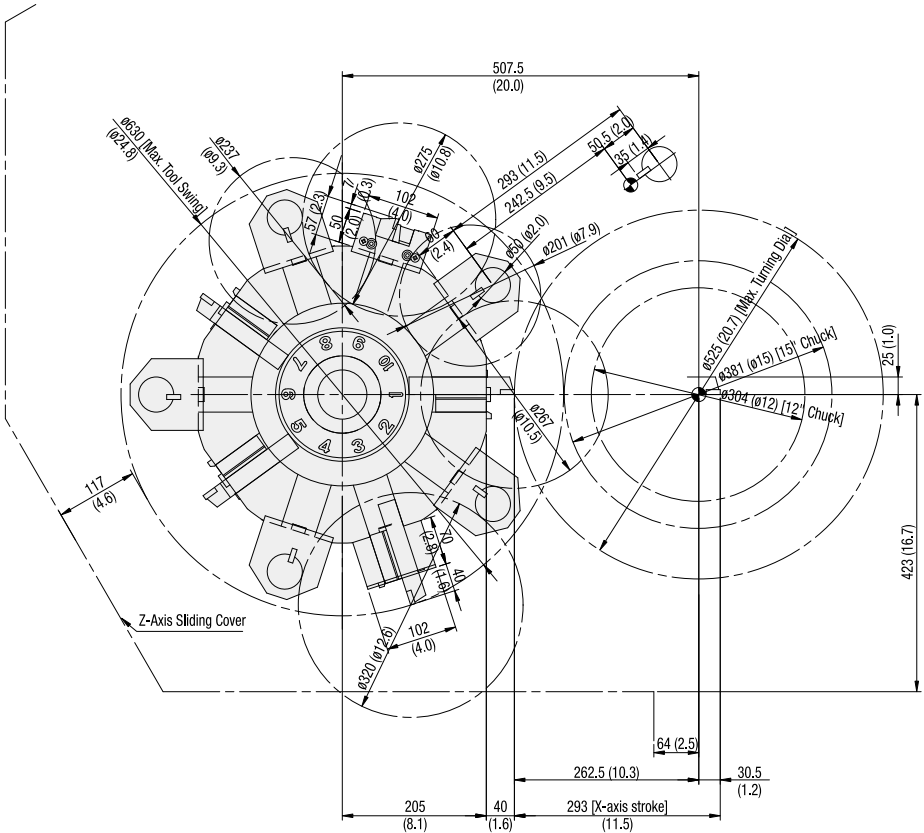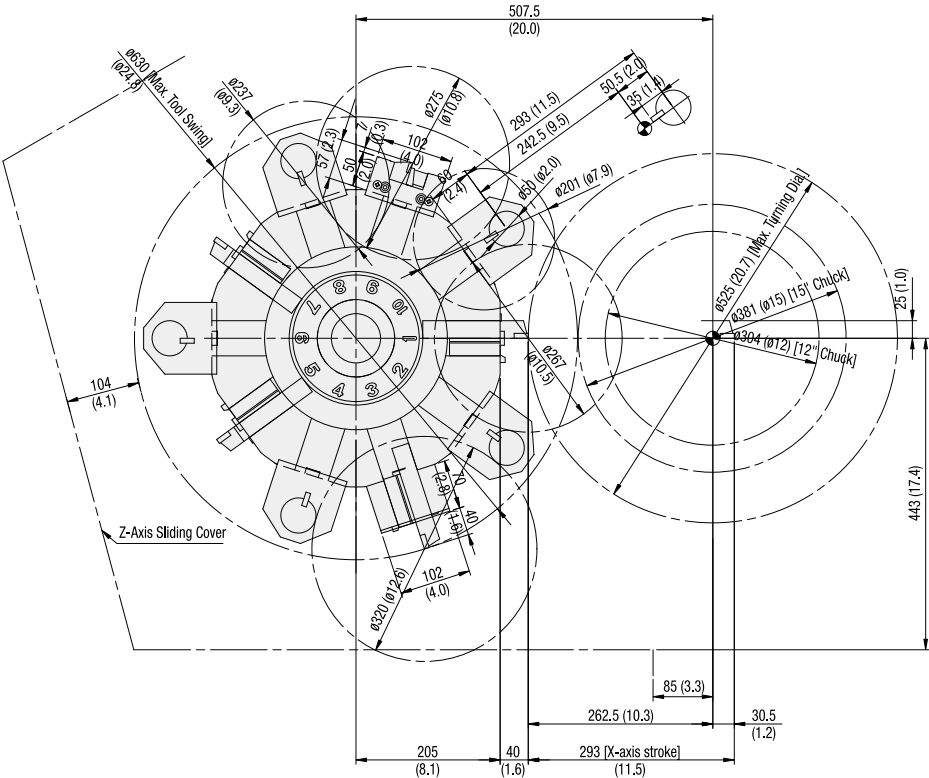


# Tool Interference Diagram

Unit : mm (inch)

  PUMA 3100M / 3100LM / 3100Y / 3100LY  
12 station. - BMT65P

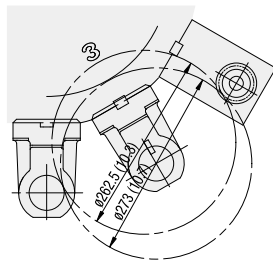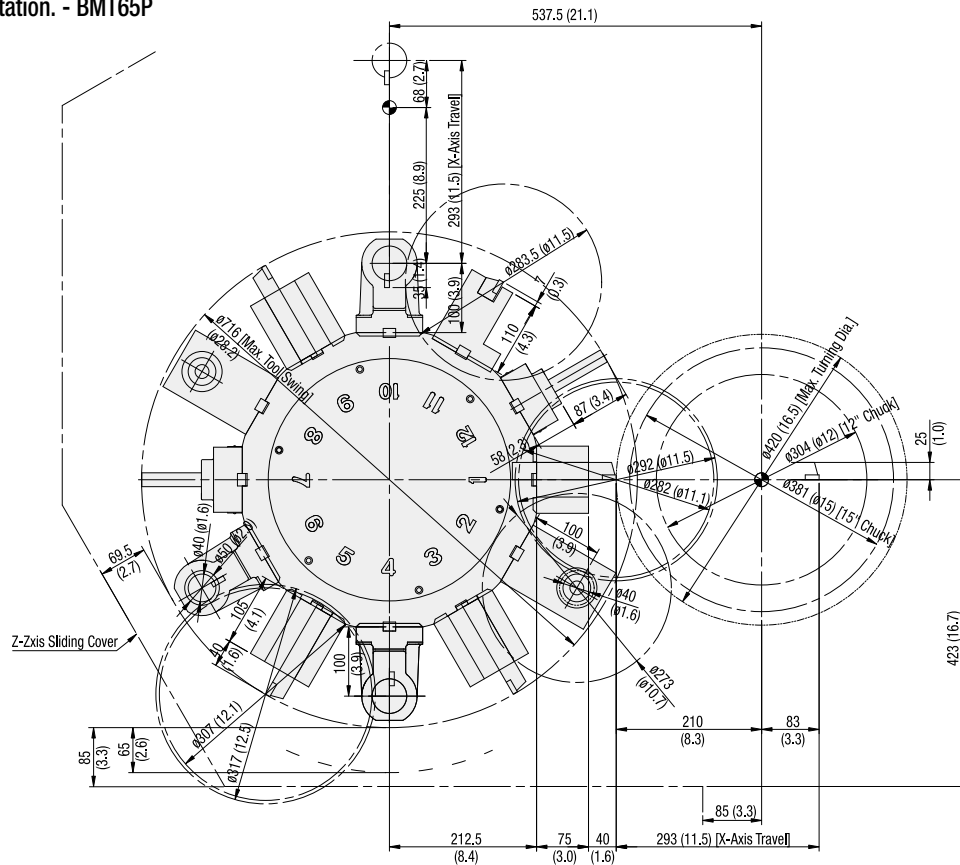

Reference for OD. Tool Interference


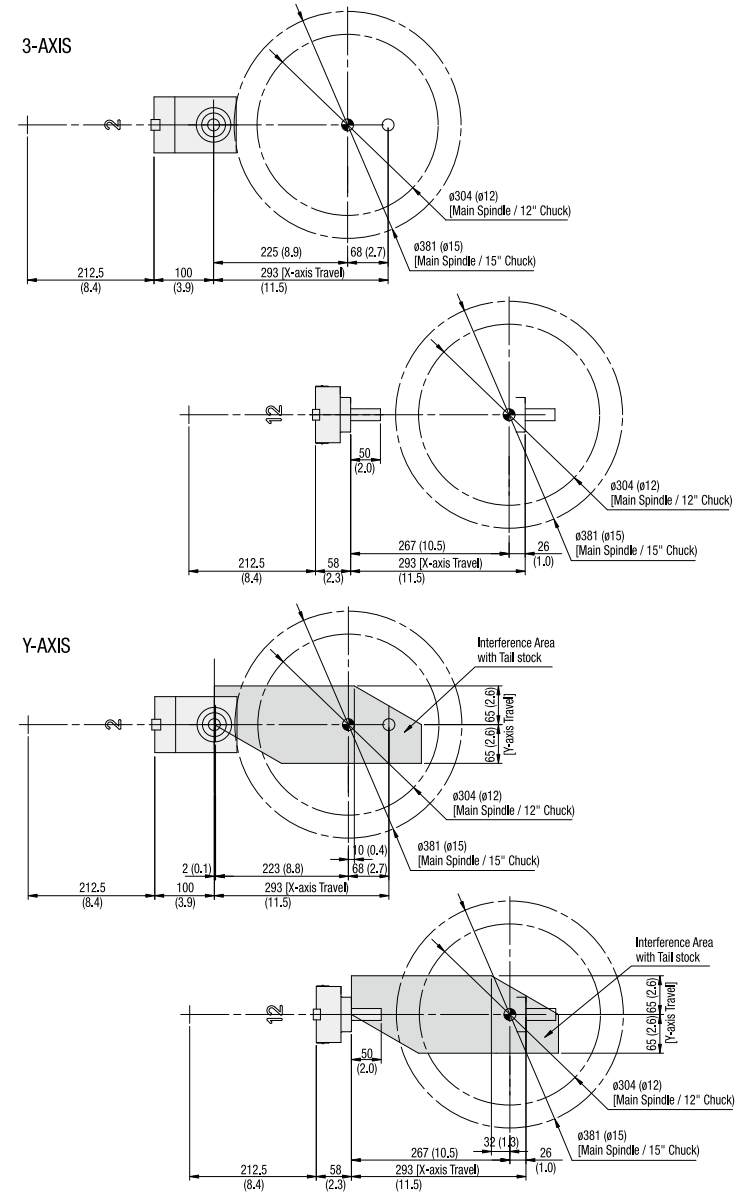 








# Tool Interference Diagram

Unit : mm (inch)

  PUMA 3100XLM / 3100ULM / 3100 XLY / 3100ULY  
12 station. - BMT65P

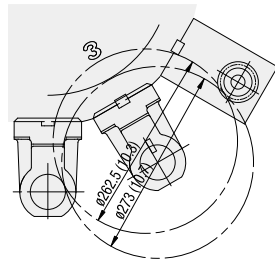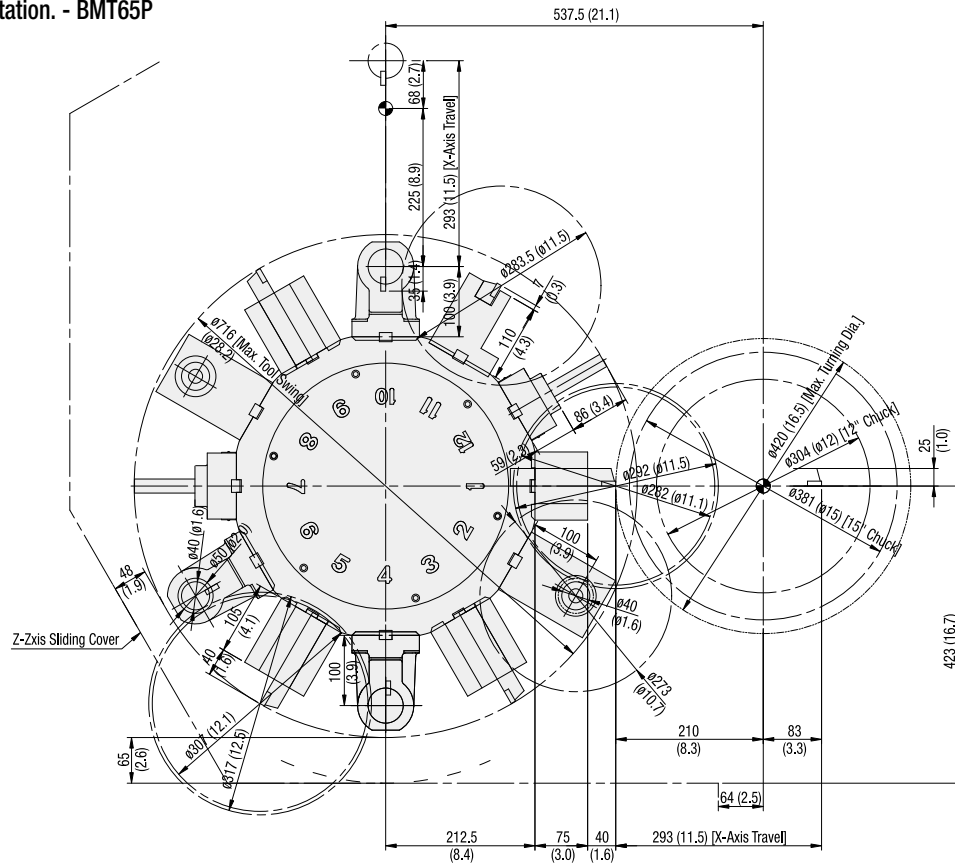

Reference for OD. Tool Interference

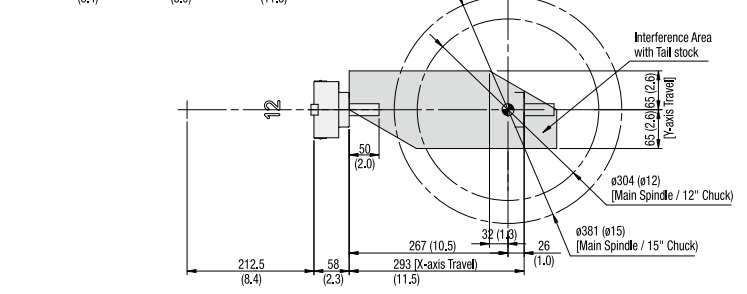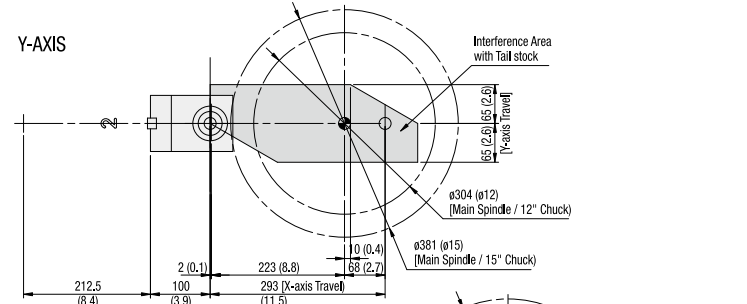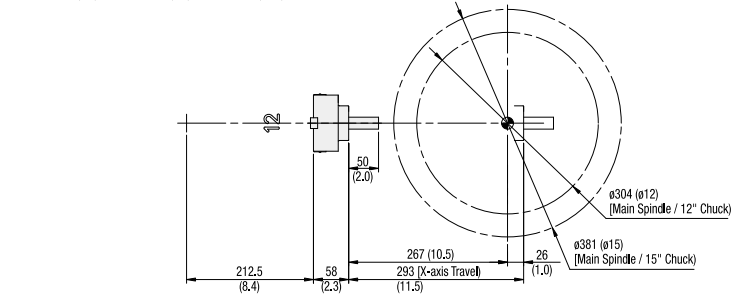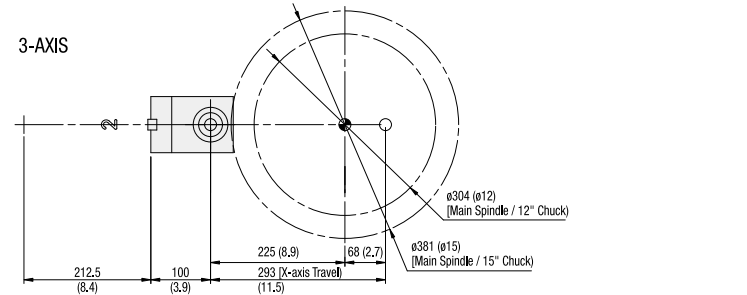    

## **PUMA 2100/2600/3100 series**

**Working range / Tooling system / Tool Interference Diagram**



<http://www.doosanmachinetools.com>

### **Doosan Infracore Machine Tools**

#### **Head Office**

Doosan Tower 20th FL., 275, Jangchungdan-Ro(St), Jung-Gu, Seoul  
Tel : +82-2-3398-8693 / 8671 / 8680 Fax : +82-2-3398-8699

#### **Doosan Infracore America Corp.**

19A Chapin Rd., Pine Brook, NJ 07058, U.S.A. Tel : +1-973-618-2500 Fax : +1-973-618-2501

#### **Doosan Infracore Germany GmbH**

Emdener Strasse 24, D-41540 Dormagen, Germany Tel : +49-2133-5067-100 Fax : +49-2133-5067-001

#### **Doosan Infracore Yantai Co., LTD**

13 Building, 140 Tianlin Road, Xuhui District, Shanghai, China (200233) Tel : +86-21-6440-3384 (808, 805) Fax : +86-21-6440-3389

#### **Doosan Infracore India Pvt., Ltd. Technical Center**

106 / 10-11-12, Amruthalli, Bellary road, Byatarayanapura, Bagalore 560092, India Tel : +91-80-4266-0100 / 0122 / 0101

#### **Doosan International South East Asia Pte Ltd.**

42 Benoi Road, Jurong 629903, Singapore Tel : +65-6499-0200 Fax : +65-6861-3459

