PP-10HD Hydraulic Press

INSTRUCTIONS AND PARTS LIST

A NOTE ON SAFETY

We have done all we can to assure this press offers the utmost safety. But you have to do your part. No amount of warnings can take the place of your good judgement. So make sure it's the first thing you bring to any job.


Beyond that there are some obvious tips

Always Check machine before use to ensure there are no damaged or loose parts,

Steel and other materials can shatter, so always use protective eyewear that applies to state WHS regulations

If you detect anything that may indicate structural failure stop using the press immediately and inspect it thoroughly.

Bolt the press to a suitable bench if it is to be used for bulky or unstable items.

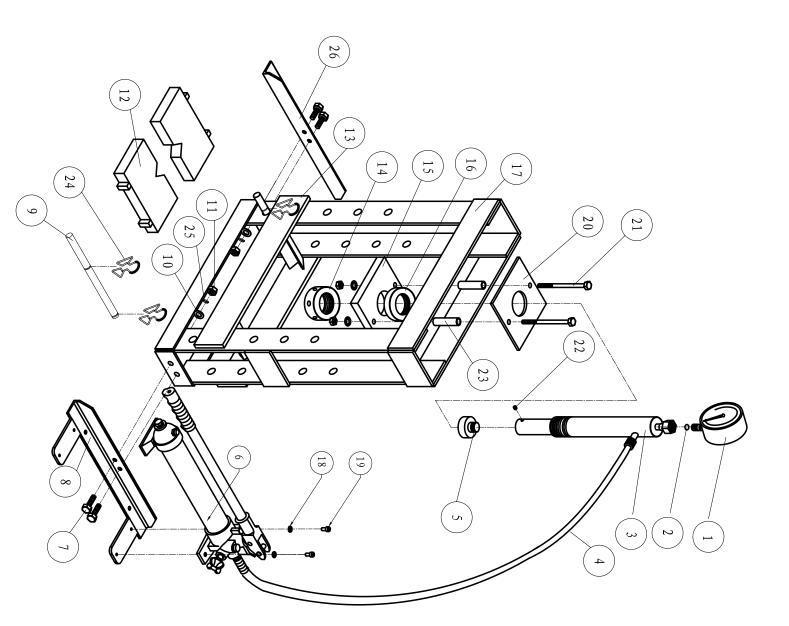

26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2		亭号
0803-7-a	GB/T93- ø 10	0805C-12-a	0802CE-D-1	GB/T77-M6*8	GB/T5781-M10*110	0803-13	GB/T70. 1-M8*16	GB/T95- ф 8	0802CE-D-01	0803-11	0803-14	0803-5-DX	0802CE-01	0802CE-03	GB/T41-M10	GB/T95- ф 10	0802CE6	0802CE-D-02	GB/T5781-M10*25	0802CE-D-03	0803-27-DX	TB-011	0803-07-a	TT-63	TT-471	代号
底脚	弾垫	卡环	限位管	内六角锥端紧定螺钉	外六角螺栓	油缸安装板1	内六角螺钉	平垫	框架焊接图	上拼帽	油缸安装板2	下拼帽	中梁组件	垫块	外六角螺母	平垫	插销	底脚	外六角螺栓, 全螺纹	泵体部件	顶头	高压油管部件	油缸部件	尼龙垫	压力表	名称
1	4	4	2	1	2		2	2	1	1	1	1	1	2	6	6	2	1	4	1	1	1	1	1	1	数量