


## PART LIST

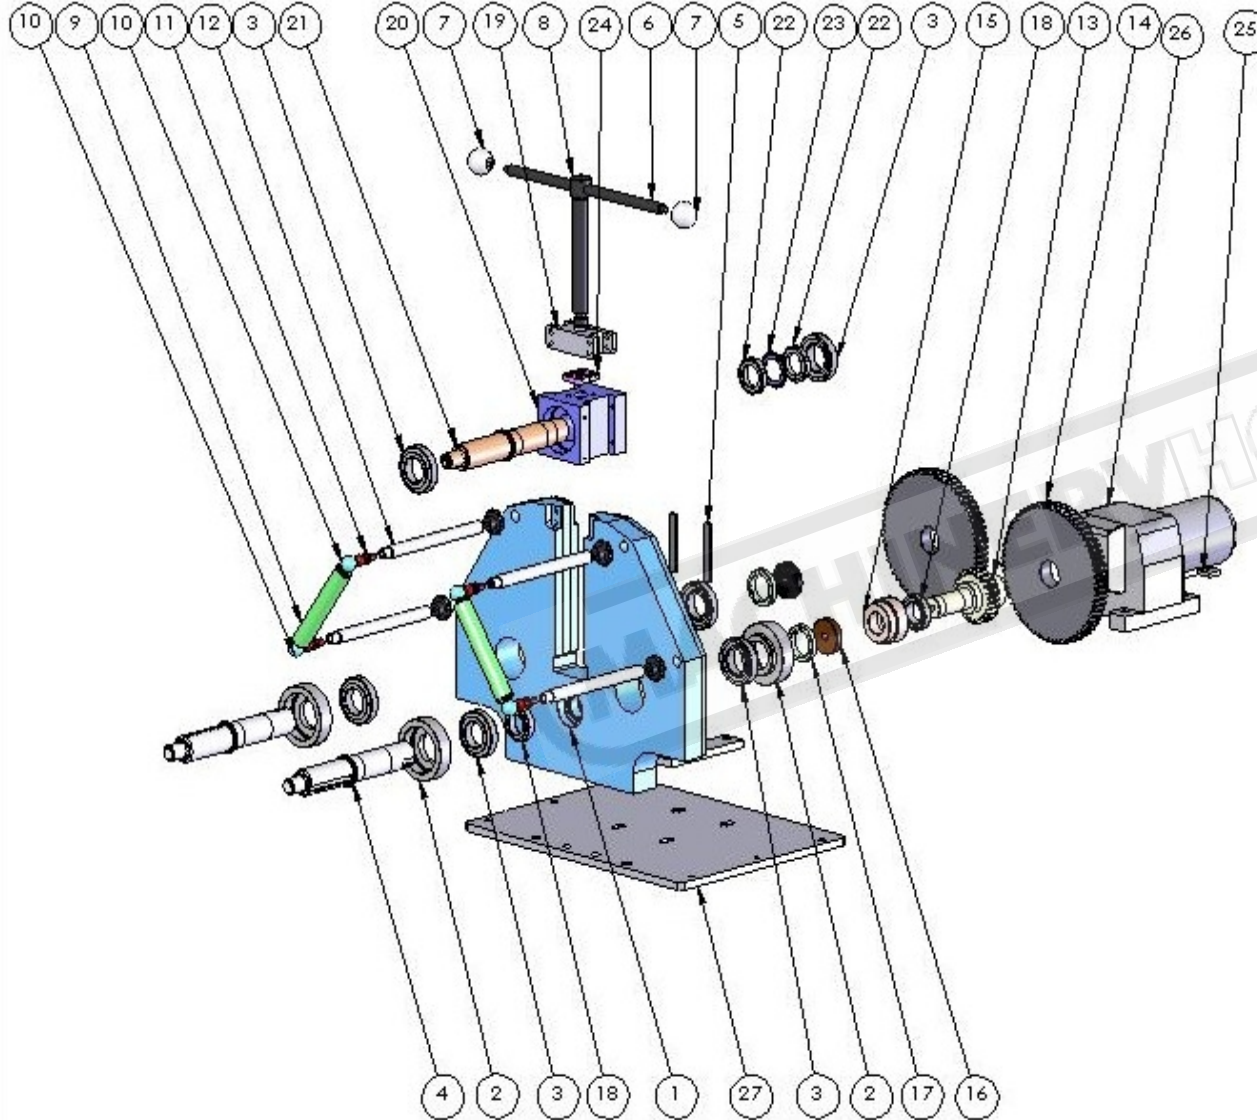

NO	PCS	PART NAME
1	1	STEEL FRAME
2	4	FLANGE
3	6	BEARING
4	2	BOTTOM SHAFT
5	2	KEY
6	1	TOP ROLL ADJUTMENT HAND LEVER
7	2	KNOB
8	1	TOP ROLL ADJUSTMNET
9	2	GUIDE ROLL JOINT
10	4	GUIDE ROLL JOINT
11	4	GUIDE ROLL JOINT ADJUSTMENT SCREW
12	4	LATERAL SIDE SCREW
13	1	HANDLE
14	2	GEAR
15	1	GEAR
16	2	BUSHING
17	2	SPACER
18	2	BEARING
19	1	BEARING CHOCK
20	1	TOP SHAFT BLOCK
21	1	TOP SHAFT
22	2	SAFETY NUT
23	1	MB
24	1	UPPER PLATE
25	1	MOTORS
26	1	REDUCER
27	1	BOTTOM PLATE
28	2	FRAME BOTTOM PLATE

“

||