



Edition: 2.0 Date: (10/24)

# **Instruction Manual**

# PLASMA WELDING TABLE PCT-7510

Order Code: (W08602)



## ASSEMBLY INSTRUCTIONS

### **PCT-7510 PLASMA CUTTING TABLE**

Order Code: W08602



Due to the weight of the table, it is highly recommended that you have a second person to assist during the build of the table, being made from steel it is heavy and help should be obtained to avoid any injuries. Always remember to wear the appropriate PPE.

#### Suggestion of what you will need

Note - this assembly guide is merely a recommendation and should not be followed blindly, if you do not have the equipment or the experience necessary to complete this project you should consider seeking advice from a professional.

- File for deburring any sharp edges.
- Level and square to enure all components are square.
- Hex keys, spanners or shifting spanner and a soft face hammer.

**NOTE:** You may consider to use other methods and tools to help complete you project, the above list is just a suggestion. read through these instructions before starting the assembly process.

#### **Getting Started**

Before starting the assembly ensure you have the correct tools & equipment to successfully assemble the table whilst making sure you are wearing the appropriate Safety PPE.











#### **Check for Burrs**

It is normal for the components to have small burrs or minor imperfections as part of the laser cutting process. While wearing protective gloves, check the edges of the individual pieces and visually inspect them for any small burrs. If you do happen to find one, use a file to remove any burrs, being careful not to remove too much excess material as it may affect the end result.



# **ASSEMBLY INSTRUCTIONS**



Parts list
Please check that you have all the below parts before you assemble this product


	Part	Image		Part	Image
1.	Table Ribs <b>Qty: 16</b>		7.	Legs <b>Qty: 4</b>	
2.	Long Ribs (2 x Sides, 1x Centre) <b>Qty: 3</b>	2x sides 1x Centre	8.	Leg Top Caps <b>Qty: 4</b>	
3.	Cross Rib Ends Qty: 2		9.	Long Chute Sides <b>Qty: 2</b>	
4.	Cross Rib Centres  Qty: 2		10.	Short Chute Sides  Qty: 2	
5.	Long Leg Braces <b>Qty: 2</b>	ï	11.	M6 Screws & Dome Nuts <b>Qty: 12</b>	
6.	Short Leg Braces <b>Qty: 2</b>		12.	M8x10 Screws Qty: 20	13. M8x16 Screws Qty: 12



#### Step 1


Assemble 4 x legs #7 and leg braces #5 & #6 together using 16 x M8x10 Screws #12 as shown. Adjust feet to ensure the legs are all the same height from ground and make sure its assembled on a flat level surface.

NOTE: Leave screws loose for now.

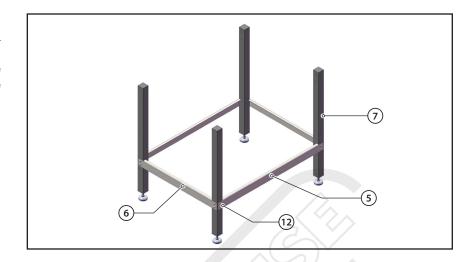

#### Step 2


Assemble the 2 x long Side Ribs #2 and  $2 \times cross$  ribs ends #3 together using 12 x M8x16 Screws #13.

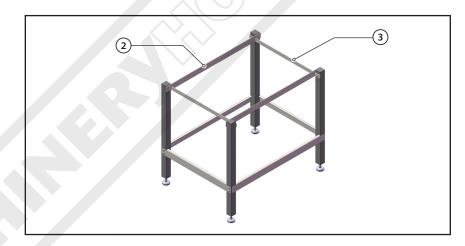

#### Step 3

Using the slots provided. Assemble 2 x Cross Rib Centres #4 on top of the Long Rib Centre #2 and line up with the corresponding slots of the Long Rib Sides #2 as shown in the diagram.

Use a soft-face hammer to lightly tap the components into place. If they do not fit correctly the first time, be sure to check for any small burrs and then try again.

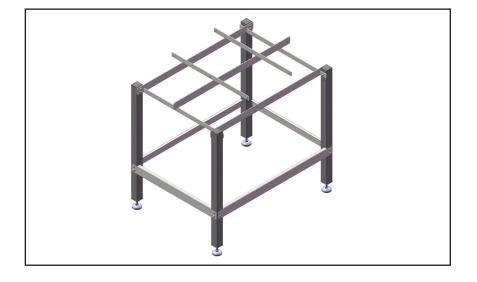





#### Step 4

Assemble the chute using 12 x M6 screws & dome nuts #11 and use 4 x M8x10 screws #12 to attach to the plasma cutting table as shown.

NOTE: Leave screws loose for now.

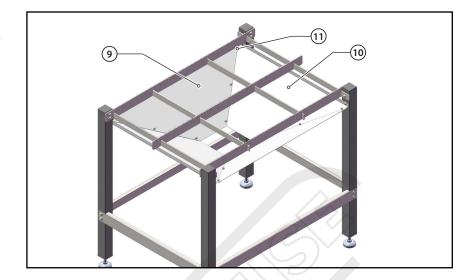

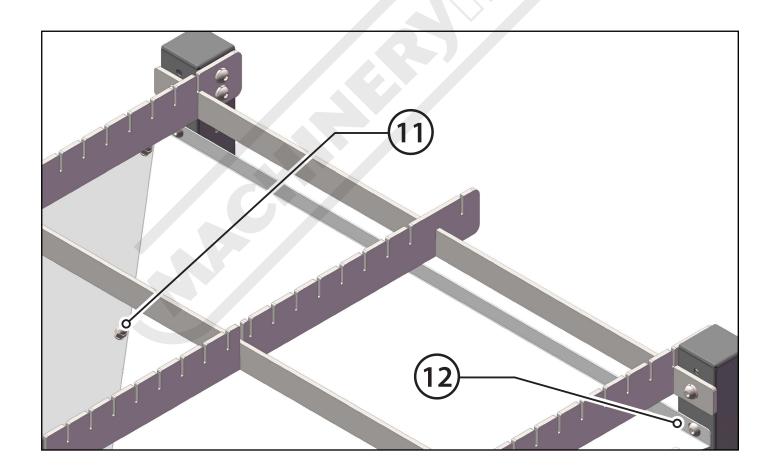




#### Step 5

Insert all 16 x table ribs #1 into the long rib #2 slots and if necessary use a soft face hammer to tap in flush as shown. Now tighten all screws.

Your plasma cutting table is now ready for use.

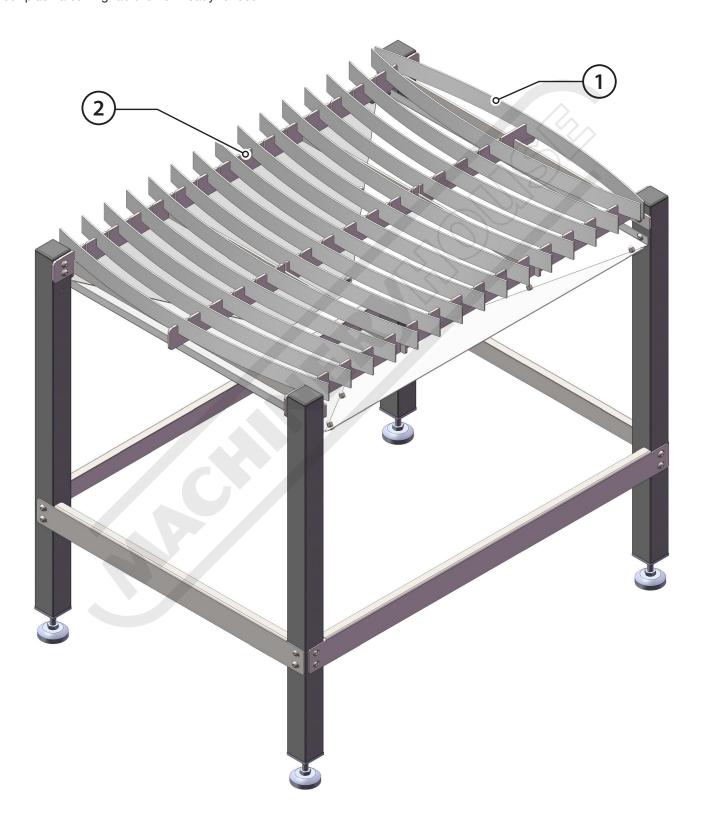



NOTES:



#### **ENVIRONMENT PROTECTION**

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

#### Imported by



Australian Distributor

Hare & Forbes Machineryhouse Sydney - Melbourne Adelaide - Brisbane - Perth

Ph: 1300 202 200 www.machineryhouse.com.au

## MACHINERYHOUSE

New Zealand Distributor

Machineryhouse Auckland Christchurch

Ph: 0800 142 326 www.machineryhouse.co.nz