

Spare Parts Section

DUST COLLECTORS DC-2

Order Code: (W332)

Edition: 2.0 Date: (8/24)

The following section covers the spare parts diagrams and lists that were current at the time this manual was originally printed. Due to continuous improvements of the machine, changes may be made at anytime without notification.

HOW TO ORDER SPARE PARTS

- 1. Have your machines model number, serial number & date of manufacture on hand, these can be found on the specification plate mounted on the machine
- 2. A scanned copy of your parts list/diagram with required spare part/s identified.

NOTE: SOME PARTS MAY ONLY BE AVAILABLE AS AN ASSEMBLY

3. Go to www.machineryhouse.com.au/contactus and fill out the inquiry form attaching a copy of scanned parts list.



WARNING!

Electricity is dangerous and could cause death
All electrical work must be carried out by a qualified electrician.




CAUTION

It is impossible to cover all possible hazards Every workshop environment is different. These are designed as a guide to be used to compliment training and as a reminder to users prior to equipment use. Always consider safety first, as it applies to the individual working conditions.



SPARE PARTS DIAGRAM

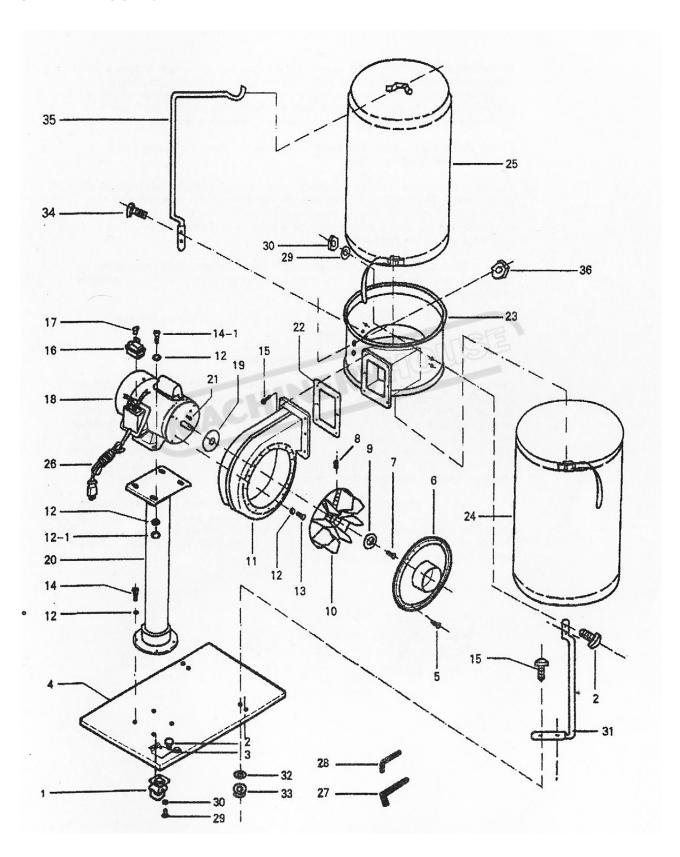



SPARE PARTS LIST

36	34	33	32	31	30	29	28	27	26	25	24	23	22	21	ა ე	19	10.	17	16	15	14-1	14	13	12-1	12		10	9	8	7	6	5	4	ω	2	_	No
5 NUT				BRACKET		9 SPRING WASHER	WRENCH HEX.	7 WRENCH HEX	5 POWER CORD		_					PACKING										COLLECTOR BODY			SET SCREW SOC. HD.	SCREW HEX. SOC. HD.	INLET COVER	SCREW PAN. HD.	BASE PLATE	SPRING WASHER	SCREW PAN. HD.	CASTER	Description
						HER	×	×	D		BAG			NO IONI ENTE	COLLIMN & MOTOR DI ATE					FLG. HD.	HD.	HD	HD.			BODY			SOC. HD.	SOC. HD.		HD.		HER	HD.		
M4	M4 x 5	M6	Ø6		M5	Ø5	5mm	4mm	7					5mm x 5mm x 30mm						M6 x 15	M8 x 15	MS x 15	M8 x 10	M8	Ø8				M8 x 10	M6 × 20 L (L H.)		M5 x 10		Ø5	M5 x 16		Size
2	2	4	4	2	20	16	_	_	_	_	_	_	_			_ _	۔ د		_	10	4	4	4	4	16	_	_	_	2	_	_	12	_	16	20	4	Qty

NOTE: SOME INDIVIDUAL PARTS MAY ONLY BE AVAILABLE AS AN ASSEMBLY