


# AIR MICRO GRINDER

## FOR INDUSTRIAL USE

### MODEL: A052

FREE SPEED..... 54,000 PRM  
 COLLETSIZE ..... 3MM  
 NET WEIGHT ..... 0.33 KGS  
 LENGTH ..... 132MM  
 AIR PRESSURE ..... 90 PSI

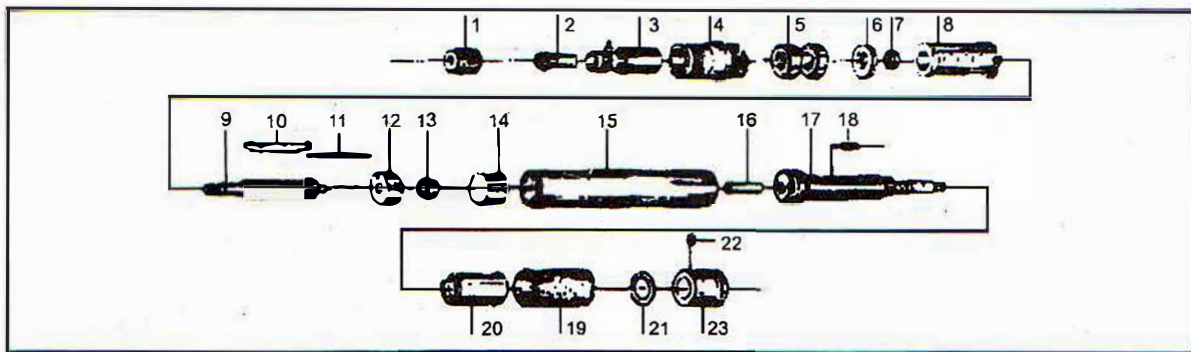

### PART LIST

INDEX NO.	DESCRIPTION	INDEX NO.	DESCRIRTION
CE58-01	CLAMPING NUT	CE58-13	BALL BEARING
CE58-02	COLLET	CE58-14	INTAKE PLATE
CE58-03	FRONT COVER	CE58-15	SLEEVE
CE58-04	COLLET FONDATION	CE58-16	INTAKE STEEL TUBE
CE58-05	BALL BEARING	CE58-17	HOSE PLUG
CE58-06	SPACER	CE58-18	PIN
CE58-07	LATERAL DISC	CE58-19	SLIDING KNOB
CE58-08	CYLINDER	CE58-20	O RING
CE58-09	ROTOR	CE58-21	O RING
CE58-10	FIBRE VANES	CE58-22	SCREW
CE58-11	PIN	CE58-23	REAR END HOLDER
CE58-12	BEARING PLATE		

### OPERATION INSTRUCTION

- Step 1. Set up selected grinding tools on the chuck of the air grinder.  
 2. Connected the air line accessory at the end of air hose.  
 3. Turn on slowly and gradually clockwise the variable speed switch in silver color when start the motor.  
 4. Turn off counter clockwise the variable speed switch in silver color when stop the motor.
- Caution: Please pay attention to operation when turing on the silver variable switch to keep the speed slowly and gradually so that to maintain the motor always in operable condition.