HAFCO

# 2M


**4x SHELVES**

**POWDER-COATED STEEL**

**KEY LOCKING SYSTEM**

**DIMENSIONS: 915 X 612 X 2000MM**

**MAXIMUM SHELF CAPACITY: 50KG**
**TOTAL CAPACITY: 300KG**

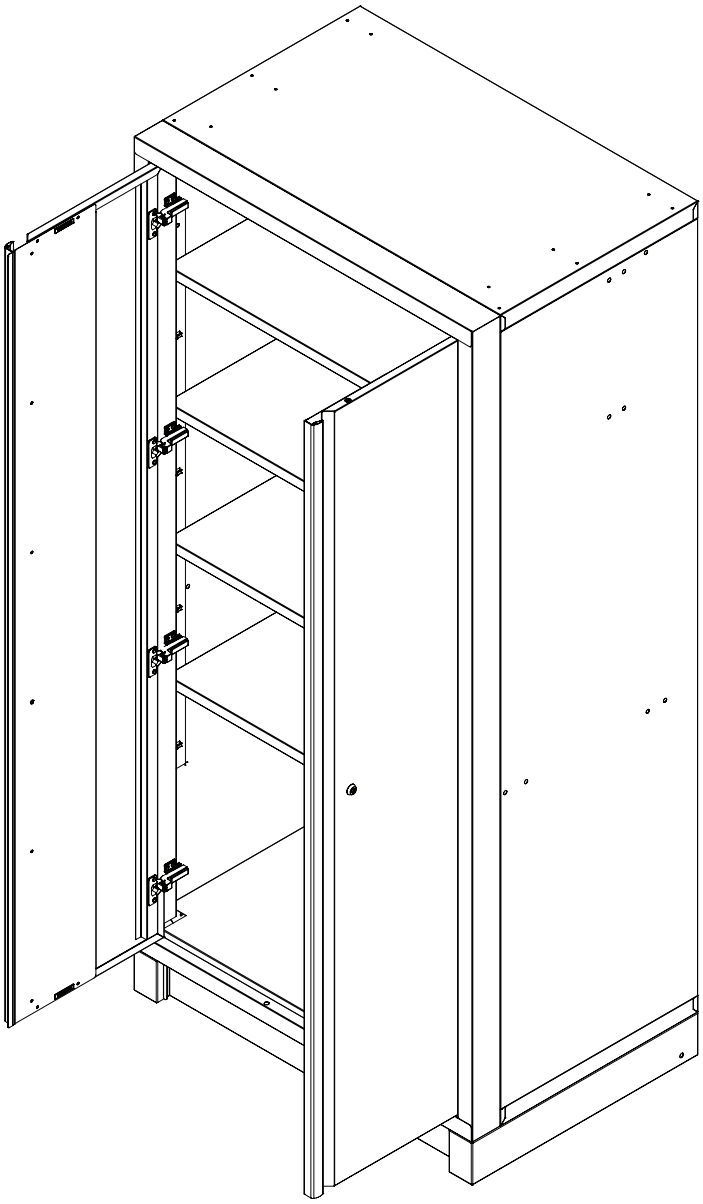

Edition : 1.0
Date: (11/26)

# Instruction Manual

## WORKSHOP SERIES

# 4 SHELF - DOUBLE STORAGE CABINET

# HWSC-2

**2M tall design maximises vertical storage**
**Four adjustable shelves provide flexible and customisable storage**
**Secure lockable single door with key locking system**
**Modular system compatible with the HAFCO HWSS-1, HWSS-2 & HWSS-3 storage systems**

Order Code: (T6522)

# STORAGE CABINET

## *WORKSHOP SERIES*

## BEFORE ASSEMBLING

Please read this instruction manual before assembly.

**CAUTION** | **READ AND FOLLOW THESE NOTES BEFORE ASSEMBLING.**

**Failure to follow these instructions may result in personal injury or product damage.**

### CHECK COMPONENTS

- Before assembling, confirm all parts have been supplied and are in good condition.
- If any parts are missing or damaged, do not assemble. Contact your supplier.

### ASSEMBLY LOCATION

- Assemble on a clean, flat and level surface.
- Use a soft floor covering (e.g. carpet or blanket) to prevent scratches on painted surfaces.
- If assembling on a wooded floor, place a thin protective sheet or cloth on the floor.

### LIFTING AND HANDLING

- Some components are heavy and bulky. Use two people or mechanical lifting aids where required.
- Do not attempt to lift heavy components alone.

### PERSONAL PROTECTION

- Wear gloves during assembly to protect against sharp edges and pinch points.

### KEEP AWAY

- Keep children, infants and pets away from the assembly area.
- This product contains small parts which may be a choking hazard.

### TOOLS

- Use the correct tools as specified in the manual.
- Ensure tools are in good condition and used safely.

### STABILITY


- Ensure the unit is assembled correctly, all fasteners are tightened and the cabinet is stable before use.
- When installed, secure the cabinet to a suitable wall or structure where required.


**DO NOT USE THE CABINET UNTIL IT HAS BEEN COMPLETELY ASSEMBLED, CORRECTLY POSITIONED AND CHECKED FOR STABILITY.**

# STORAGE CABINET

## *WORKSHOP SERIES*


## PARTS LIST

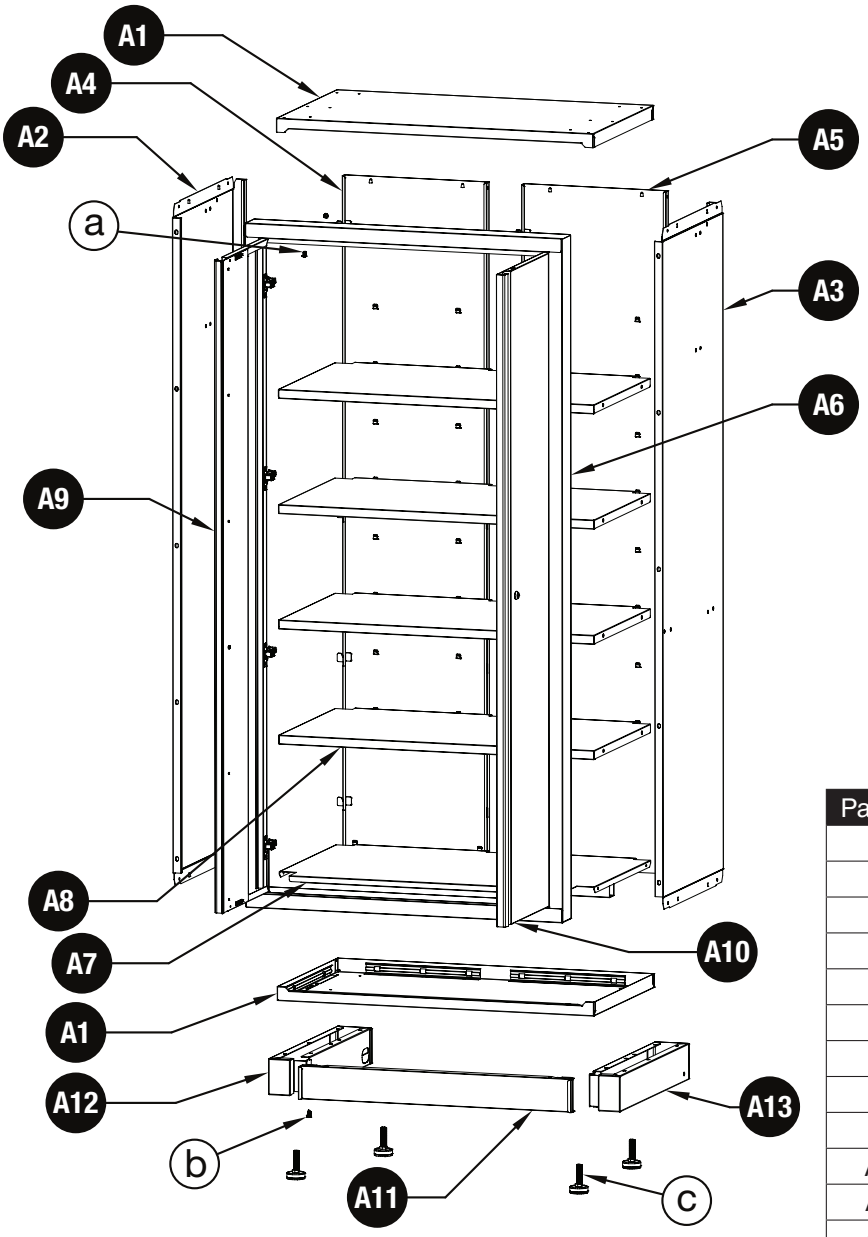

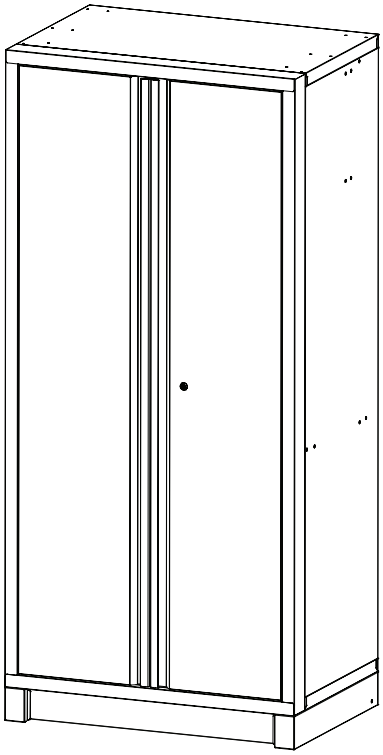



| Part No. | Description | Qty |
|---|---|---|
| A1 | Base | 2 |
| A2 | Left Side | 1 |
| A3 | Right Side | 1 |
| A4 | Left Back | 1 |
| A5 | Right Back | 1 |
| A6 | Door Frame | 1 |
| A7 | Bottom Shelf | 1 |
| A8 | Shelf | 4 |
| A9 | Left Door | 1 |
| A10 | Right Door | 1 |
| A11 | Base Front Panel | 1 |
| A12 | Base Left Part | 1 |
| A13 | Base Right Part | 1 |

## HARDWARE

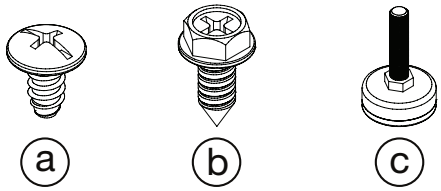


Hardware for connecting to optional cabinets

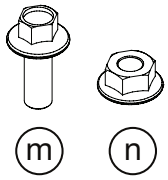


| Part No. | Description | Qty |
|---|---|---|
| a | Screws ST6 .3x12mm | 16+1 |
| b | Screws ST6 .3x16mm | 12+1 |
| c | Adjustable Feet | 4 |
| m | Hex Bolt (M16x16) | 5 |
| n | Nut (M6) | 5 |


## ASSEMBLY INSTRUCTIONS

**HARDWARE NEEDED**





**1** Attach **1x (A12) Base Left Part** & **1x (A13) Base Right Part** to **1x (A1) Base** using **12x (b) ST6 .3x16mm Screws.**

Install **4x (c) Adjustable Feet** into the base assembly as illustrated below.

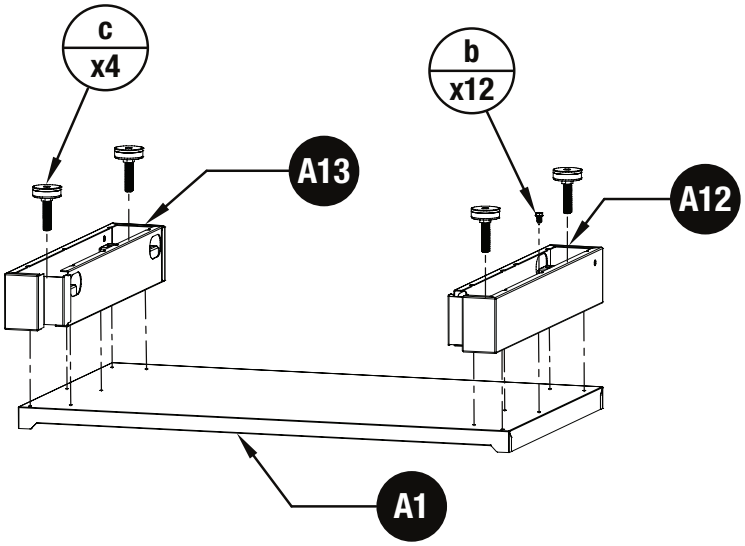


**2** Align the slots on 1x **(A2) Left Side** and 1x **(A3) Right Side** with the locking brackets on 1x **(A4) Left Back Panel** and 1x **(A5) Right Back Panel.**


Slide all panels together, ensuring the locking brackets engage fully and all panels are securely seated, as illustrated below.

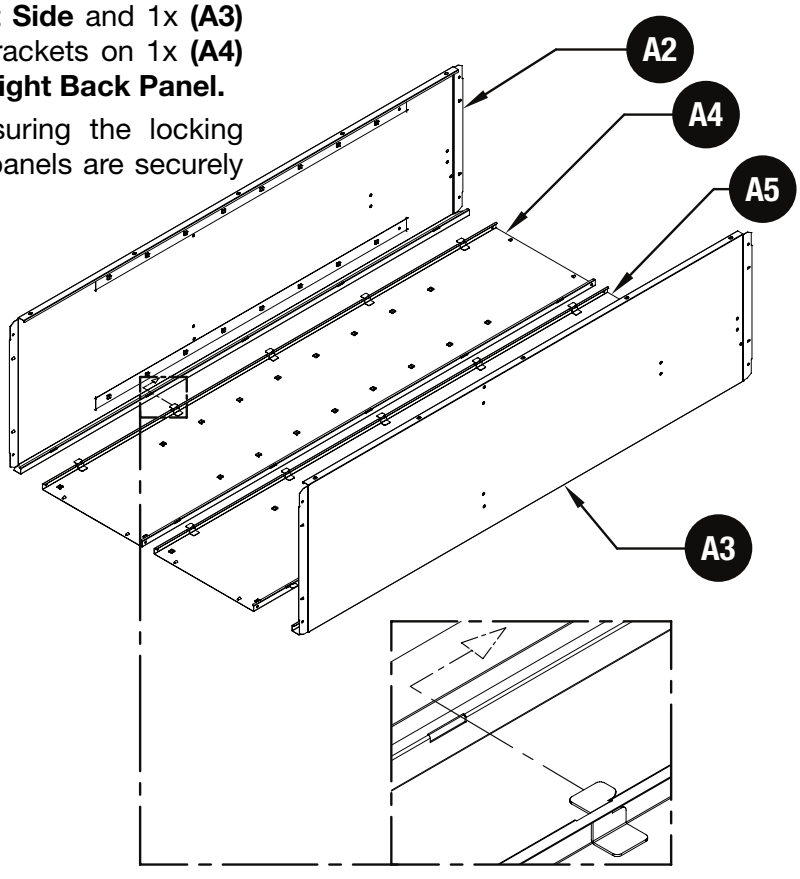

**3**

Attach the **Bottom Base Assembly** (From Step 1) to the bottom of the cabinet frame, ensuring all corners are correctly aligned and securely engaged.


Attach **1x (A1) Base** to the top of the cabinet frame, ensuring all corners are correctly aligned and securely engaged, as illustrated below.

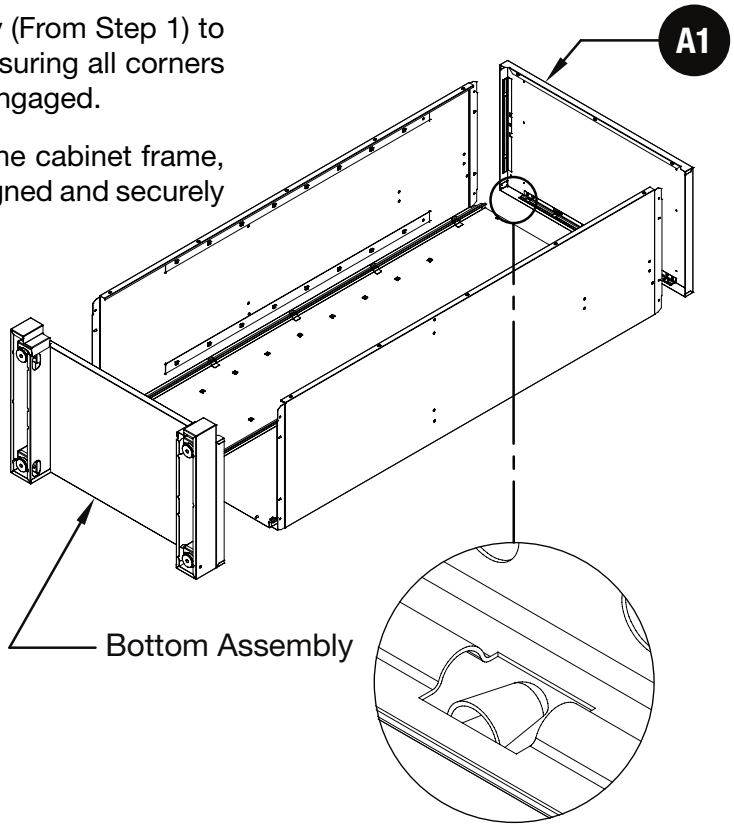


**4**

Attach **1x (A6) Door Frame** to the cabinet frame using **14x (a) ST6 .3x12mm Screws** ensuring all mounting holes are correctly aligned.

Once the door frame is securely fastened, install **1x (A9) Left Door** and **1x (A10) Right Door** into position, as illustrated below.

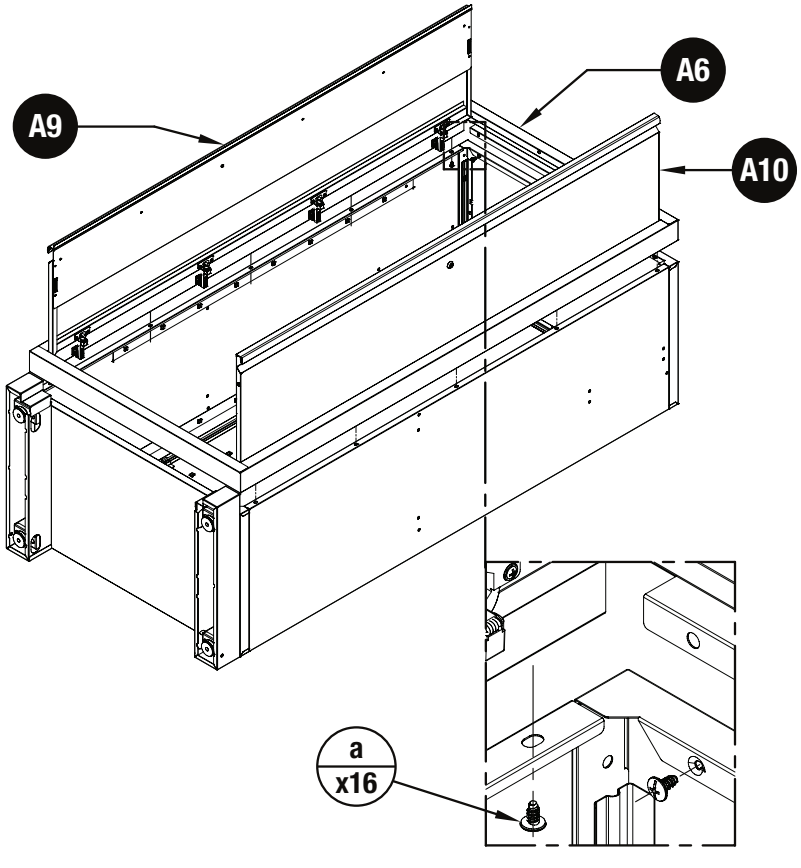


**HARDWARE NEEDED**




14x (a)

**5**


Insert **1x (A7) Bottom Shelf** into the base of the cabinet, ensuring all corners are correctly seated and the shelf sits flat and securely in position.

Install **4x (A8) Shelves** at your desired heights by aligning the shelf tabs with the slotted supports. Lower each shelf firmly into position, ensuring all corners are securely engaged and the shelves sit level, as illustrated below.

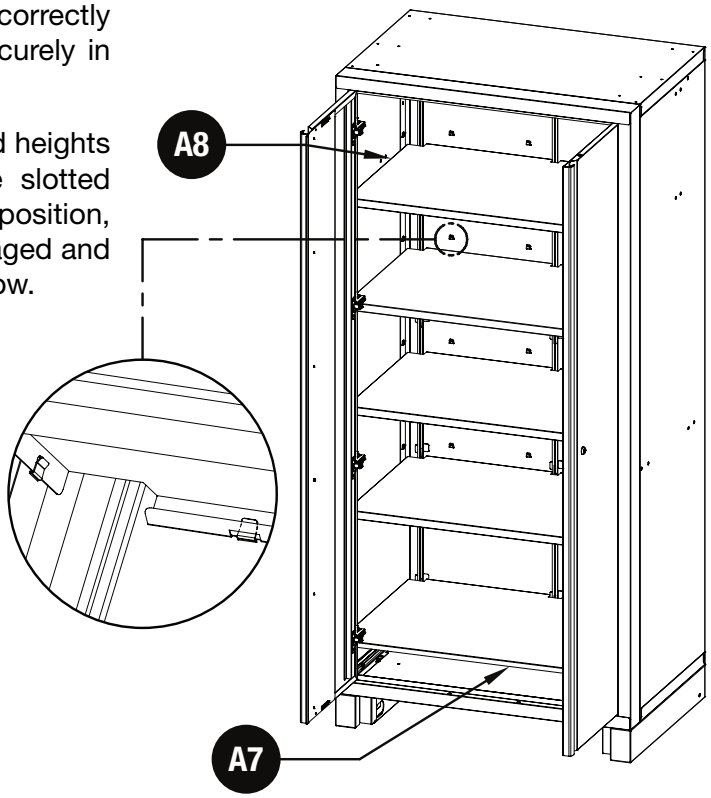




**6**


Align **1x (A11) Base Front Panel** with the bottom front of the cabinet. Push the panel firmly into position, ensuring it engages securely, as illustrated below.

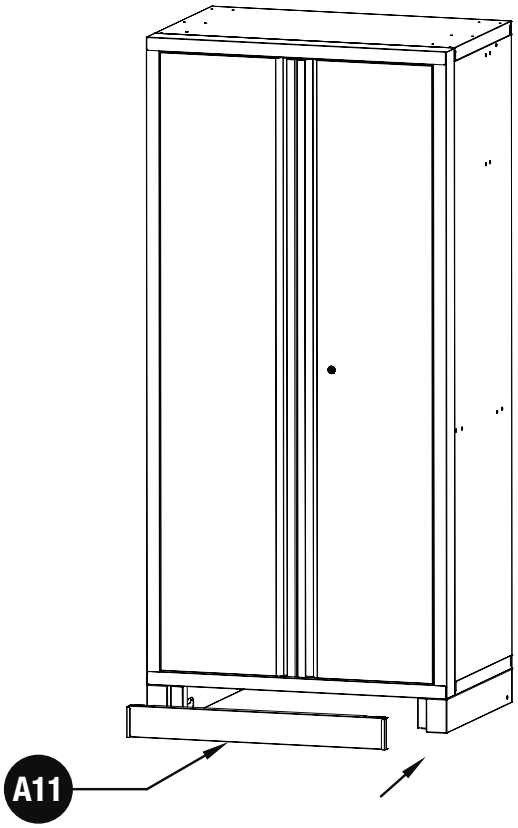


## DIMENSIONS

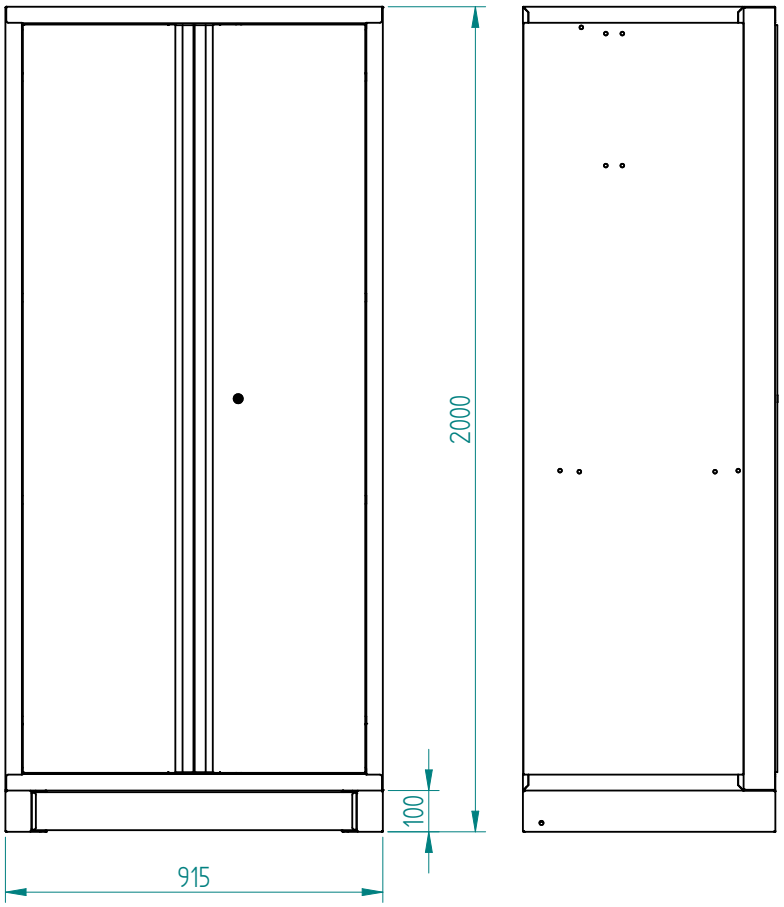


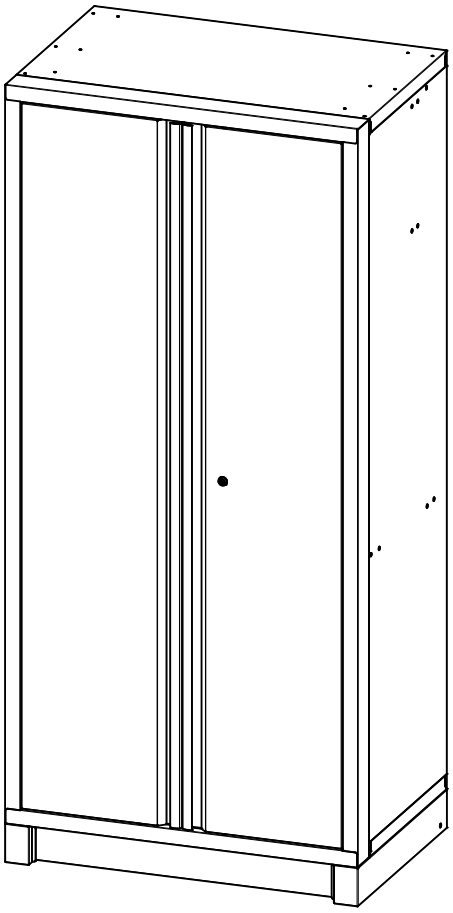
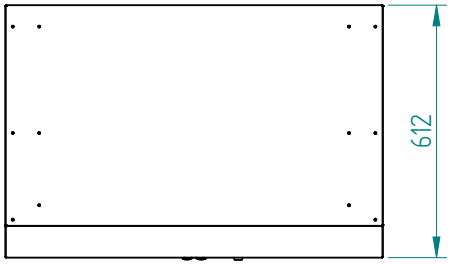
## DIMENSIONS

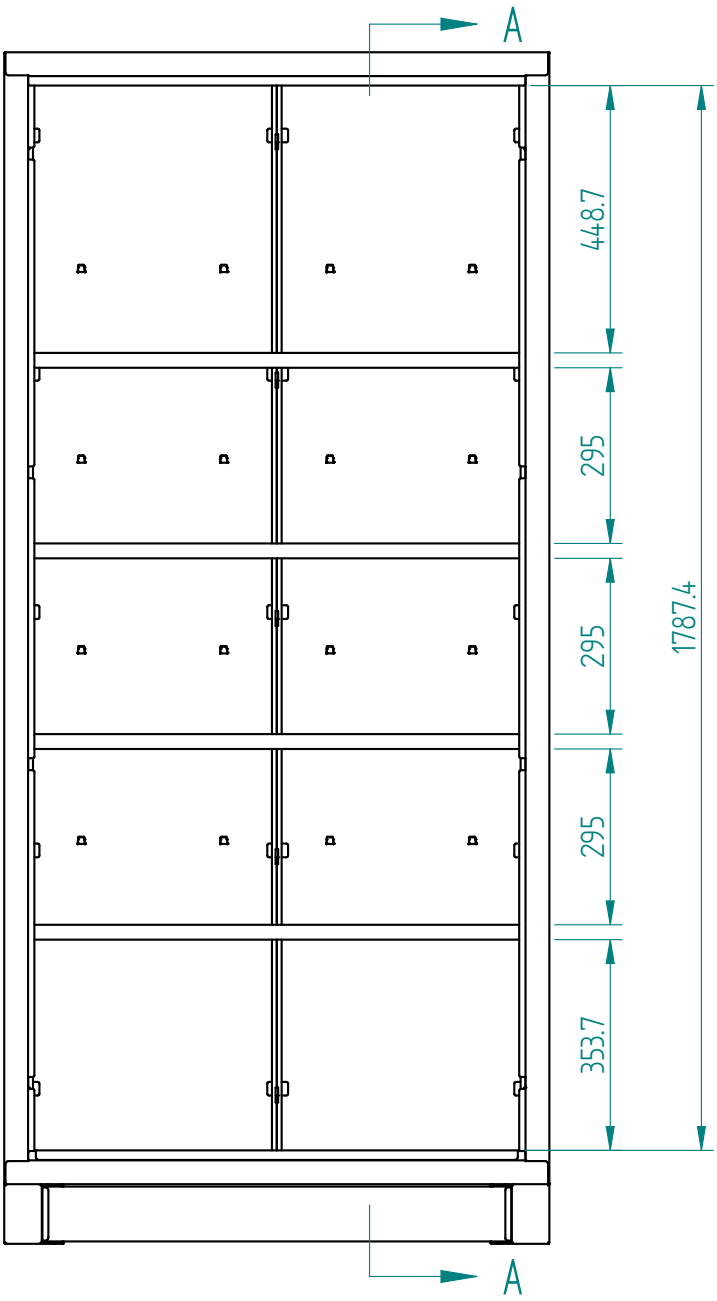

## NOTES:

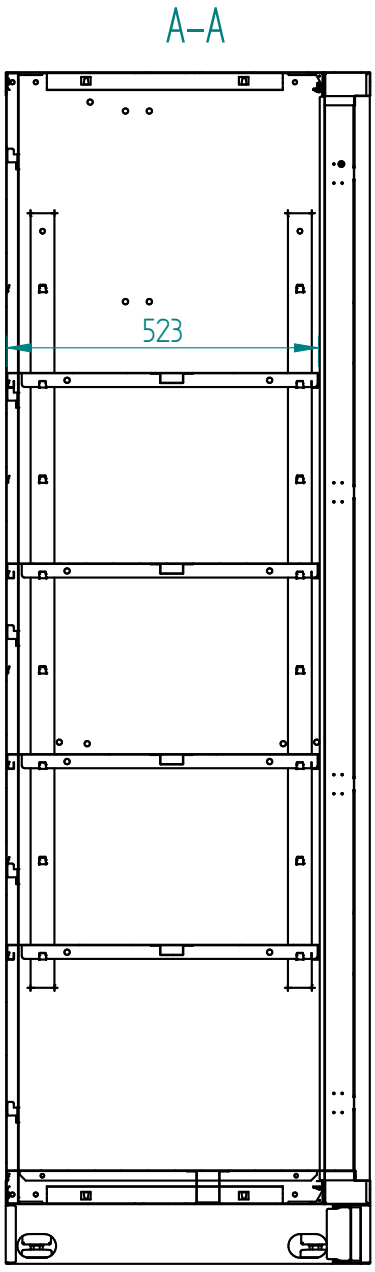

## ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

**Imported by**

HARE&FORBES MACHINERYHOUSE

**Australian Distributor**

Hare & Forbes
Machineryhouse
Sydney - Melbourne
Adelaide - Brisbane - Perth

Ph: 1300 202 200
**www.machineryhouse.com.au**

MACHINERYHOUSE

**New Zealand Distributor**

Machineryhouse
Auckland
Christchurch

Ph: 0800 142 326
**www.machineryhouse.co.nz**