

# INSTRUCTION MANUAL

## MC-370F Soco Cold Saw, Includes Stand (415V) 110 x 110mm



S840

## Model : MC-370F Trouble Shooting Guide

Problems	Sources	Solutions
1. Machine will not start	<ul style="list-style-type: none"> <li>a. Main power cable is not connected to the power source.</li> <li>b. Feed lever switch is broken, or the control wire is disconnected.</li> <li>c. The transformer is shorted and broken.</li> <li>d. The Phase Converter is broken (if using Phase Converter).</li> </ul>	<ul style="list-style-type: none"> <li>a. Check power supply.</li> <li>b. Use multi meter to test the feed lever switch and the control wire.</li> <li>c. Use multi meter to test the transformer. If the output value is incorrect, the transformer is broken. Replace it when needed.</li> <li>d. Use multi meter to test the Phase Converter. Replace the Phase Converter when needed.</li> </ul>
2. Motor will not start	<ul style="list-style-type: none"> <li>a. One or more of the 3 phases of the main power is not connected.</li> <li>b. The Select Switch is shorted and broken.</li> <li>c. The Solenoid Switch is not well connected. (One or more of the connecting wires is not connected).</li> <li>d. The motor is shorted or broken.</li> </ul>	<ul style="list-style-type: none"> <li>a. Use multi meter to test if all of the 3 phases are connected.</li> <li>b. The Select Switch controls the high or low speed. If one of the speeds is not working, the select switch is broken. To test, connect power supply directly to the motor to see if the select Switch is broken. Replace when needed.</li> <li>c. Use multi meter to test the Solenoid Switch. If one or more of the connecting wires is not connected, replace the Solenoid Switch.</li> <li>d. Use multi meter to test the 3 phases of the main power. If all 3 phases are normal, the motor may be broken. Replace it when needed.</li> </ul>
3. Coolant Pump not working	<ul style="list-style-type: none"> <li>a. Inadequate coolant.</li> <li>b. The Coolant Pipe Check Valve is clogged.</li> <li>c. The Coolant Nozzle is clogged.</li> <li>d. Coolant pump is reversed or burned.</li> </ul>	<ul style="list-style-type: none"> <li>a. Refill coolant (up to 8/10 of the tank).</li> <li>b. Clean Coolant Pipe Check Valve, or replace it.</li> <li>c. Clean Coolant Nozzle or replace it.</li> <li>d. If the coolant pump is reversed, switch any 2 of the 3 phases. Replace the coolant pump if it is burned.</li> </ul>
4. Clamping Vise cannot be moved	<ul style="list-style-type: none"> <li>a. The rail shaft is rusted.</li> <li>b. Accumulated metal fragments around the screw shaft or the nuts.</li> <li>c. The holes on the Clamping Vise</li> </ul>	<ul style="list-style-type: none"> <li>a. Take off the rail shaft and clean up the rust.</li> <li>b. Take off the screw shaft and the nuts on the shaft. Clean up the metal fragments on these parts.</li> <li>c. Test by moving the whole Clamping Vise Set.</li> </ul>

	are worn out, or the rail shaft is worn out.	If it is loose (the set is worn out), replace it with a new set.
5. Broken or Chipped Blade	<ul style="list-style-type: none"> <li>a. Incorrect selection of the blade (incorrect number of teeth).</li> <li>b. The work piece is loose, and the locking nut in front of the handle is loose.</li> <li>c. The vise is worn out and loose.</li> <li>d. The gear inside of the machine head is worn out. As a result, the blade is loose (if moved by hand, the blade rotates too much).</li> <li>e. The blade is installed facing the wrong direction (The sharpened end of the teeth must face the same direction toward which the blade rotates).</li> <li>f. The blade is loose.</li> </ul>	<ul style="list-style-type: none"> <li>a. The selection of the blade and the number of teeth on the blade depend on the material of the work piece. Please consult our service centers for the correct selection of the blade.</li> <li>b. Make sure the work piece is properly secured, and the locking nut in front of the handle is properly placed and tightened.</li> <li>c. Replace the vise.</li> <li>d. Replace the gear. Please contact our service centers for replacement.</li> <li>e. When installing the blade, make sure the sharpened end of its teeth faces the correct direction. Please follow the arrow instruction.</li> <li>f. Make sure the blade is properly secured.</li> </ul>
6. Inaccurate Cutting Angle	<ul style="list-style-type: none"> <li>a. The blade vibrates too much.</li> <li>b. If the blade is too thin, it may not cut in the correct angle.</li> <li>c. The Clamping Vise Set is worn out and shakes.</li> <li>d. The handle on the rotary support is loose.</li> <li>e. The screws used to secure the vise body are loose.</li> </ul>	<ul style="list-style-type: none"> <li>a. Can be identified by looking at the blade or testing with measuring equipment.</li> <li>b. Replace with thicker blade.</li> <li>c. Replace the Clamping Vise Set.</li> <li>d. Push the handle to the right and tighten it.</li> <li>e. Readjust and tighten and screws on the vise body.</li> </ul>

## CONTENTS

1.	SAFETY PRECAUTION-----	3
2.	SPECIFICATION AND OUTLINE DRAWING-----	4
	2.1 Technical Data	
	2.2 Cutting Capacity	
	2.3 Accessory	
	2.4 Outline Description	
3.	INSTRUCTION OF INSTALLATION-----	8
	3.1 Unpacking and Inspection	
	3.2 Lifting, Moving and Anchoring	
	3.3 Connecting Electric Power	
	3.4 Filling coolant	
	3.5 Procedure to install the stopper	
4.	FUNCTION OF CONTROL DEVICES-----	10
5.	INSTRUCTION OF OPERATION-----	11
	5.1 Preparation for Operation	
	5.1.1 Adjustment of Clamping Vise	
	5.1.2 Installation of Saw Blade	
	5.1.3 Adjustment of Saw Blade Low Stop Position	
	5.1.4 Adjustment of Saw Blade Rotating Speed	
	5.1.5 Adjustment of Miter Cutting	
	5.2 Steps of Operation	
	5.3 Daily Inspection and Maintenance	
6.	ELECTRICAL SYSTEM DIAGRAM-----	13
7.	PARTS DRAWING AND LIST-----	14

## 1. SAFETY PRECAUTION

- (1) Operator of the machine shall read the operation instruction carefully and understand the safety requirement and the function of all parts of machine thoroughly.
- (2) Only the authorized and dedicated operators are allowed to operate the machine.
- (3) The machine is designed and manufactured to meet the applicable safety regulation of your country. Please do not remove or modify any safety device or parts, such as safety cover and guard of saw blade, emergency stop button, etc.
- (4) Assure the correct electric power, such as capacity of voltage, amperage and protection, is connected to the machine before operation.
- (5) Please wear a pair of goggles when operating the machine.
- (6) Please push the emergency stop button and turn off the main switch immediately when any malfunction or emergency situation should occur.
- (7) Please disconnect the electric power when install, maintain, repair or disassemble the machine.
- (8) Please pay extreme attention to adjust or exam the machine with electric power has been connected.
- (9) Please operate the machine in a bright and clean environment
- (10) Please clean and maintain the machine periodically to assure the machine running in proper condition.
- (11) Do not operate the machine excess its allowable condition.

## 2. SPECIFICATIONS AND OUTLINE DRAWING

### 2.1 Technical Data

MC-370F TECHNICAL DATA		
	A-TYPE	B-TYPE
MAIN MOTOR	3/2 HP, 2/4 POLE	2/1.4 HP, 4/8 POLE
ARBOR RPM (60 HZ)	44/22	22/11
SAW BLADE TYPE	HIGH SPEED STEEL BLADE	
SAW BLADE SIZE	OD: 300/350/370 mm	
COOLING PUMP	1/8 HP	
AIR PRESSURE	--	
WEIGHT	260 KG	

### 2.2 Cutting Capacity


MC-370F CUTTING CAPACITY( USE $\varphi$ 370 BLADE) mm		
FOR MILD STEEL	CUTTING ANGLE	
	90°	45°
ROUND TUBE	$\varphi$ 115	$\varphi$ 115
SQUARE TUBE	110×110	100×100
ANGLE	110×110	100×100
RECTANGLE	110×110	100×100
SOLID ROUND TUBE	$\varphi$ 75	$\varphi$ 50
SOLID SQUARE TUBE	75x75	50x50

### 2.3 Accessory

- (1) One set simple adjustable length stopper
- (2) One package of hand tool


## 2.4 Outline Description

### (1) Front View

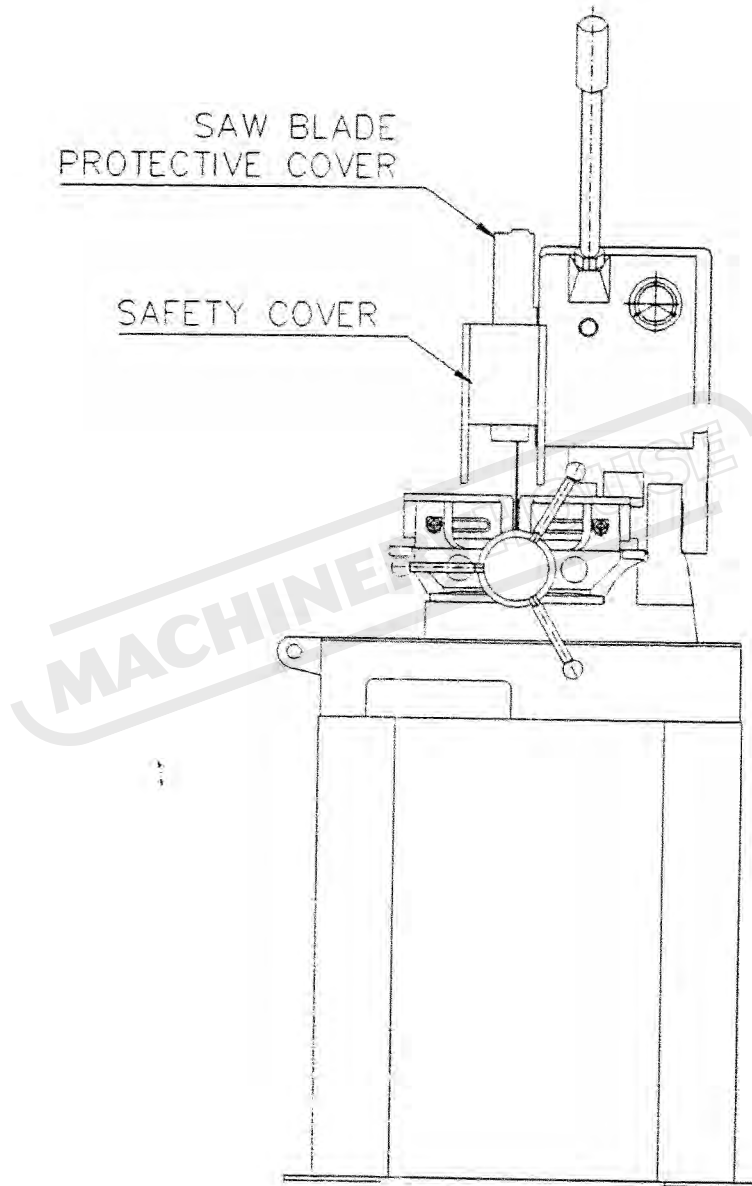

FRONT VIEW


**(2) Right Side View**

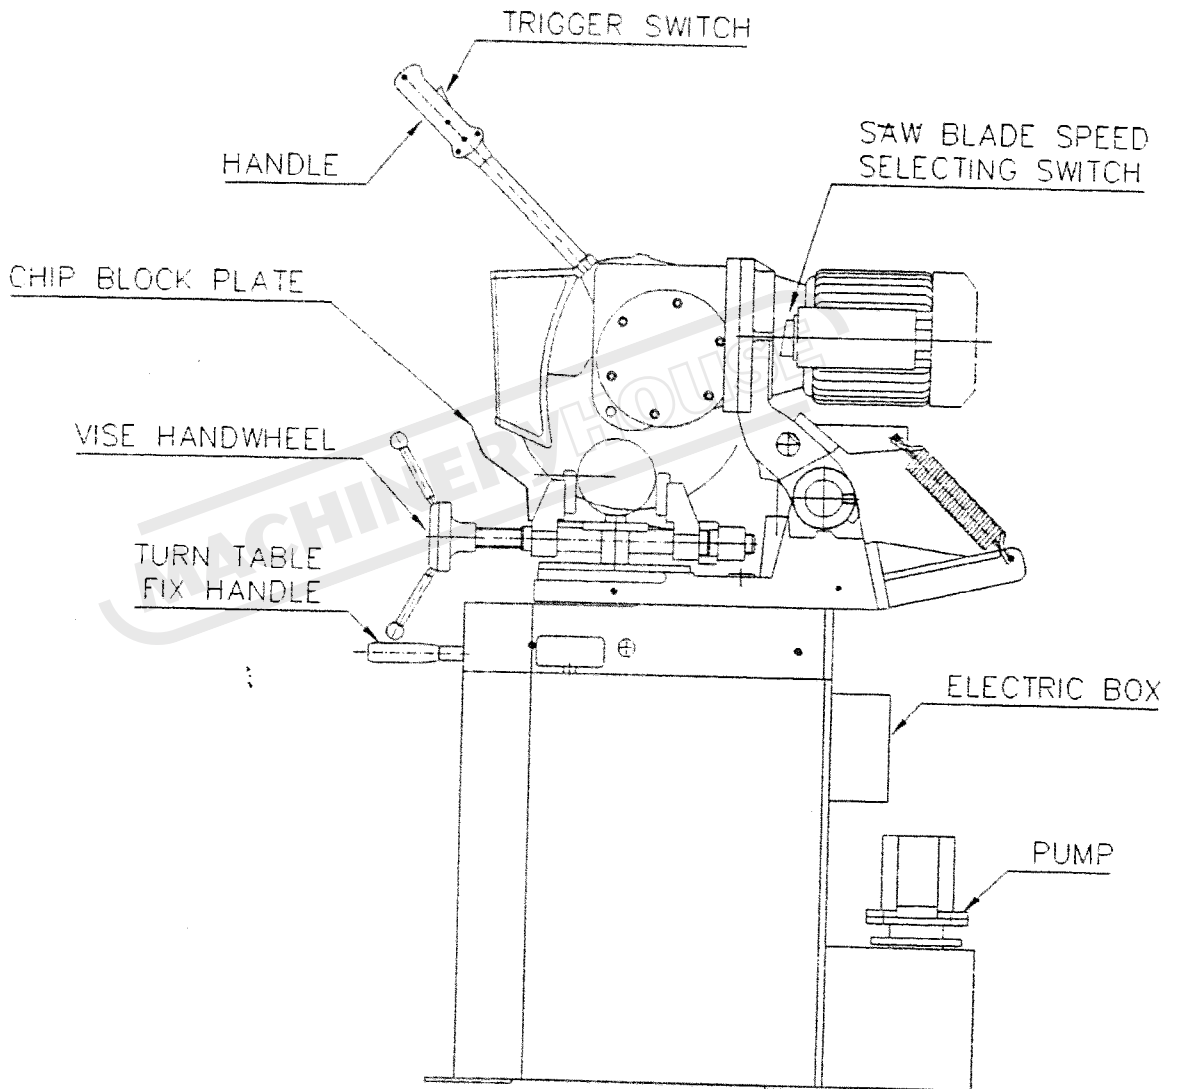

RIGHT SIDE VIEW



**(3) Left Side View**

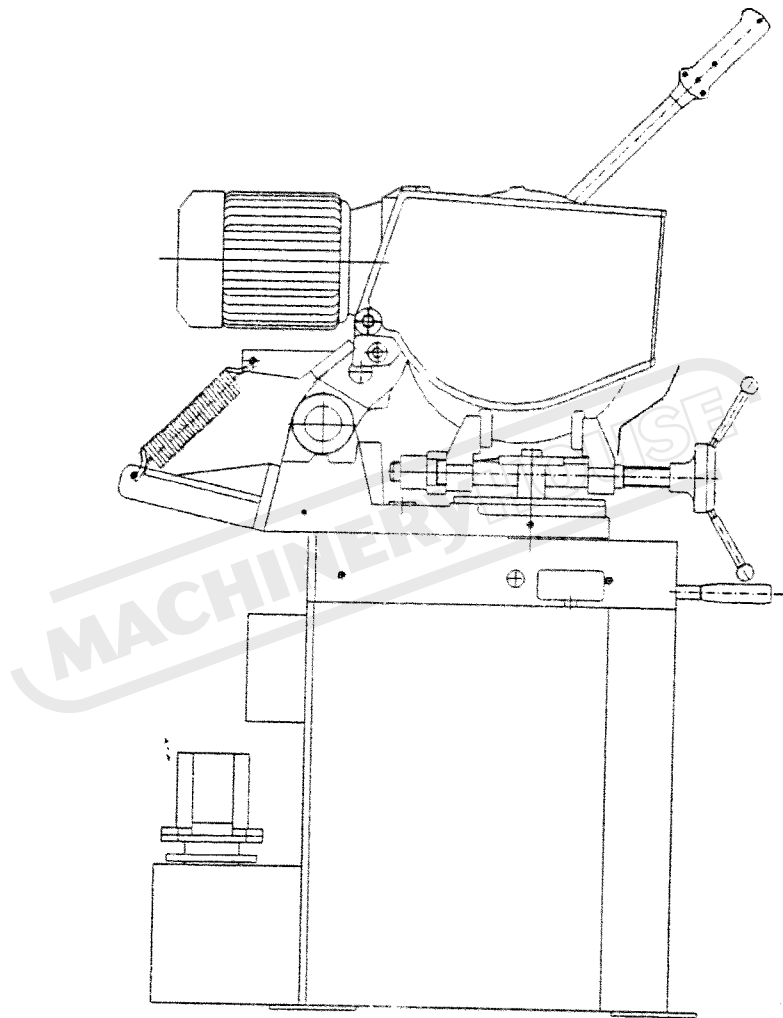

LEFT SIDE VIEW

## 3. INSTRUCTION OF INSTALLATION

**Note: Please read the instruction carefully before installation.**

**If having any question please contact your dealer for prompt service.**

### 3.1 Unpacking and Inspection

- (1) Check if there is any damage on the wooden case or the plastic bag that used to pack the machine. Should any damage be found on the machine, please claim for the damage against the delivery or insurance company.
- (2) Check the machine and accessories against the packing list. Should any shortage, please contact your dealer.

### 3.2 Lifting, Moving and Anchoring

- (1) Lifting eyebolts have been mounted on the machine. Please use hoist and sling devices with enough capacity to lift and move the machine.
- (2) Slots, designed at the bottom of the machine, can be used by forklift to move the machine.
- (3) Please watch over the obstacle or personnel that may be on the way of moving the machine.
- (4) Place the machine on a horizontal foundation. Use anchor bolt and nut to fix the machine on the foundation.

### 3.3 Connecting Electric Power

**Note:**

- (1) **Assure the main power switch is at "OFF" position and the saw blade motor speed select switch is at "OFF" position before connecting the machine to electric power source**
  - (2) **Do not install saw blade on the main shaft when checking the rotational direction of the main shaft.**
- 
- (1) Only qualified electrician can connect electric power.
  - (2) The voltage, amperage and protection capacity of the power source shall meet the requirement of the machine.

- (3) Check the rotation of the saw blade shaft (arbor). Change over two conductors in junction box if the direction of rotation does not consist with the direction of the label on the saw blade safety cover.

### 3.4 Filling coolant

- (1) Pour the diluted sawing oil on the table of the machine. The solution will flow into the coolant tank.
- (2) The dilute ratio (water: oil) is 5:1 for hard or high alloy steel and 10:1 for mild steel.

### 3.5 Procedure to install the stopper

- (1) Mount the stopper arm at the "0" point on the stopper support beam as illustrated on following figure1.
- (2) Put the stopper support beam into the hole in the base plate.
- (3) Fix the stopper support beam when the stopper is just touching the sawblade as illustrated on following figure2.

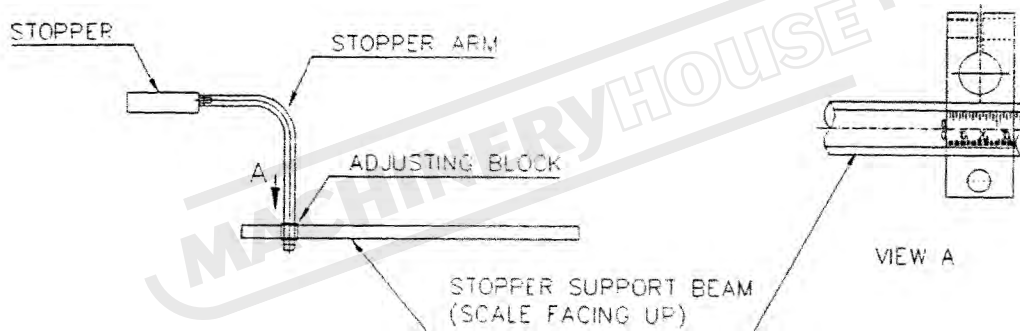


FIGURE 1

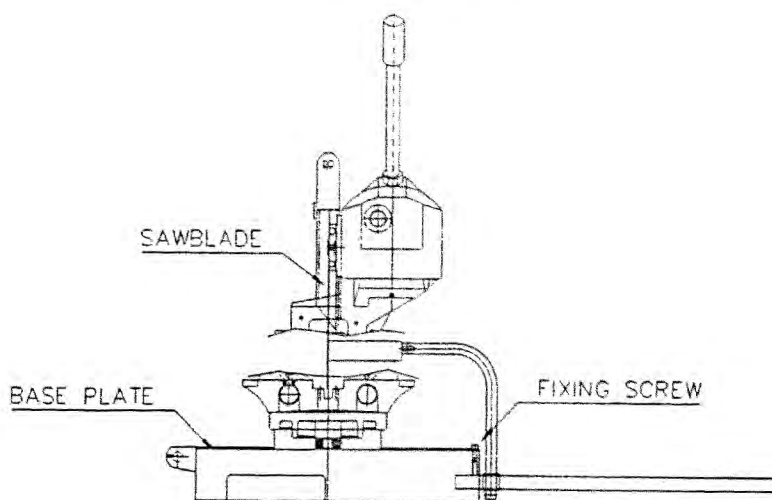


FIGURE 2

## 4. FUNCTION OF CONTROL DEVICES

### (1) Trigger Switch

This is an "ON-OFF" two-position trigger Switch on the handle to connect or disconnect power to the machine. The main (saw blade) motor and coolant motor run when this switch is pressed. The above motor stop when this switch is released.

### (2) Saw Blade Motor Speed Select Switch

This is a "LOW-OFF-HI" three-position level switch on the right side of the motor for selecting a suitable speed for saw blade to cut material.

MACHINERYHOUSE

## 5. INSTRUCTION OF OPERATION

### 5.1 Preparation for Operation

#### 5.1.1 Adjustment of the Clamping Vise

- (1) Release the handle.  
(Cutting head shall be at up position)  
(Saw blade motor shall stop.)
- (2) Turn the hand wheel of clamping vise counter-clockwise to open the vise.
- (3) Put a work piece into the clamping area of vises.
- (4) Turn the hand wheel of clamping vise clockwise to close the vise and fasten work piece.
- (5) Turn the hand wheel of clamping vise 1/2 (half) turn counter-clockwise. This is the ready position.

#### 5.1.2 Installation of the Saw Blade

- (1) Release the handle.
- (2) Turn off the saw blade motor speed select switch.
- (3) Open saw blade safety cover.
- (4) Remove the clamping flange from the saw arbor.
- (5) Clean the clamping surfaces of flange and arbor free from any dirt or chips.
- (6) Clean the clamping area of the saw blade.
- (7) Mount saw blade on the arbor. Align the pinholes of saw blade and arbor. Put the clamping flange on the saw blade, and tighten the center bolt.  
**Note:** The rotation of saw blade shall be **counter-clockwise** while looking at the mounting surface. There is a directional mark labeled on the protection cover.
- (8) When lock the center bolt, **keep the front part of saw blade downward** to eliminate the gap between pin and pinhole.
- (9) Close the saw blade safety cover.

**Note:** The following Charts of " Number of Saw Blade Tooth Selection " are for reference.

Number of Saw Blade Tooth (T) for Mild Steel Solid Bar Cutting					
Wall Thickness of Tube ( mm )	Diameter of Saw Blade ( mm )				Remark
	Φ250	Φ275	Φ300	Φ350	

0.6~0.8	T=280	280	300	320	For Tube Diameter $D \geq 10$ mm
0.8~1.0	240	280	280	320	
1.0~1.2	220	240	240	280	
1.2~1.6	200	220	240	240	
1.6~2.0	180	200	220	220	
2.0~2.5	150	180	180	200	$D \geq 15$ mm
2.5~3.5	120	150	150	180	$D \geq 20$ mm
3.5~4.5	90	120	120	150	$D \geq 25$ mm
4.5~5.5	80	80	90	120	$D \geq 30$ mm
5.5~7.0	64	64	80	90	$D \geq 40$ mm

For Wall Thickness  $\geq 2$  mm, the Formula for Number of Tooth T is as following

$$T = 2 \times (\text{Diameter of Saw Blade} \times 3.14) \div (\text{Wall Thickness of Tube})$$

Number of Saw Blade Tooth (T) for Mild Steel Solid Bar Cutting					
Size of Bar ( mm )	Diameter of Saw Blade ( mm )				
	$\Phi 250$	$\Phi 275$	$\Phi 300$	$\Phi 350$	
6~10	T=180	200	200	220	
10~14	160	160	180	200	
14~18	150	160	160	180	
18~22	120	150	150	160	
22~28	90	90	120	160	
28~35	80	80	90	120	
35~45	70	70	80	90	
45~50	64	64	70	80	

For size of Bar  $\geq 38$  mm, the Formula for Number of Tooth T is as following

$$T = 4 \times (\text{Diameter of Saw Blade} \times 3.14) \div (\text{Size of Bar})$$

1. For stainless steel, the number of tooth is one grade more than mild steel.
2. For aluminum and copper, the number of tooth is one grade less than mild steel.
3. For 45° miter cutting, the number of tooth is one grade less than 90° cutting.

### 5.1.3 Adjustment of the Saw blade Low Stop Position

- (1) Pull down the handle to the position that the saw blade just breaks through the work piece.
- (2) Adjust the bolt and lock nut that is under the saw head to just stop the saw head going down.

### 5.1.4 Adjustment of the Saw Blade Rotating Speed

Turn the saw blade speed-selecting switch to one of "LOW", "HI" or "OFF" position.

### 5.1.5 Adjustment of the Miter Cutting

- (1) Push the turning table fixing handle leftward.
- (2) Turn the turning table to the required angle.
- (3) Push the fixing handle rightward.

## 5.2 Steps of Operation

- (1) Prepare the machine as states in Section 5.1.
  - (2) Put a work piece into vise.
  - (3) Turn the clamping vise hand wheel to clamp the work piece.
  - (5) Pull down the handle and press trigger switch.
  - (6) The saw blade starts rotating. The coolant starts flowing out of nozzle.
  - (7) Continue to pull down the handle until the saw blade cuts off the work piece.
  - (8) Release the trigger switch and let the saw head moves up slowly.
  - (9) Turn the clamping vise hand wheel to release the work piece.
- Repeat step (2) through (9) to finish the job.

**NOTE: Release the trigger switch immediately if any malfunction or abnormal situation happens.**

## 5.3 Daily Inspection and Maintenance

### 5.3.1 Gear Box of Cutting Head

- (1) Change gear oil (SAE 140) every six months (3.7 liters are required).
- (2) Check temperature of the gearbox during continuous operation.

### 5.3.2 Chip Collecting Tray

Remove chip from collecting tray everyday.

## 6. ELECTRICAL SYSTEM DIAGRAM


MC-275F

\*\*\*\*\*

HOEX03-0004 (1/1)

\*\*\*\*\*

序號	件 號	品 名	用 量	規 格	序號	件 號	品 名	用 量	規 格
018	HOA003	進刀把手蓋 B	1						
019	HOA004	進刀把手護套	1						
021	HOA006	進刀把手蓋 A	1						
023	HOA007	進刀把手(染黑)	1	直					

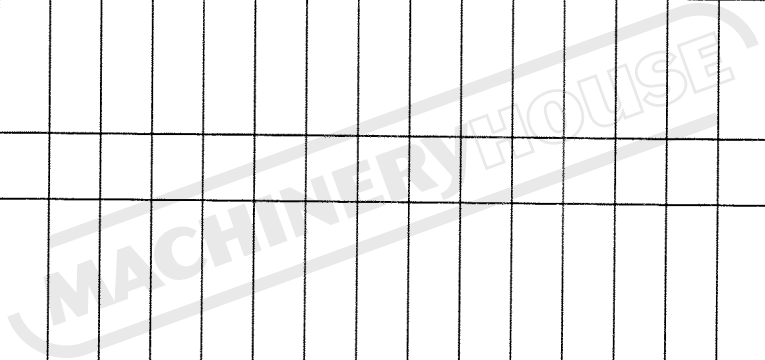







\*\*\*\*\* MC-275F \*\*\*\*\*

HOEX14-0002 (1/1)

序號	件號	品名	數量	規格	序號	件號	數量	規格
013	HOK004	擋柱(染黑)	1					
016	HOK003	擋尺柱(染黑)	1					
018	HOK002	調整塊(染黑)	1					
019	HOK001	擋尺(電鍍)	1					

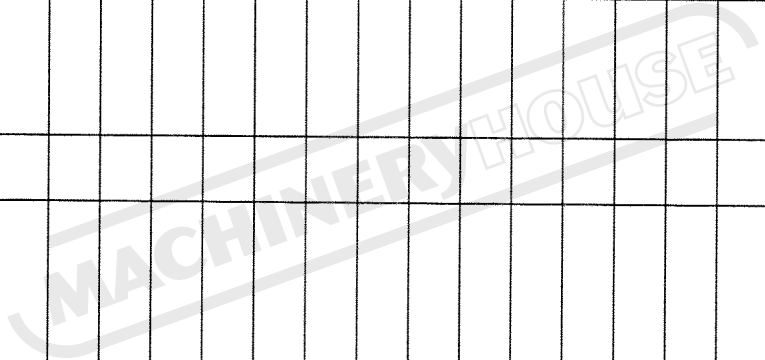


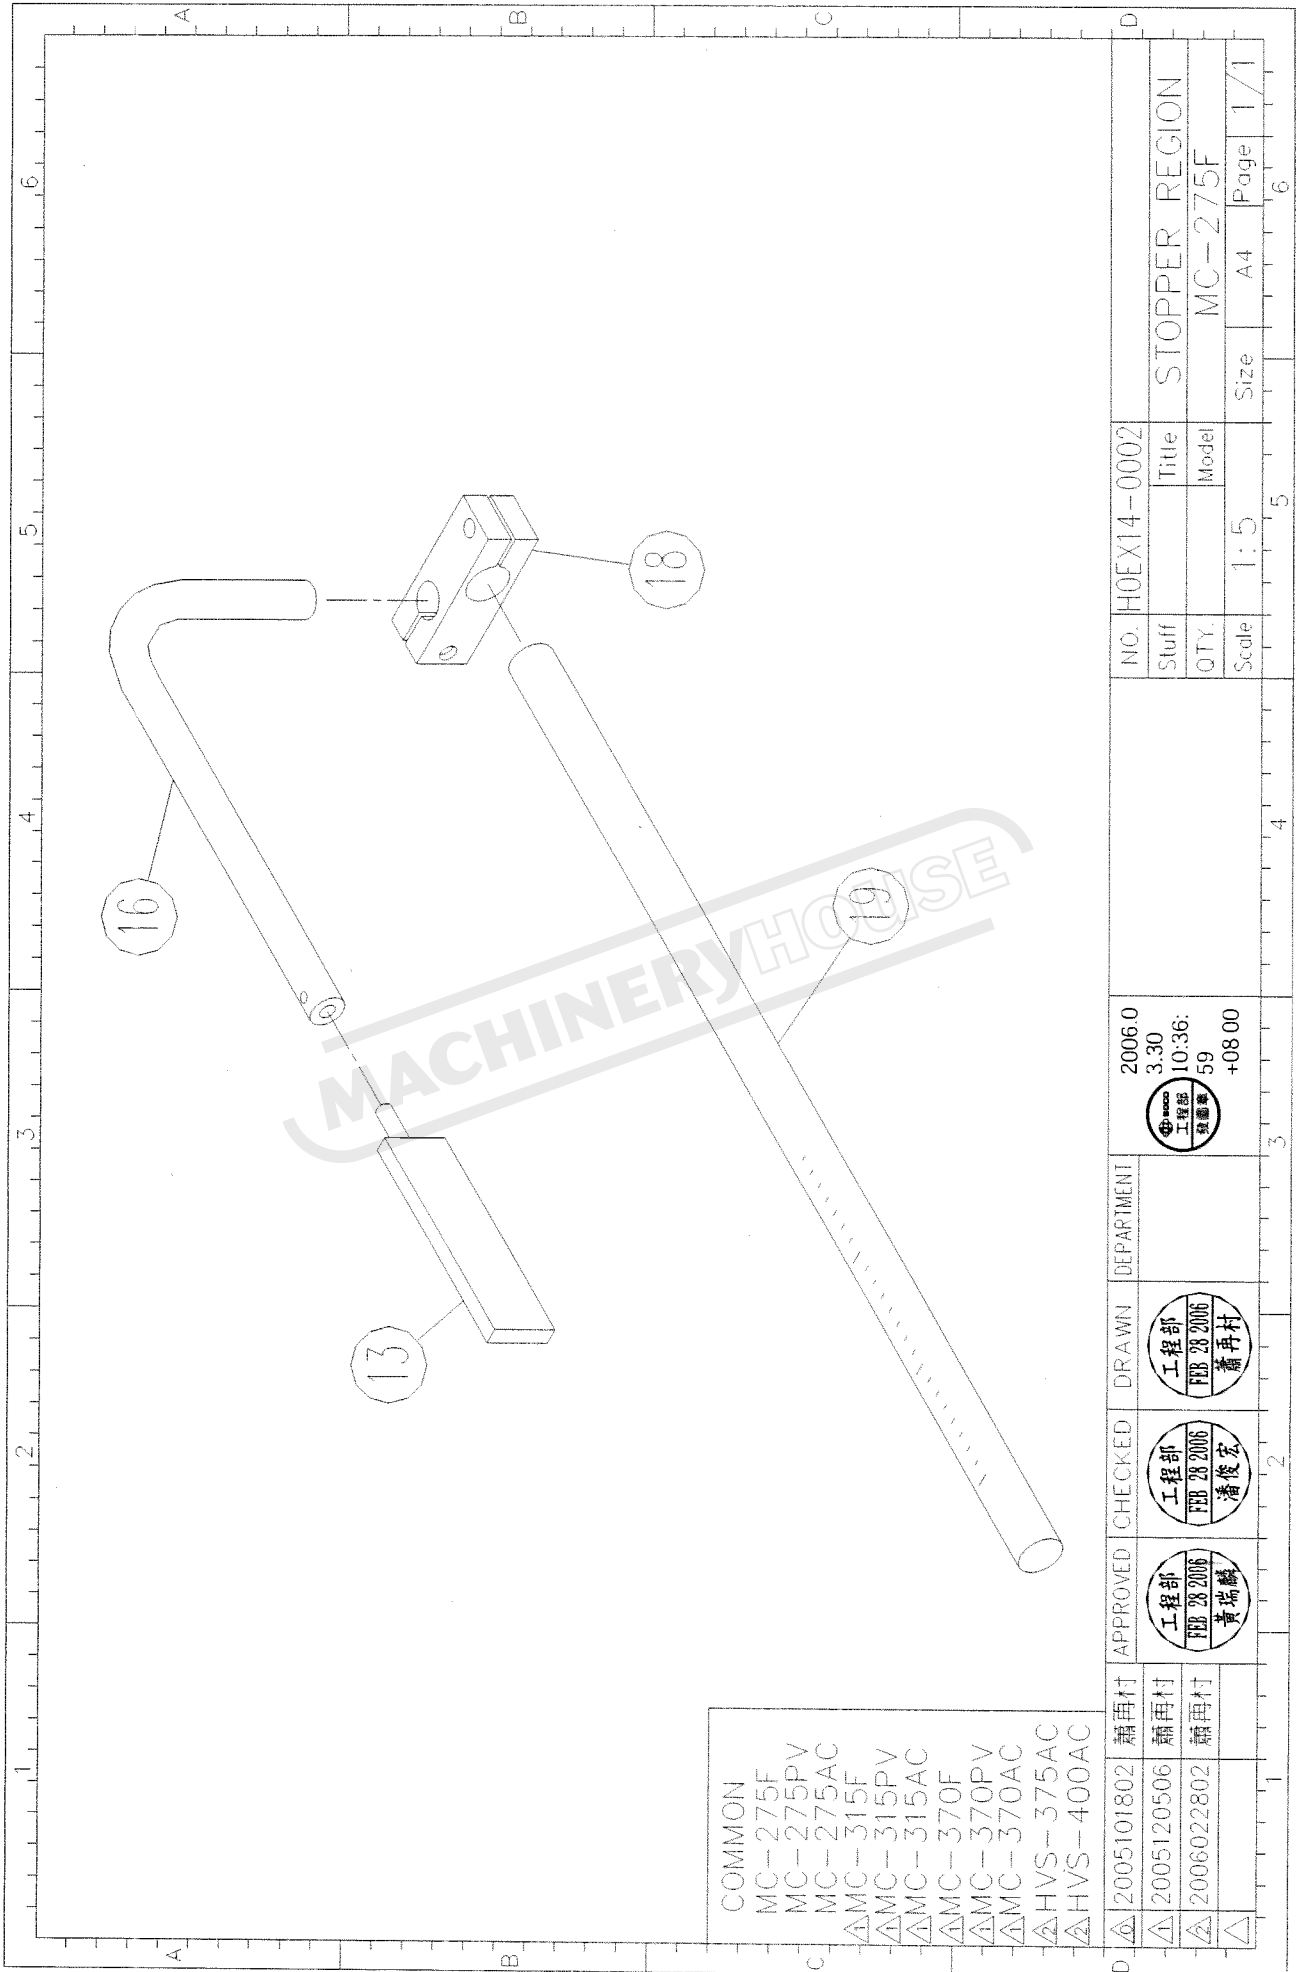

COMMON
MC-275F
MC-275PV
MC-275AC
△AMC-315F
△AMC-315PV
△AMC-315AC
△AMC-370F
△AMC-370PV
△AMC-370AC
△HVS-375AC
△HVS-400AC

NO. H0EX14-0002	STOPPER REGION	
Stuff	Title	Model
QTY.	MC-275F	
Scale 1:5	Size A4	Page 1/1
2006.0	3.30	10:36
④ 工程部 張慶雲	59	+0800
APPROVED	CHECKED	DRAWN
④ 工程部 FEB 28 2006 黃瑞麟	④ 工程部 FEB 28 2006 潘俊宏	④ 工程部 FEB 28 2006 蕭再村
DEPARTMENT		
NO. 2005101802	蕭再村	
NO. 2005120506	蕭再村	
NO. 2006022802	蕭再村	




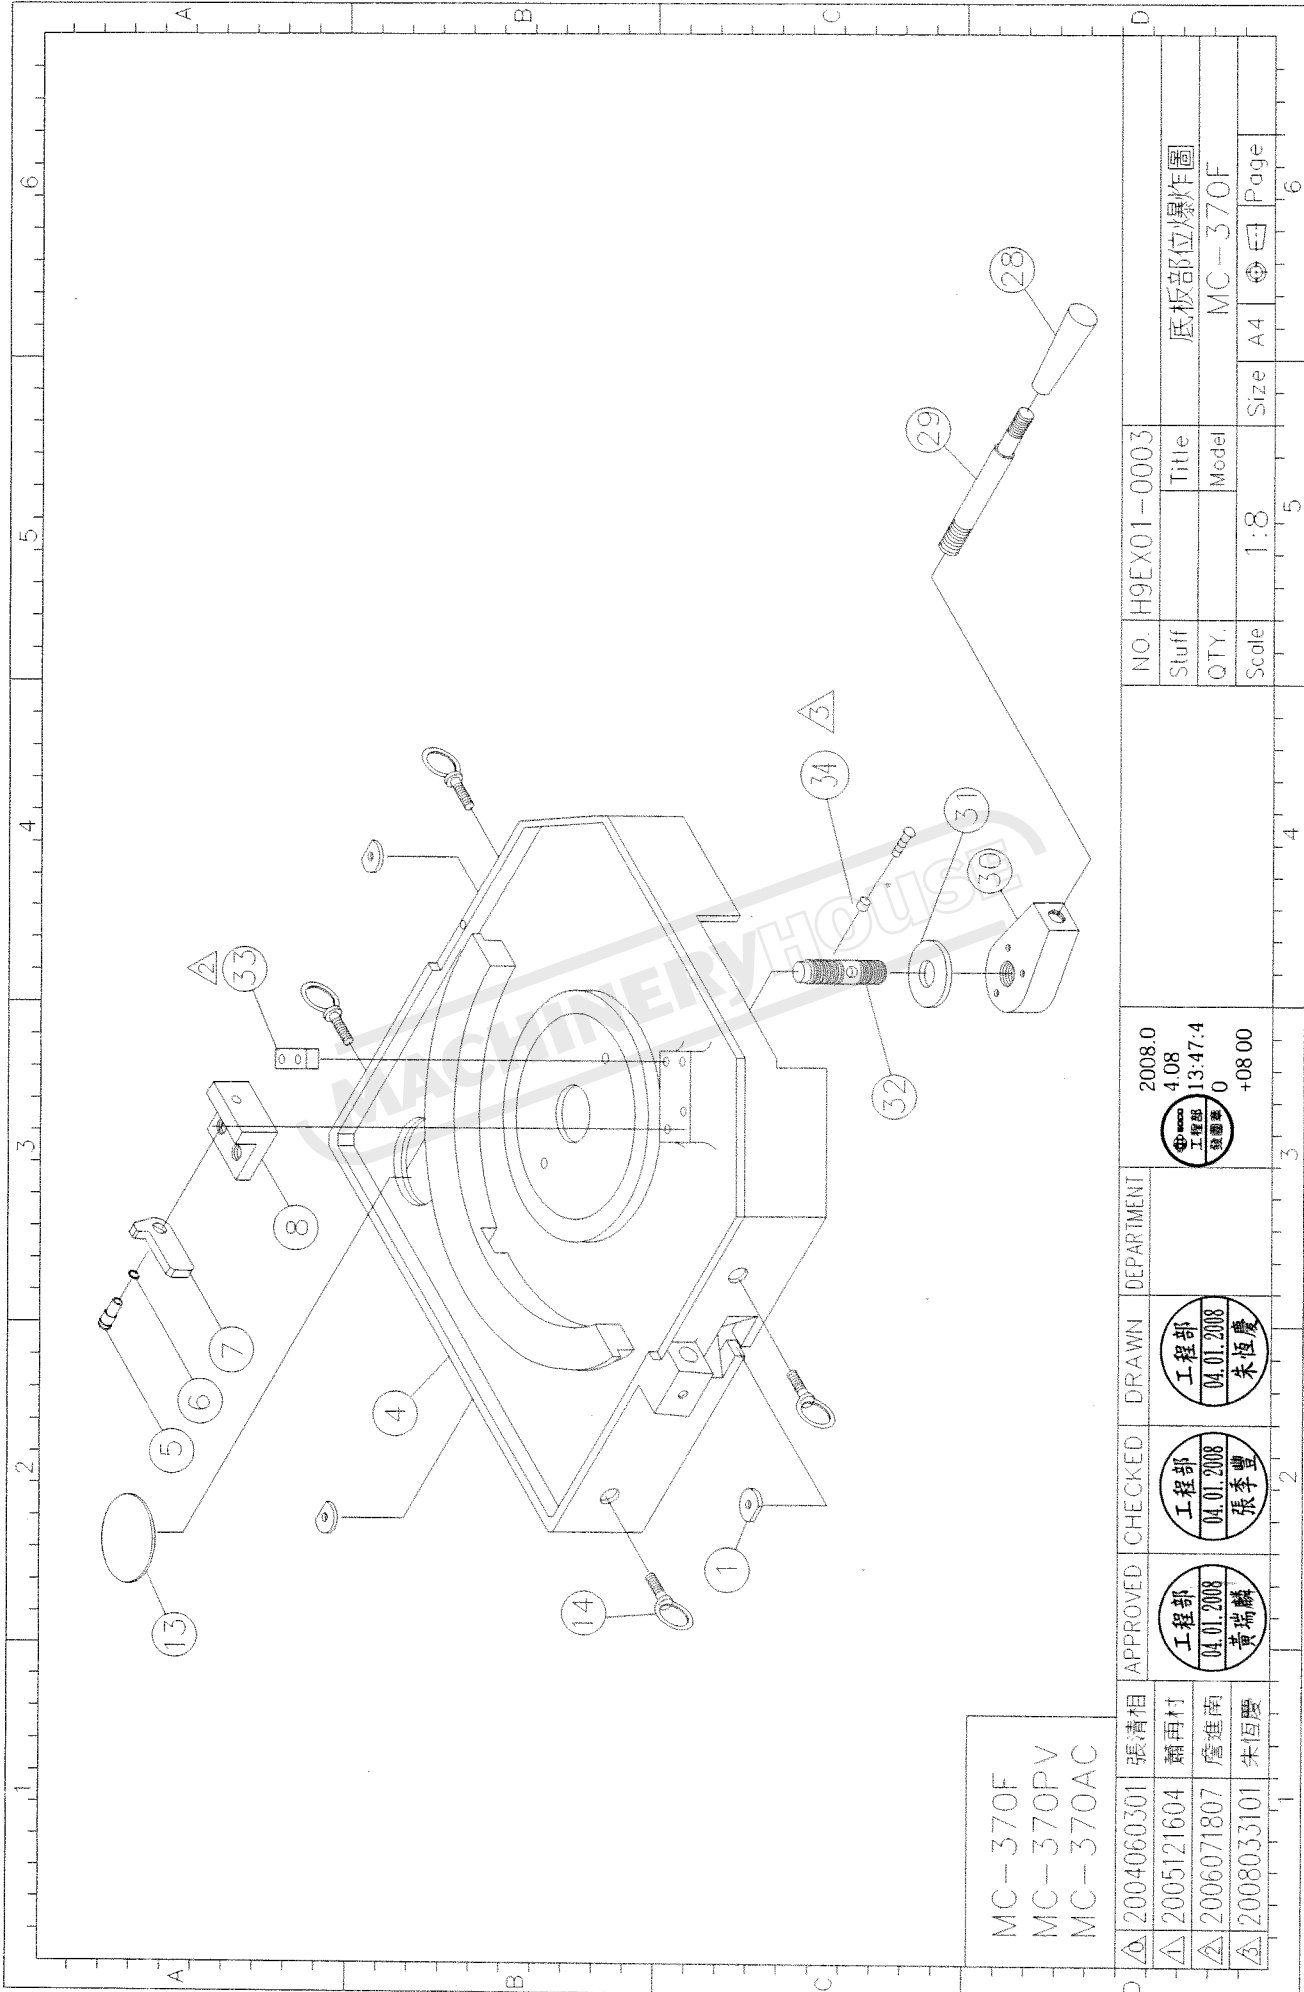

MC-370F  
 MC-370PV  
 MC-370AC

NO	H9EX01-0003								
Stuff		2008.0		4.08		2008.0		4.08	
Title	底板部位爆炸圖	工程圖		3:47:4		0		+08 00	
QTY.		工程圖		04.01.2008		04.01.2008		04.01.2008	
Model	MC-370F	張清相		張季豐		黃瑞麟		朱再村	
Scale	1:8	朱再村		張季豐		黃瑞麟		朱再村	
Size	A4	盧維南		張季豐		黃瑞麟		朱再村	
Page	6	朱再村		張季豐		黃瑞麟		朱再村	



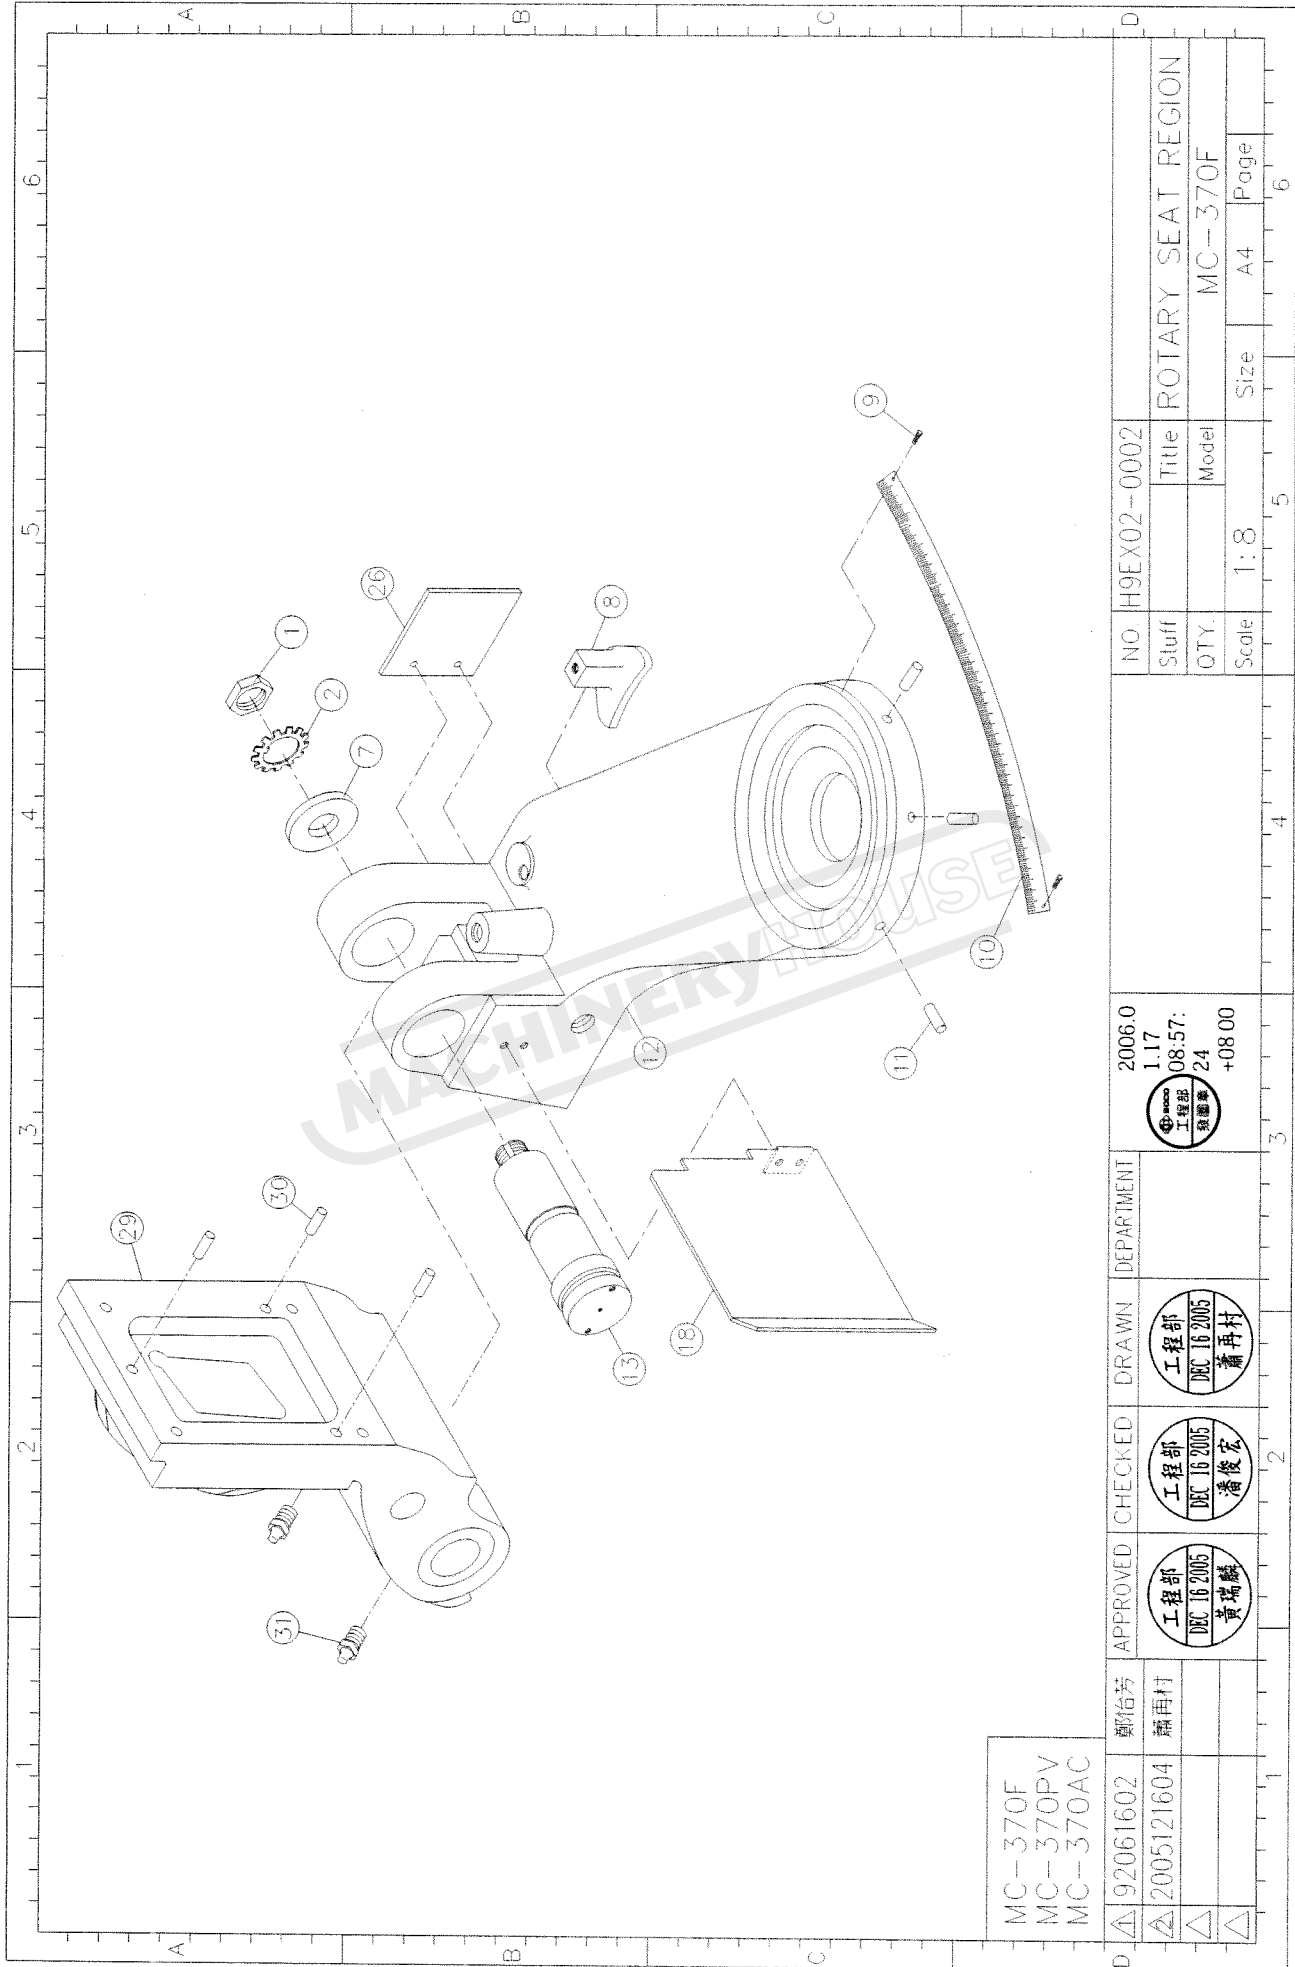

MC-370F  
MC-370PV  
MC-370AC


NO	H9EX02-0002	2006.0	DEPARTMENT	2006.0	NO	H9EX02-0002
Staff		1.17		1.17	Title	ROTARY SEAT REGION
QTY.		08:57:		08:57:	Model	MC-370F
Scale	1:8	24		24	Scale	1:8
		+08 00		+08 00	Size	A4
					Page	6

△	92061602	鄭怡芳	APPROVED	工程 部 DEC 16 2005 黃瑞麟	CHECKED	工程 部 DEC 16 2005 潘俊宏	DRAWN	工程 部 DEC 16 2005 蕭再村
△	2005121604	蕭再村						
△								
△								

H9EX03-0002 (1/1) \*\*\*\*\* MC-370F \*\*\*\*\*

序號	零件號	品名	用量	規格	序號	件號	品名	用量	規格
004	H5C006	側 (染黑)	1		032	Z00148	油封	1	65.88.12
005	H5C007	軸承壓環	1		033	H5C004	軸承蓋(染黑)	1	
006	VG0019	軸承	1	E30304J	036	ZV0041	雙頭圓鍵	2	8*7*45
007	H5C008	蝸輪軸墊環	1		037	H5C005	主軸(防銹)	1	
009	ZK0258	梅花墊片	1	AW 05, D25 彎舌型	049	H5C014	軸承壓環	1	
010	H5C009	外襯圈	1		050	VG0028	軸承	1	E32204J
011	H5C010	蝸輪	1		051	H5C015	蝸桿軸	1	
012	H5C011	蝸輪內襯環	1		052	ZV0031	雙頭圓鍵	1	8*7*32
013	VG0029	軸承	3	E32206J	053	H5C016	襯環	1	
014	H5C012	螺旋齒輪控槽軸	1		054	H5C017	軸承蓋(染黑)	1	
015	VF0054	軸承	1	TLAM 202620	055	H5C018	螺旋齒輪	1	
016	ZE0010	塞頭	1	PT3/8"	056	H5C019	襯環	1	
018	ZE0013	注油孔螺絲	1	3/8"PT(PVC)	057	ZK0390	梅花墊圈	1	AW-04, D20 直舌型
019	IK0031	油鏡	1	21mm	058	H9C001	螺帽	1	M20*P1.5*邊 26*6.5mm 厚(染黑) 右
020	H5C013	封蓋(染黑)	1		059	H9C002	螺帽	1	M25*P1.5*邊 32*9mm 厚(染黑) 右
023	H5A001	機頭	1						
024	H0C006	六角螺帽	1	M30*P1.5					
025	ZK0259	梅花墊片	1	AW 06, D30 彎舌型					
026	H5C002	主軸內襯套	1						
028	ZP0011	C型扣環	1	R-45					
029	H5C001	螺旋齒輪	1						
030	H5C003	墊環	1						
031	VG0017	軸承	1	E30211J					




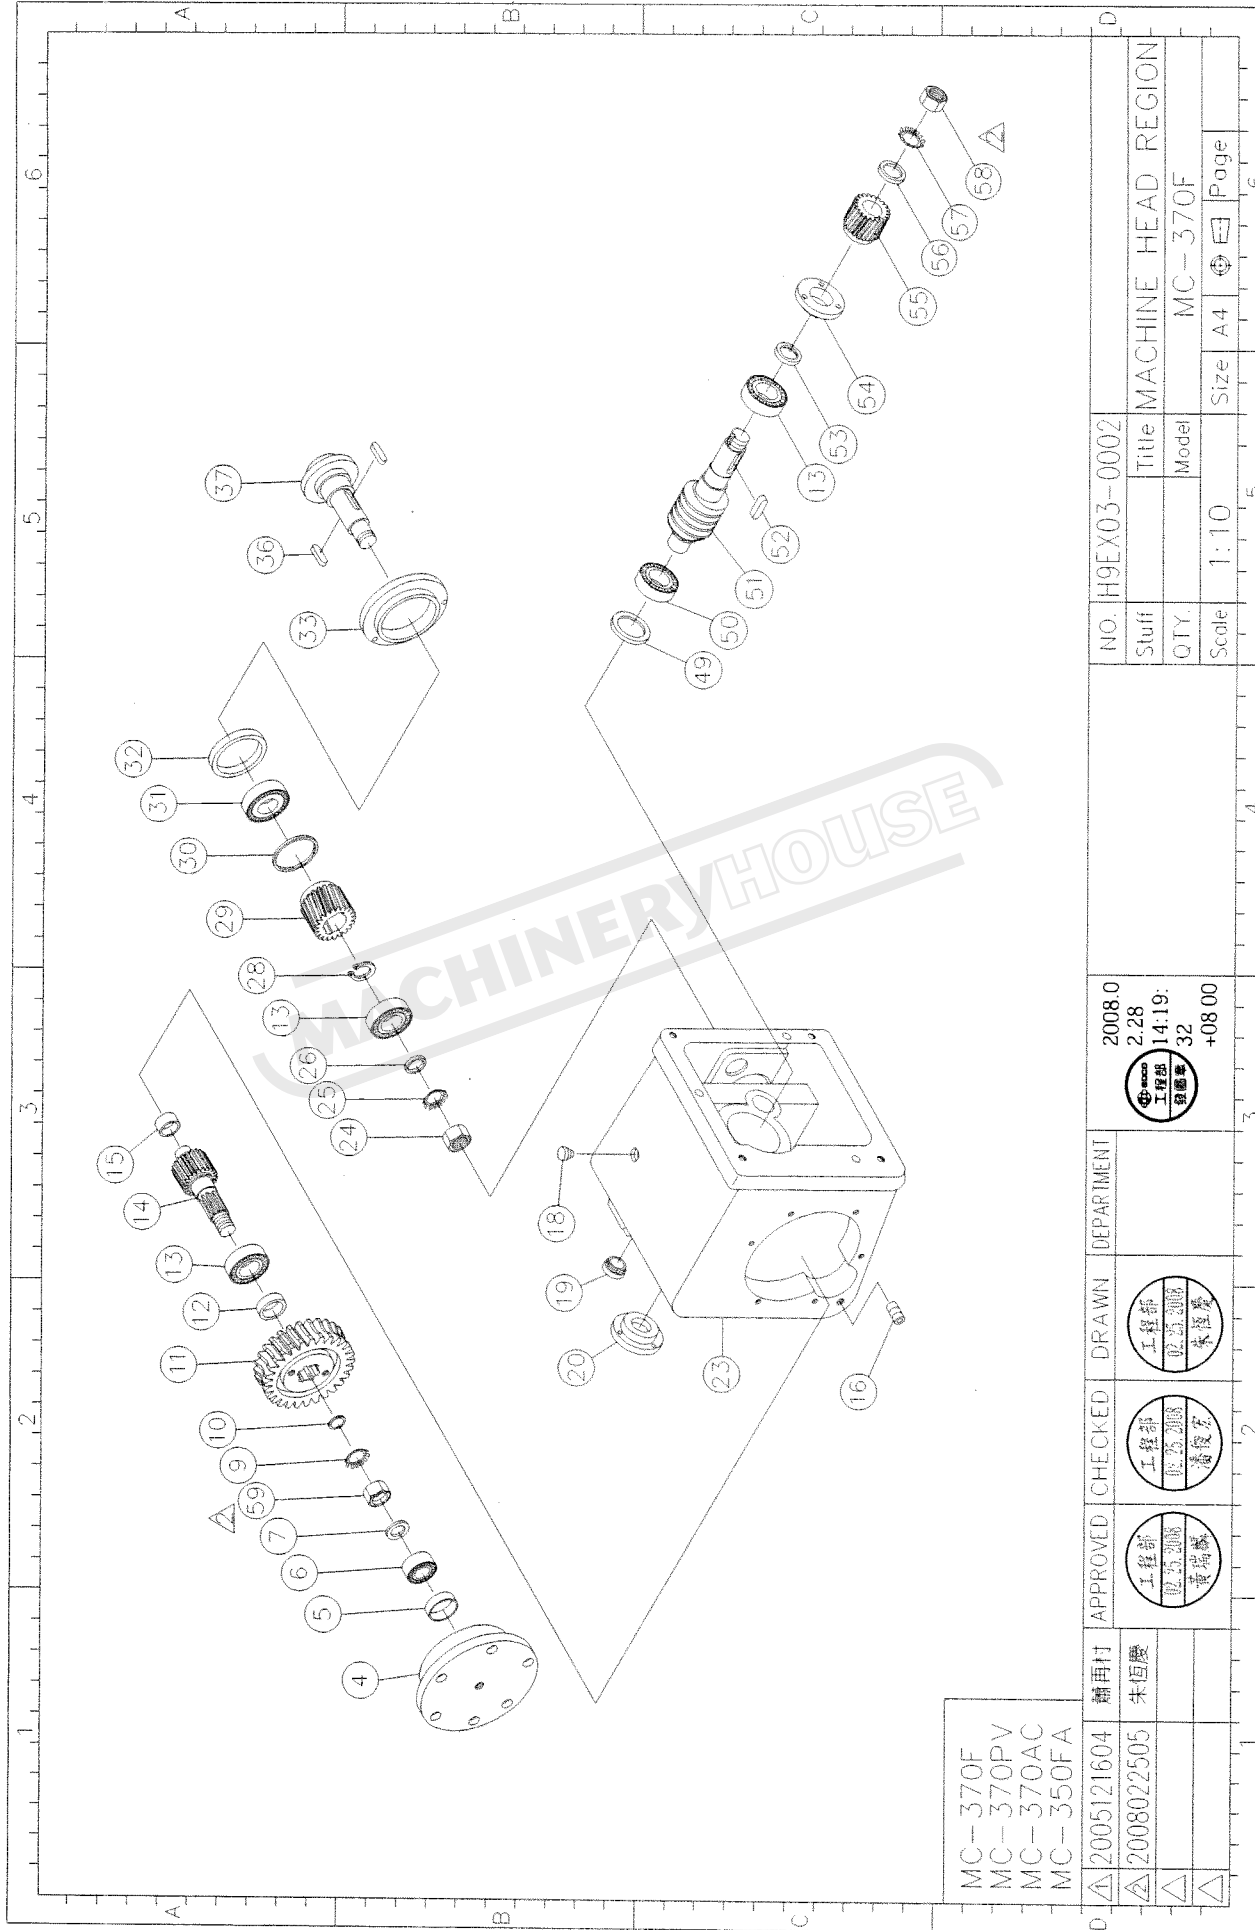

MC-370F  
MC-370PV  
MC-370AC  
MC-350FA

NO.	H9EX03-0002	NO.	2008.0	NO.	H9EX03-0002	NO.	2008.0
△	2005121604	△	2008022505	△	2008.0	△	2008.0
△	2008022505	△	2008022505	△	2.28	△	2.28
△		△		△	14:19	△	14:19
△		△		△	32	△	32
△		△		△	+0800	△	+0800
2005121604 繭再村 2008022505 朱恒慶		2008.0 2.28 14:19 32 +0800		H9EX03-0002 MACHINE HEAD REGION MC-370F		Size A4 Page 6	



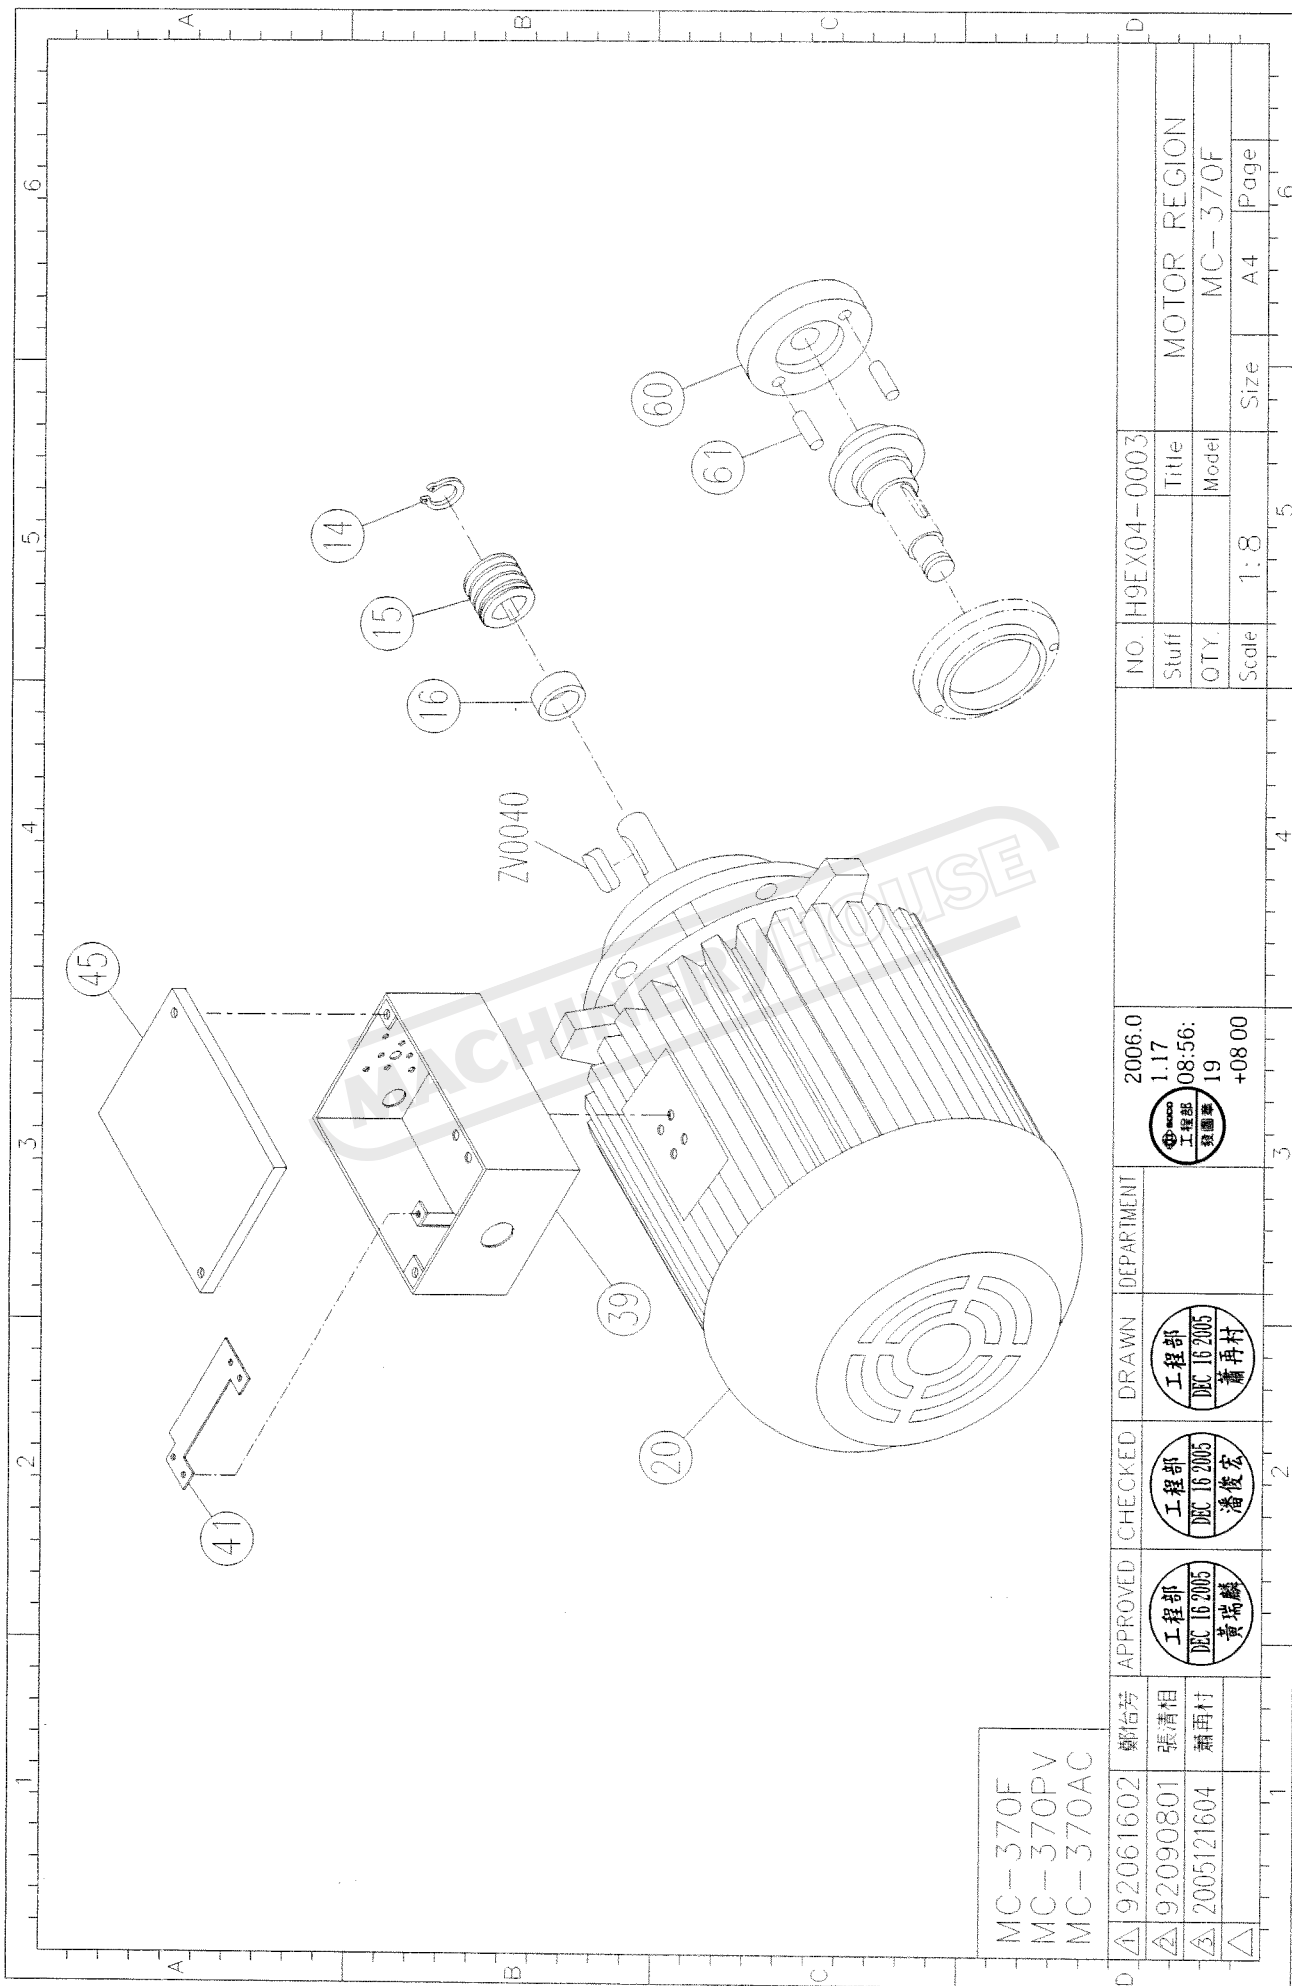



MC-370F  
 MC-370PV  
 MC-370AC

△	92061602	鄭怡芳	APPROVED	工程 DEC 16 2005 黃瑞麟	DEPARTMENT	2006.0 1.17 08:56:19 +08 00	NO. H9EX04-0003	NO.	1:8	Scale	A4	Page
△	92090801	張清相	CHECKED	工程 DEC 16 2005 潘俊宏	DRAWN		STUFF					
△	2005121604	賴再村	DRAWN	工程 DEC 16 2005 蕭再村			QTY.					
△							Model					
							Title					
							Motor Region					
							MC-370F					

H9EX05-0001 (1/1) \*\*\*\*\* MC-370F \*\*\*\*\*

序號	件號	品名	用量	規格	序號	件號	數量	名稱	規格
001	H5F005	安全蓋(噴漆)	1	噴橘色					
002	H5F006	鋸片護蓋(噴漆)	1						
003	ZK0190	銅彎頭	1	M8-PT1/8"-90度					
005	IB0150	銅控制閥(考克)	1	1/8PT*3/8插心					
009	H5F003	迴轉軸(染黑)	1						
010	H5F008	固定螺絲(染黑)	1						
011	NI6H	防鬆U帽	1	M16*P2.0					

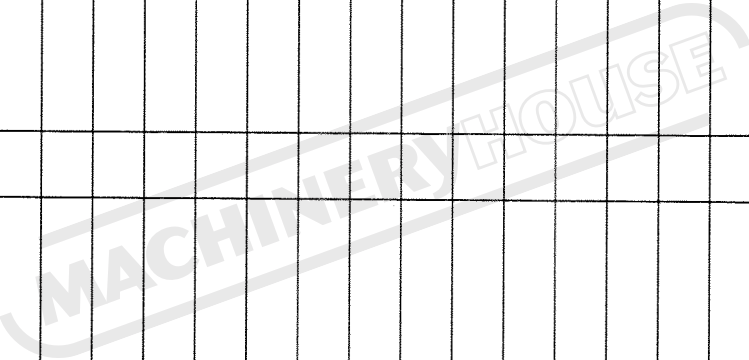


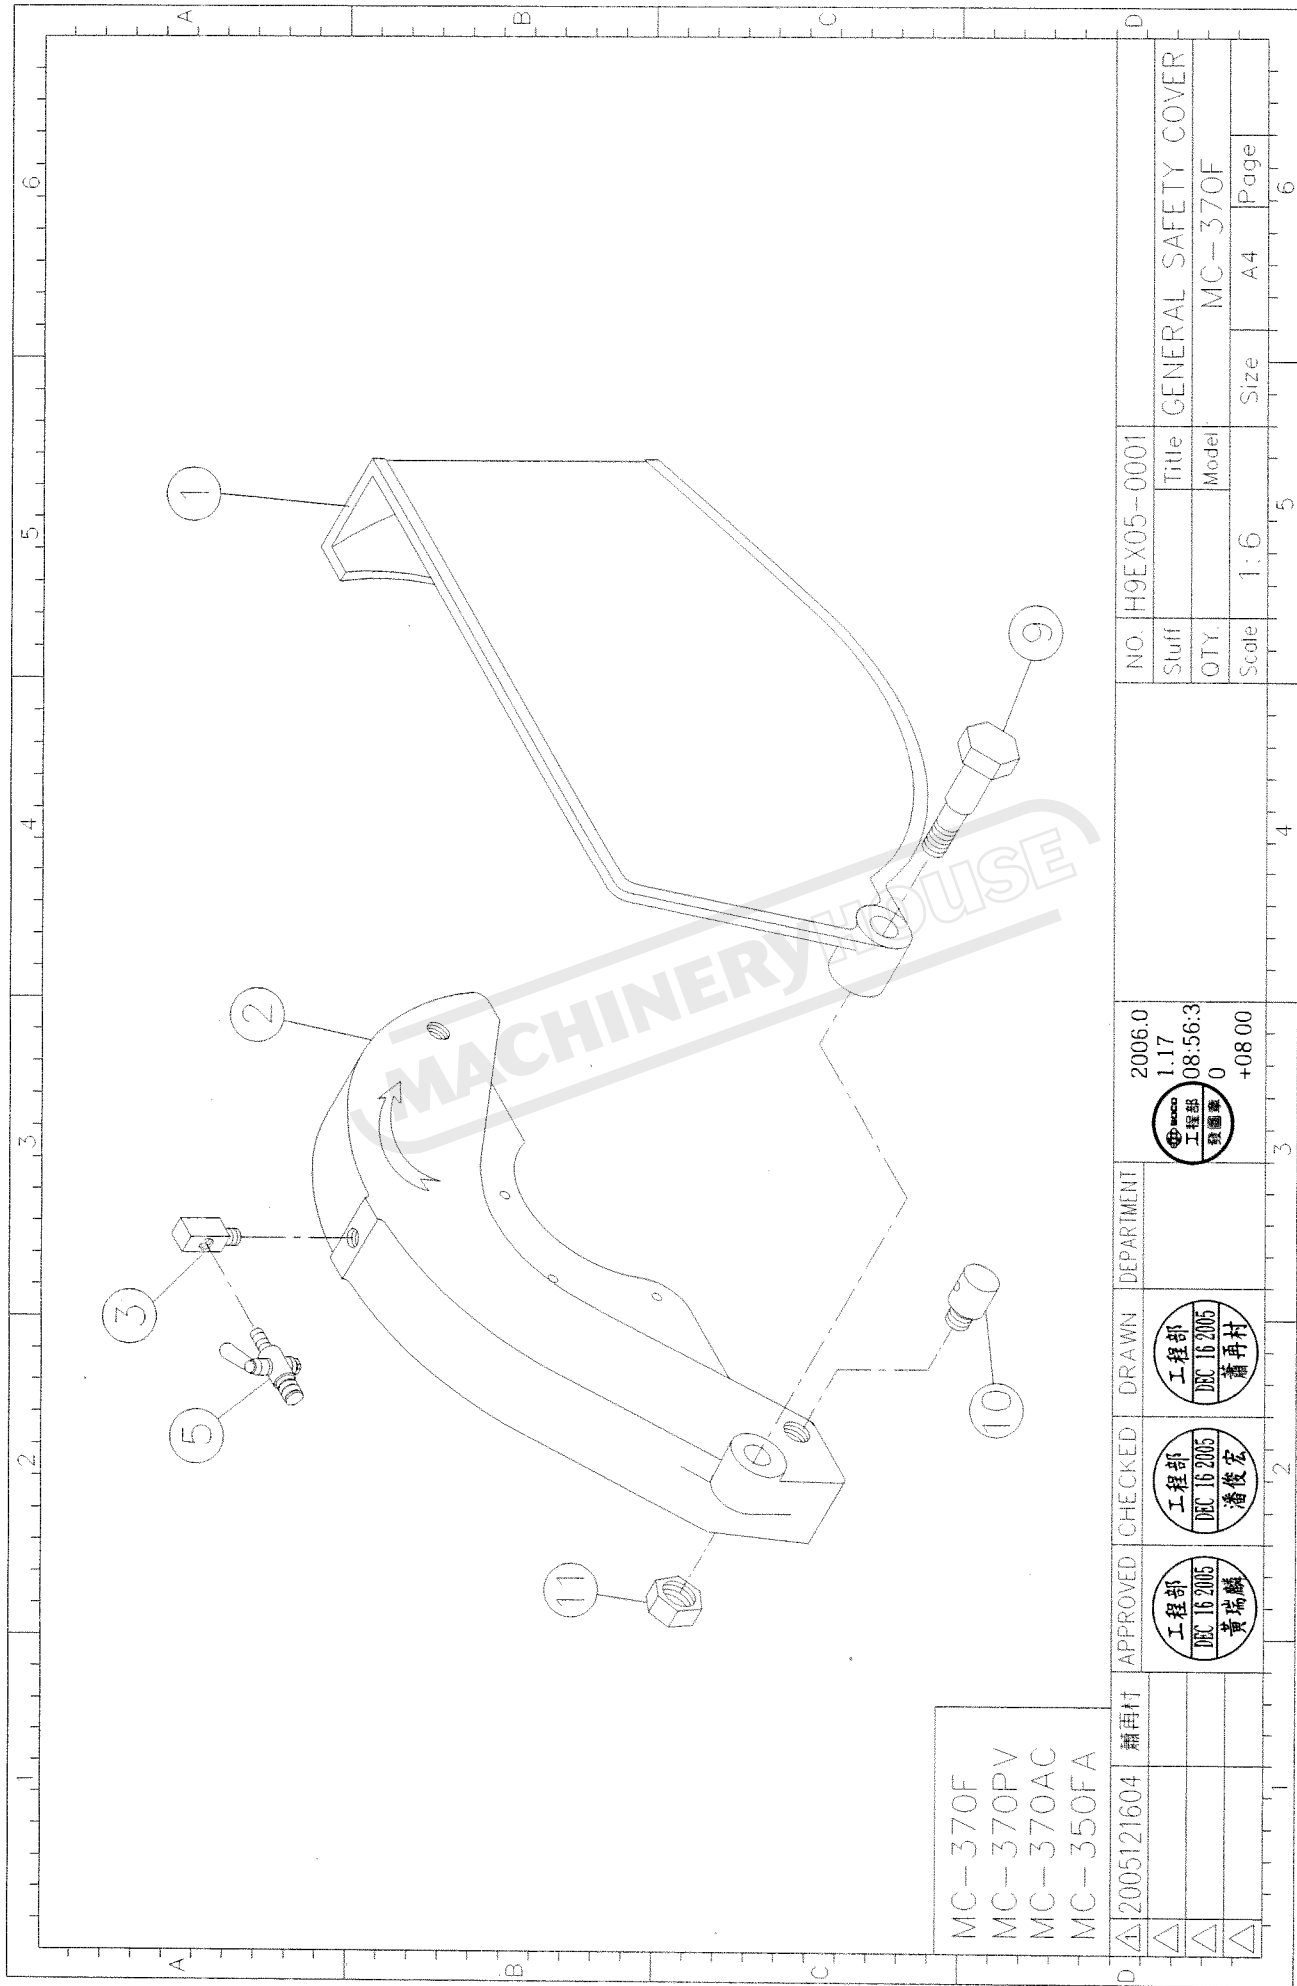

MC-370F  
 MC-370PV  
 MC-370AC  
 MC-350FA

△	2005121604	編再村	APPROVED	工程 部 DEC 16 2005 黃瑞麟	CHECKED	工程 部 DEC 16 2005 潘俊宏	DRAWN	工程 部 DEC 16 2005 蕭再村	DEPARTMENT	2006.0 1.17 08:56:30 +08 00	NO. H9EX05-0001	NO.	1-6	5	6
△											GENERAL SAFETY COVER	Title	Size	A4	Page
△											MC-370F	Model			
△											Scale	1:6			




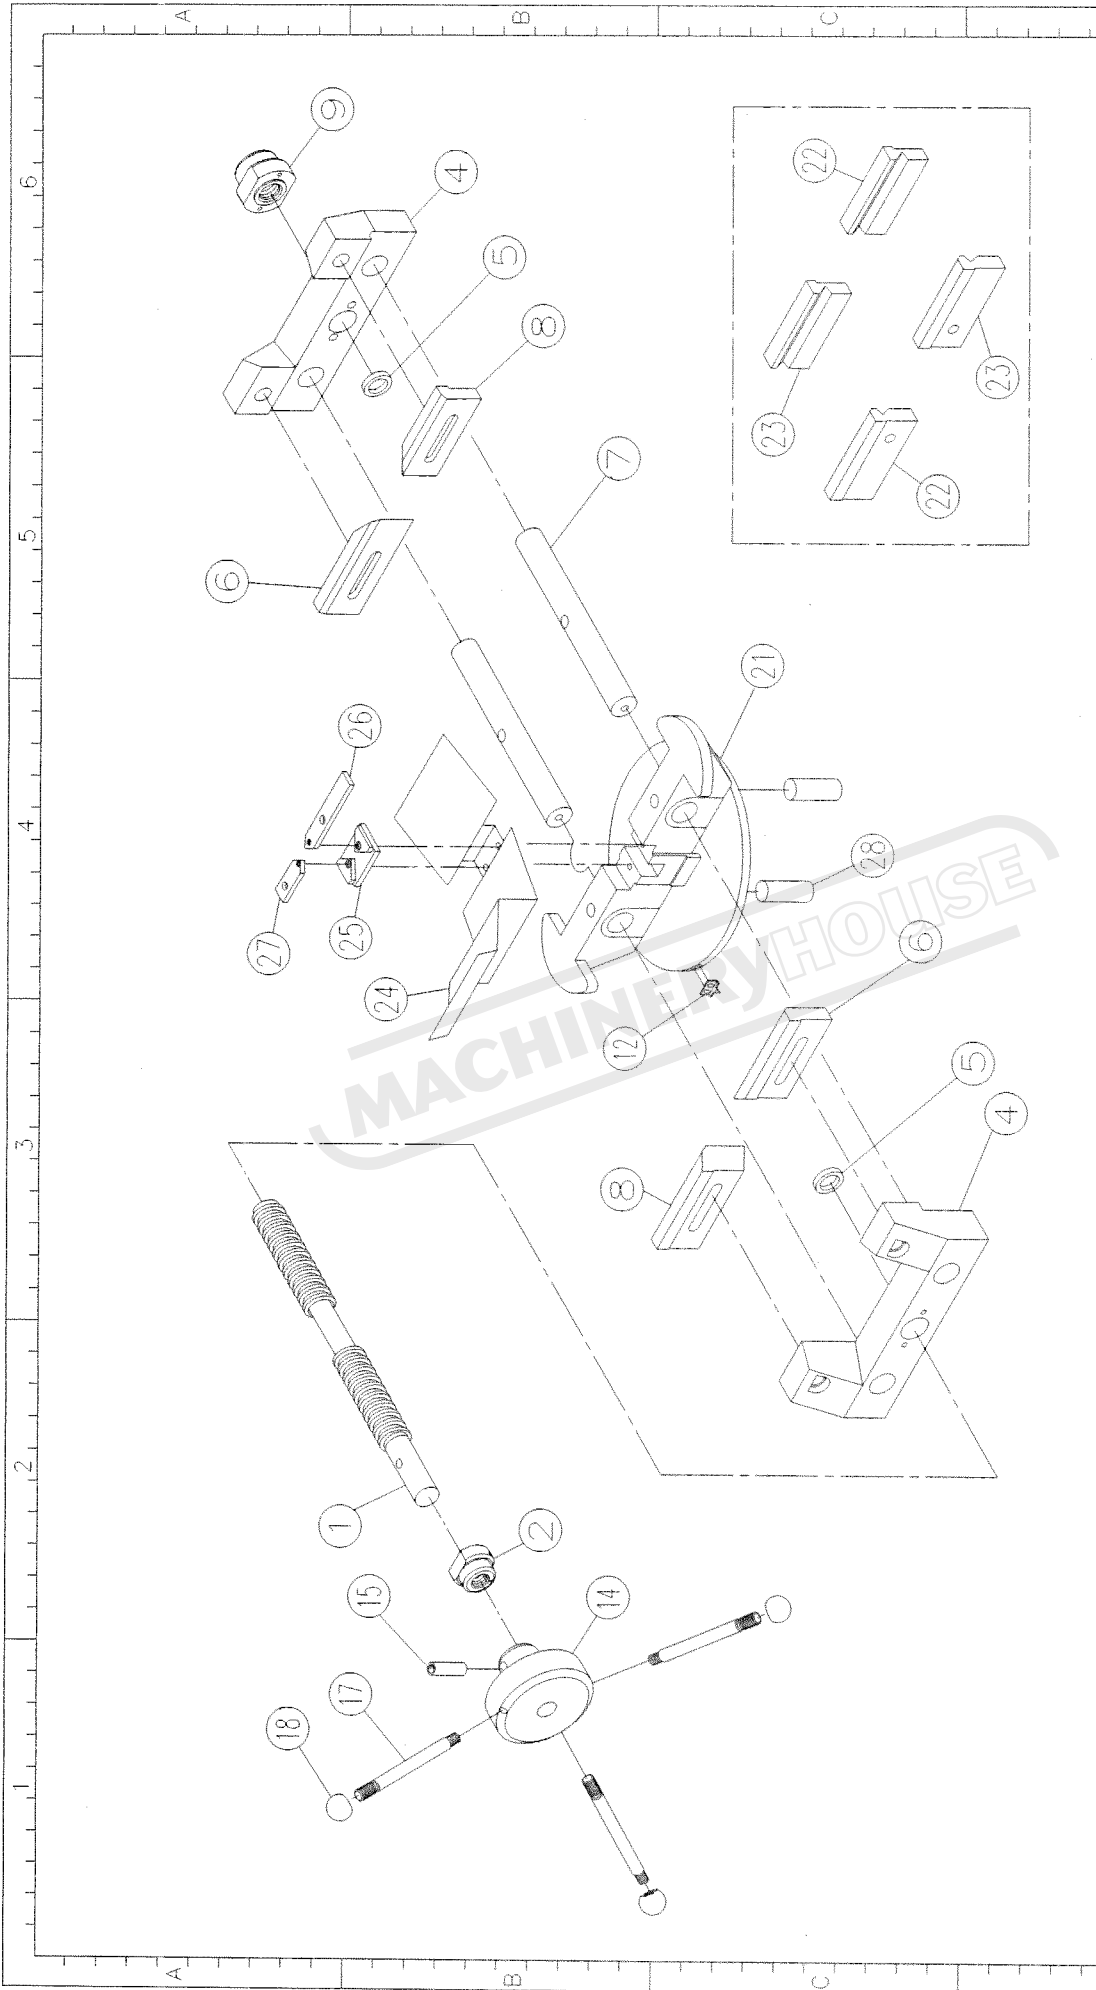


NO.	H9EX06-0001		
Stuff	CLAMPING REGION		
QTY.	MC-370F		
Scale	1:9	Size	A4
		Page	1/1
			6
			5
			4
			3
			2
			1
2005121604	蕭再村	APPROVED	工程師 DEC 16 2005 黃瑞麟
		CHECKED	工程師 DEC 16 2005 潘俊宏
		DRAWN	工程師 DEC 16 2005 蕭再村
		DEPARTMENT	
			2006.0 1.17 08:57: 13 +0800

H9EX08-0001 (1/1) \*\*\*\*\* MC-370F \*\*\*\*\*



序號	件號	品名	規	格	序號	件號	品名	用量	規	格
003	H0H003	電器盒蓋 (噴漆)	1							
008	H0H002	電器盒 (噴漆)	1							
011	H5H002	大立座 (噴漆)	1							
015	H9MG02	馬達發料模組(水幫浦)	1							
022	H0H004	幫浦基板 (噴漆)	1	大立座附件						
023	H0H010	遮蓋 (噴漆)	1	大立座附件						

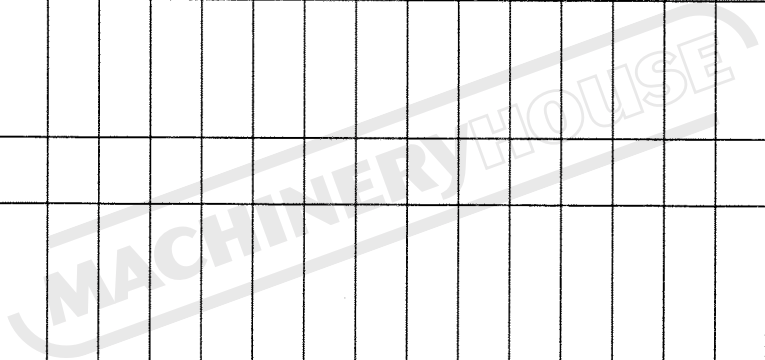



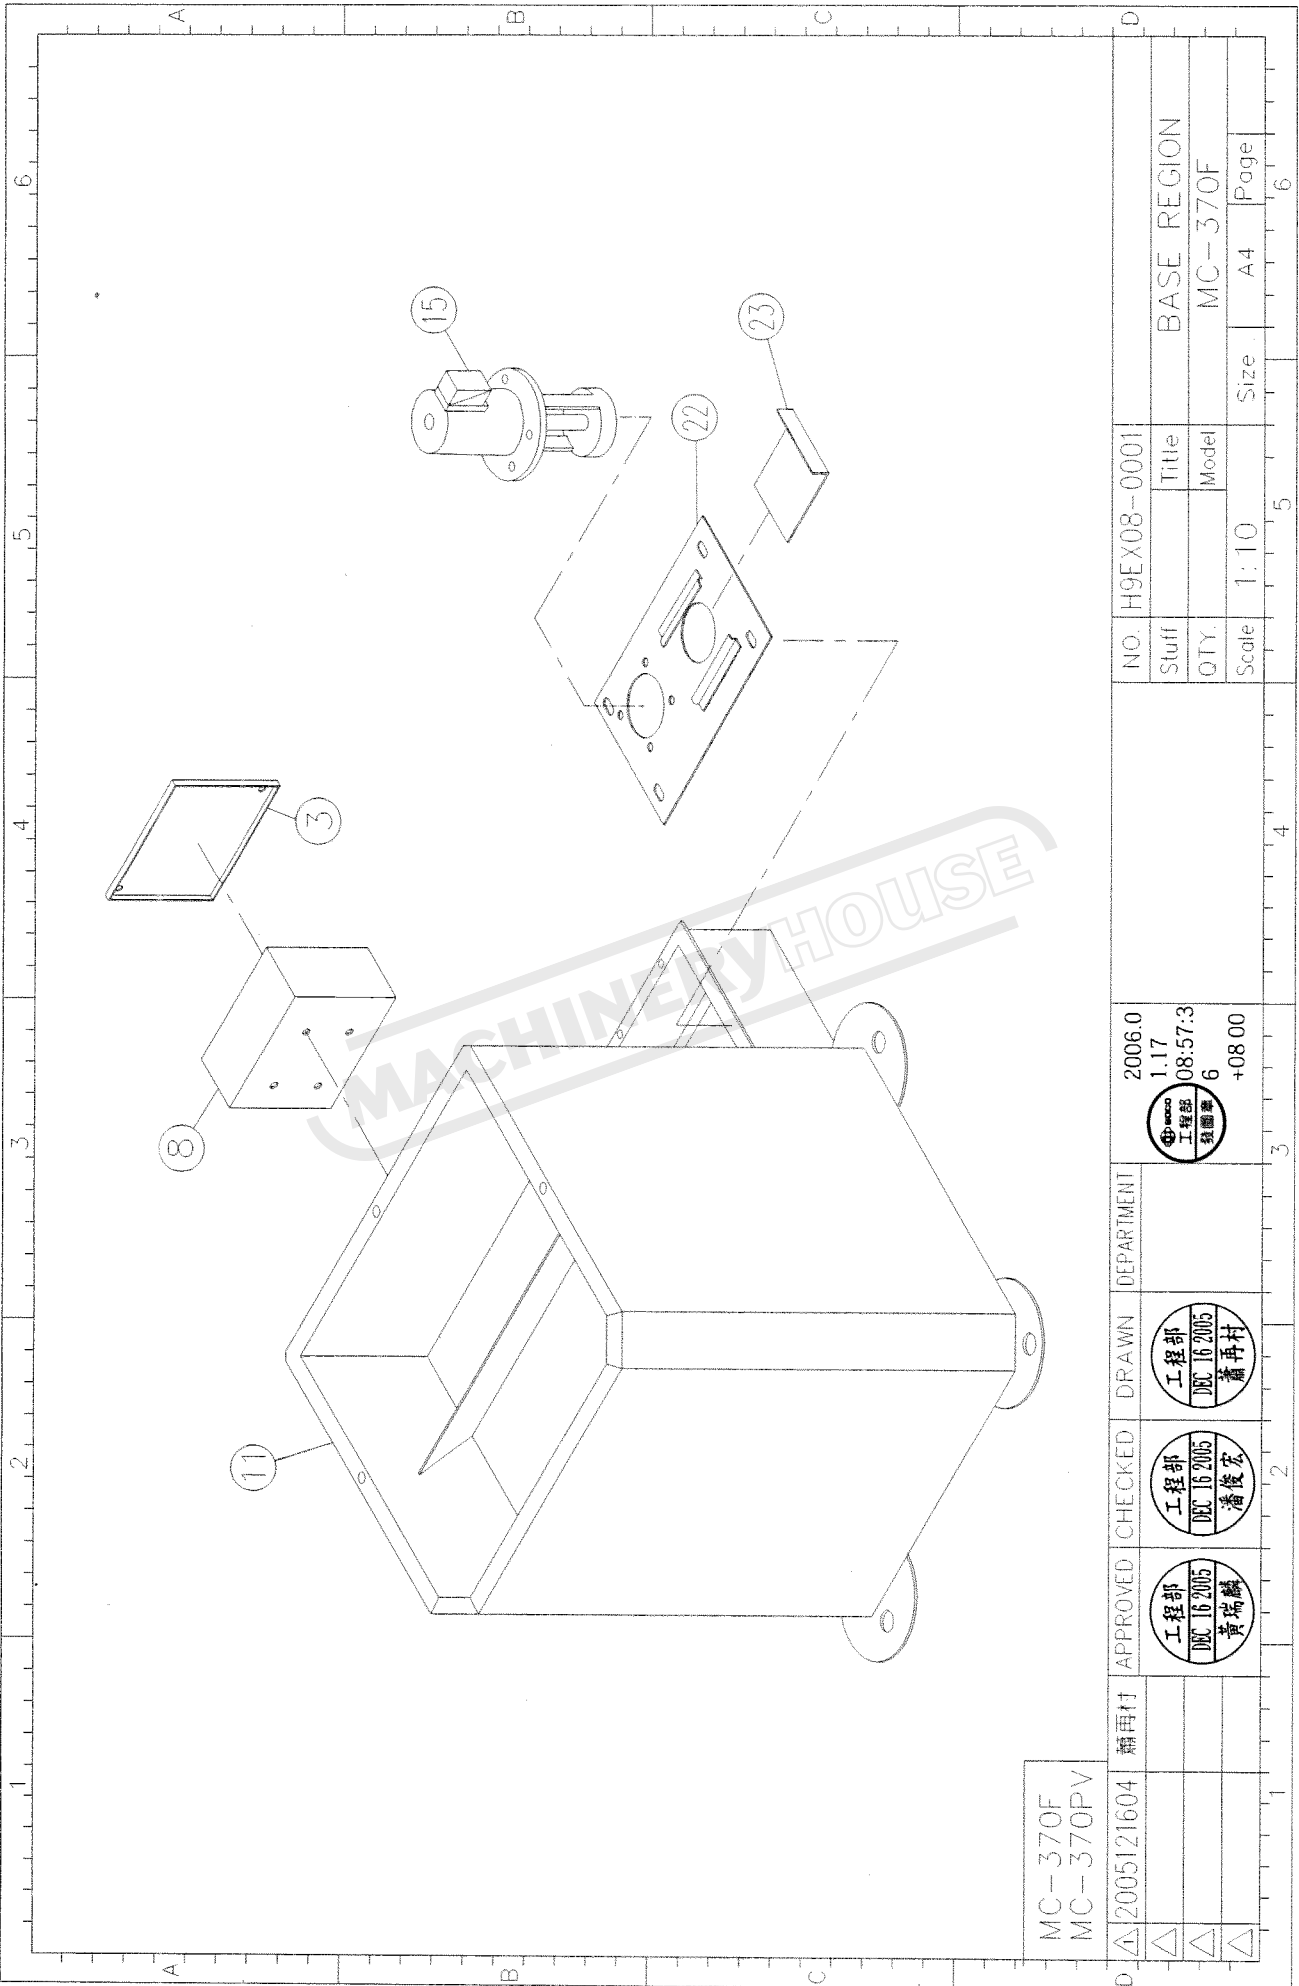

MC-370F  
MC-370PV


NO.	H9EX08-0001		NO.	2006.0	
Stuff	Title	BASE REGION	1.17		
QTY.	Model	MC-370F	08:57:3		
Scale	1:10	Size	6	+08 00	
		A4			
		Page		6	


APPROVED	黄瑞麟	CHECKED	潘俊宏	DRAWN	蕭再村	DEPARTMENT	

NO.	2005121604	蕭再村

H9EX17-0000 (1/1) \*\*\*\*\* MC-370F \*\*\*\*\*

序號	件號	品名	規格	格	序號	件號	品名	規格	格	用量	名稱	規格	格
001	H9A001	彈簧固定鉤(噴漆)	1	上									
002	H9A003	拉伸彈簧	3										
003	H5D019	機頭上極限擋塊(染黑)	1										
004	H9A002	彈簧固定鉤(噴漆)	1										

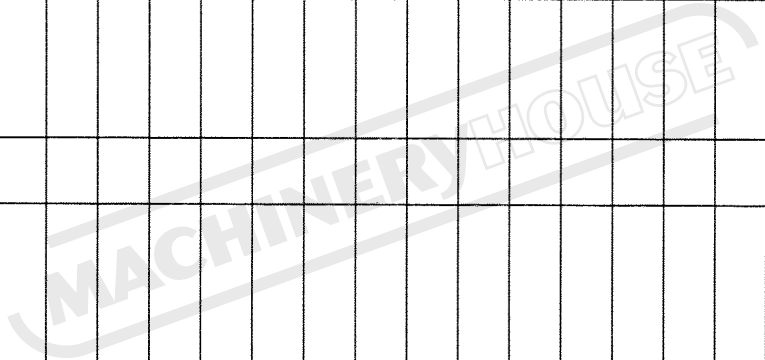


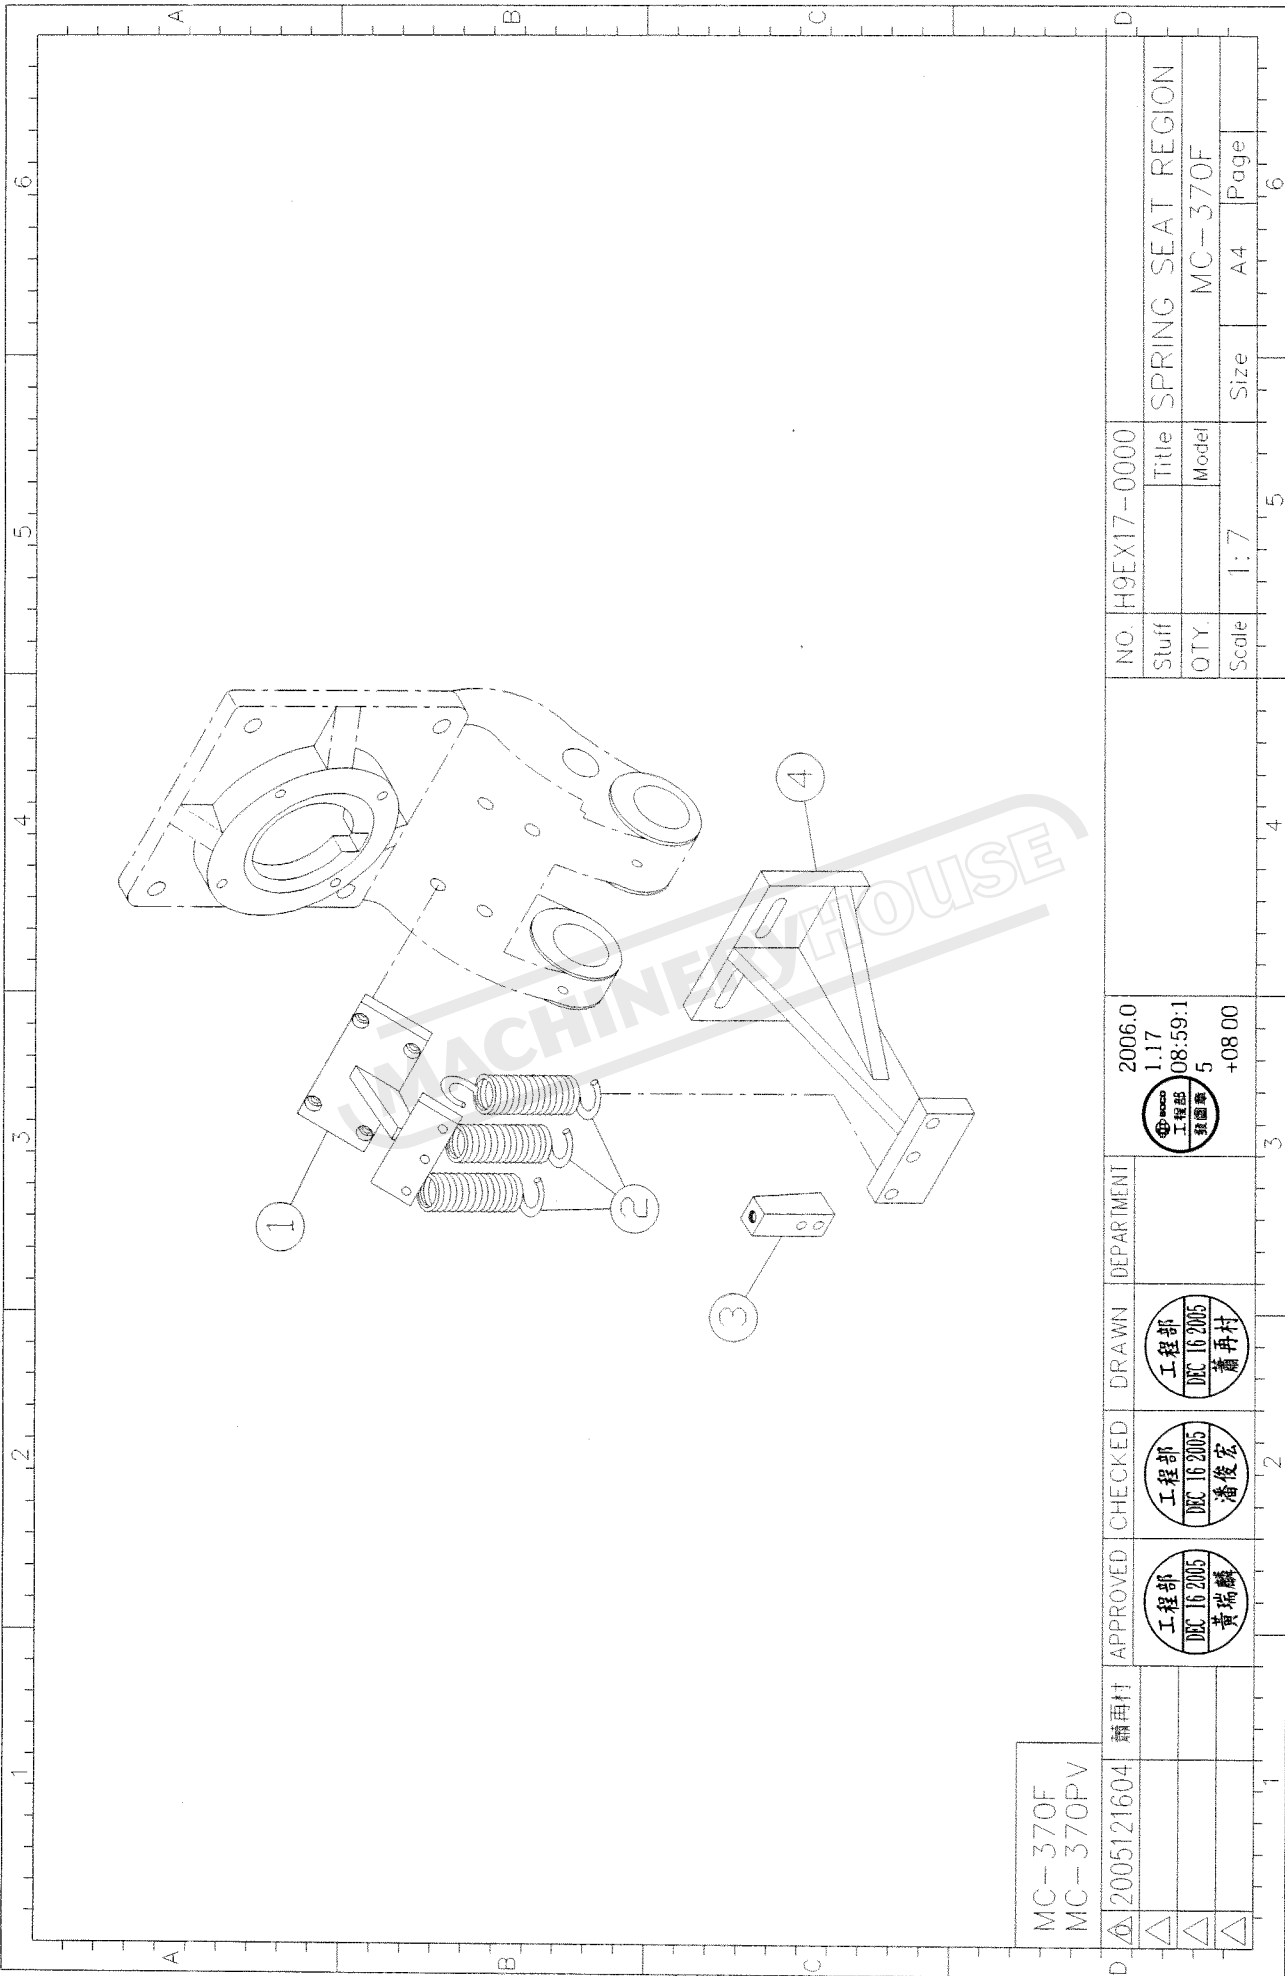

MC-370F  
MC-370PV

<table border="1"> <tr> <td>△</td> <td>2005121604</td> <td>賴再村</td> <td>APPROVED</td> <td>工程 部 DEC 16 2005</td> <td>黃瑞麟</td> </tr> </table>	△	2005121604	賴再村	APPROVED	工程 部 DEC 16 2005	黃瑞麟	<table border="1"> <tr> <td>△</td> <td></td> <td></td> <td>CHECKED</td> <td>工程 部 DEC 16 2005</td> <td>潘俊宏</td> </tr> <tr> <td>△</td> <td></td> <td></td> <td>DRAWN</td> <td>工程 部 DEC 16 2005</td> <td>蕭再村</td> </tr> </table>	△			CHECKED	工程 部 DEC 16 2005	潘俊宏	△			DRAWN	工程 部 DEC 16 2005	蕭再村	<table border="1"> <tr> <td colspan="2">2006.0</td> </tr> <tr> <td>1.17</td> <td>5</td> </tr> <tr> <td>08:59:1</td> <td>+08:00</td> </tr> </table>	2006.0		1.17	5	08:59:1	+08:00	<table border="1"> <tr> <td colspan="2">NO. H9EX17-0000</td> </tr> <tr> <td>Stuff</td> <td>Title</td> </tr> <tr> <td>Q.T.Y.</td> <td>Model</td> </tr> <tr> <td>Scale</td> <td>Size</td> </tr> </table>	NO. H9EX17-0000		Stuff	Title	Q.T.Y.	Model	Scale	Size	<table border="1"> <tr> <td colspan="2">SPRING SEAT REGION</td> </tr> <tr> <td colspan="2">MC-370F</td> </tr> <tr> <td>A4</td> <td>Page</td> </tr> <tr> <td>1:7</td> <td>6</td> </tr> </table>	SPRING SEAT REGION		MC-370F		A4	Page	1:7	6
△	2005121604	賴再村	APPROVED	工程 部 DEC 16 2005	黃瑞麟																																							
△			CHECKED	工程 部 DEC 16 2005	潘俊宏																																							
△			DRAWN	工程 部 DEC 16 2005	蕭再村																																							
2006.0																																												
1.17	5																																											
08:59:1	+08:00																																											
NO. H9EX17-0000																																												
Stuff	Title																																											
Q.T.Y.	Model																																											
Scale	Size																																											
SPRING SEAT REGION																																												
MC-370F																																												
A4	Page																																											
1:7	6																																											



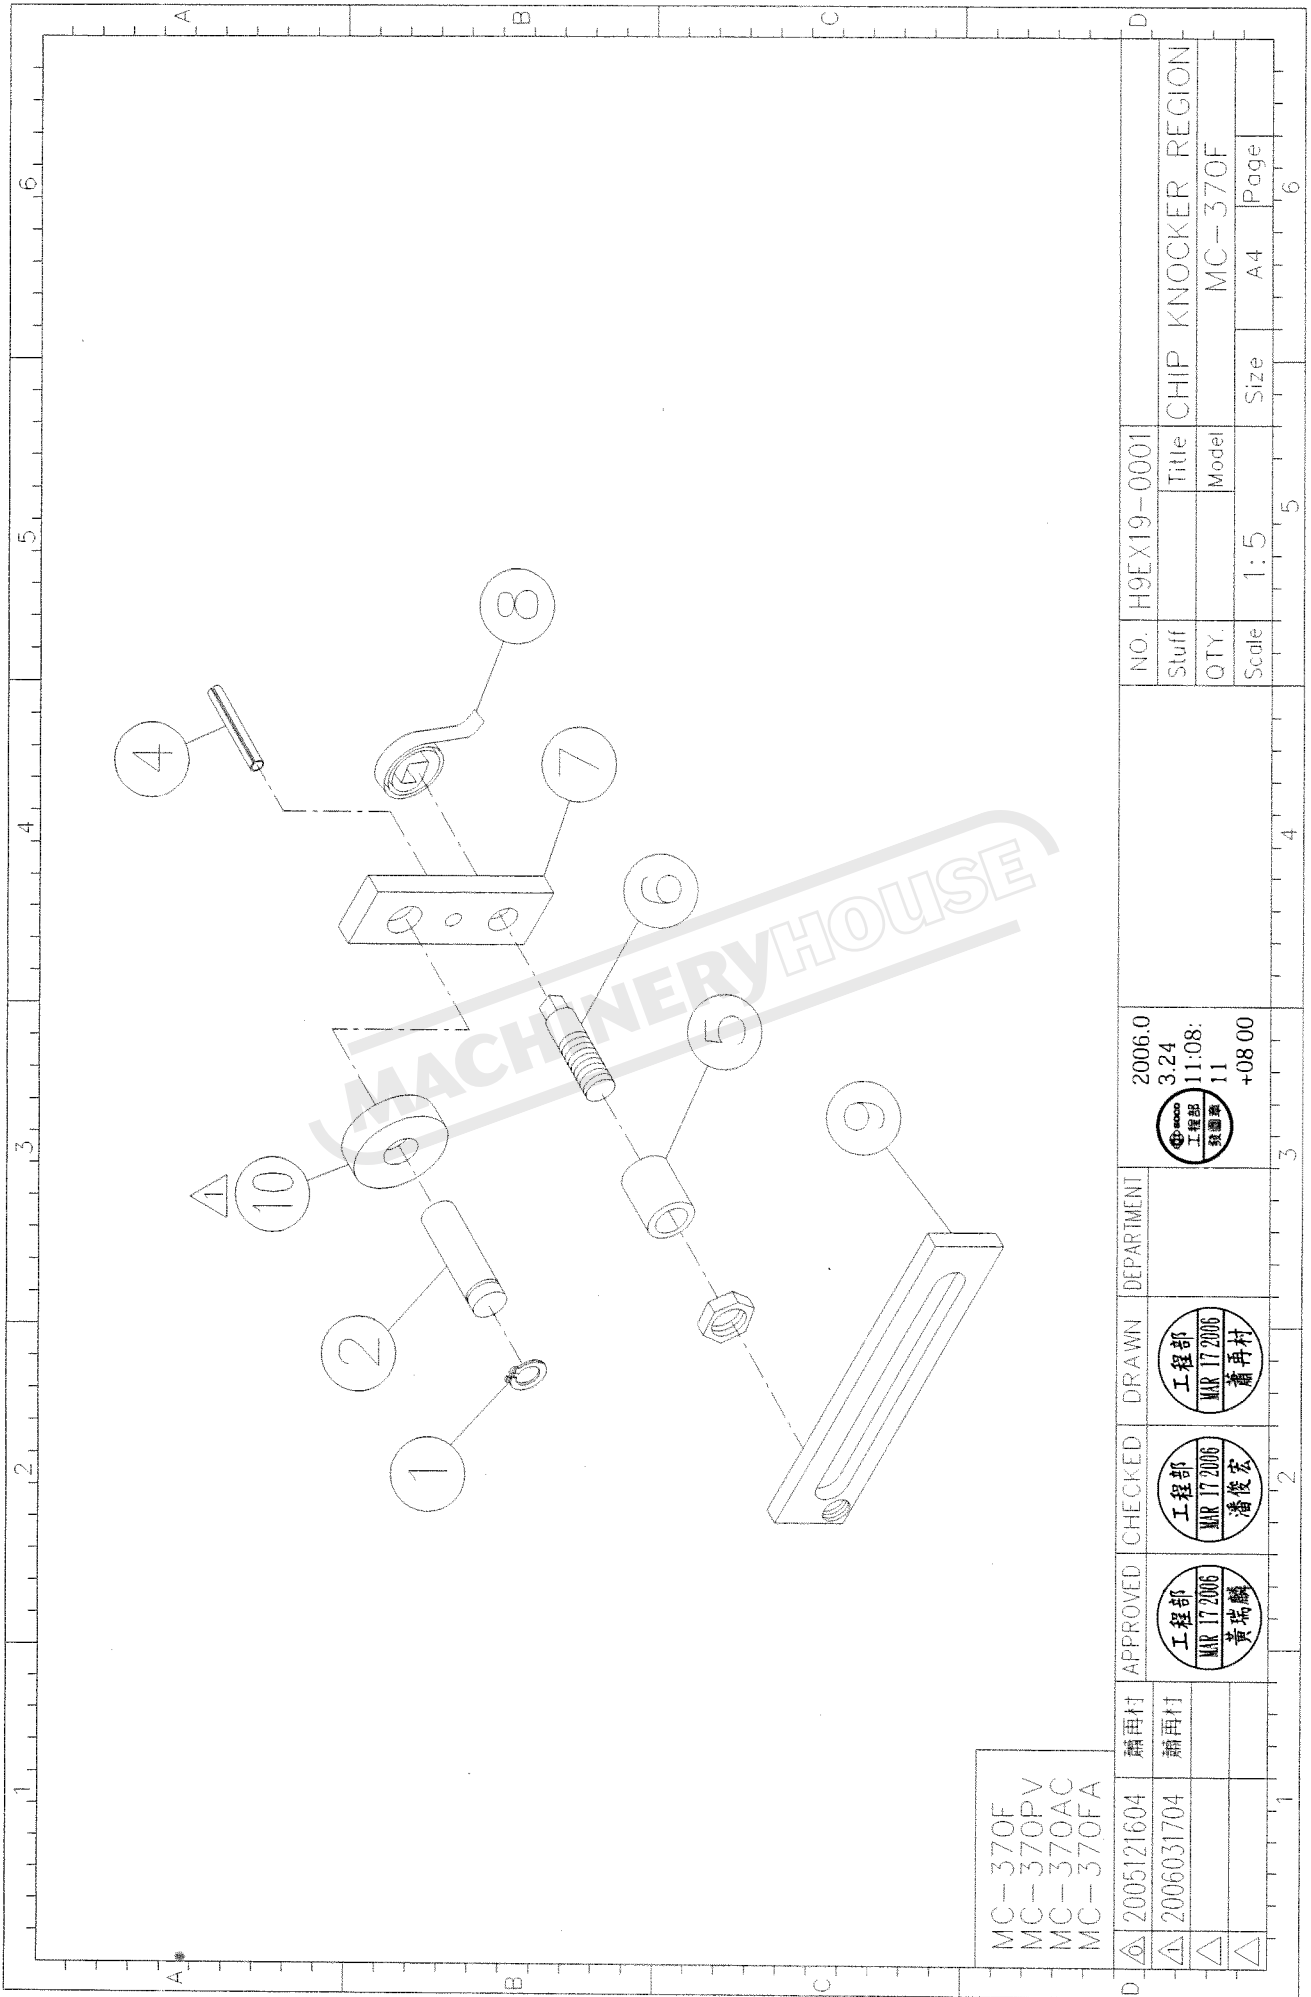

MC-370F  
 MC-370PV  
 MC-370AC  
 MC-370FA


△	2005121604	蕭再村	APPROVED	工程 部 MAR 17 2006	黃瑞麟	DEPARTMENT	2006.0 3.24 11:08: 11 +08 00	NO	H9EX19-0001	5	6
△	2006031704	蕭再村	CHECKED	工程 部 MAR 17 2006	潘俊宏	DRAWN	2006.0 3.24 11:08: 11 +08 00	Stuff	CHIP KNOCKER REGION	5	6
△				工程 部 MAR 17 2006	蕭再村			QTY.	Model	1:5	6
△								Scale	Size	A4	Page


HOEX21-0000 (1/1)

MC-275F

\*\*\*\*\*

序號	件號	品名	用量	規格	格	序號	件號	品名	用量	規格	格
001	H0T006	貼紙	1	電源指示燈							
002	H0T007	貼紙	1	馬達開關							

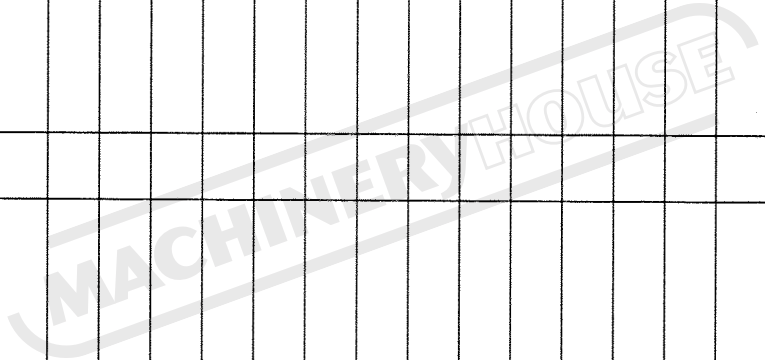

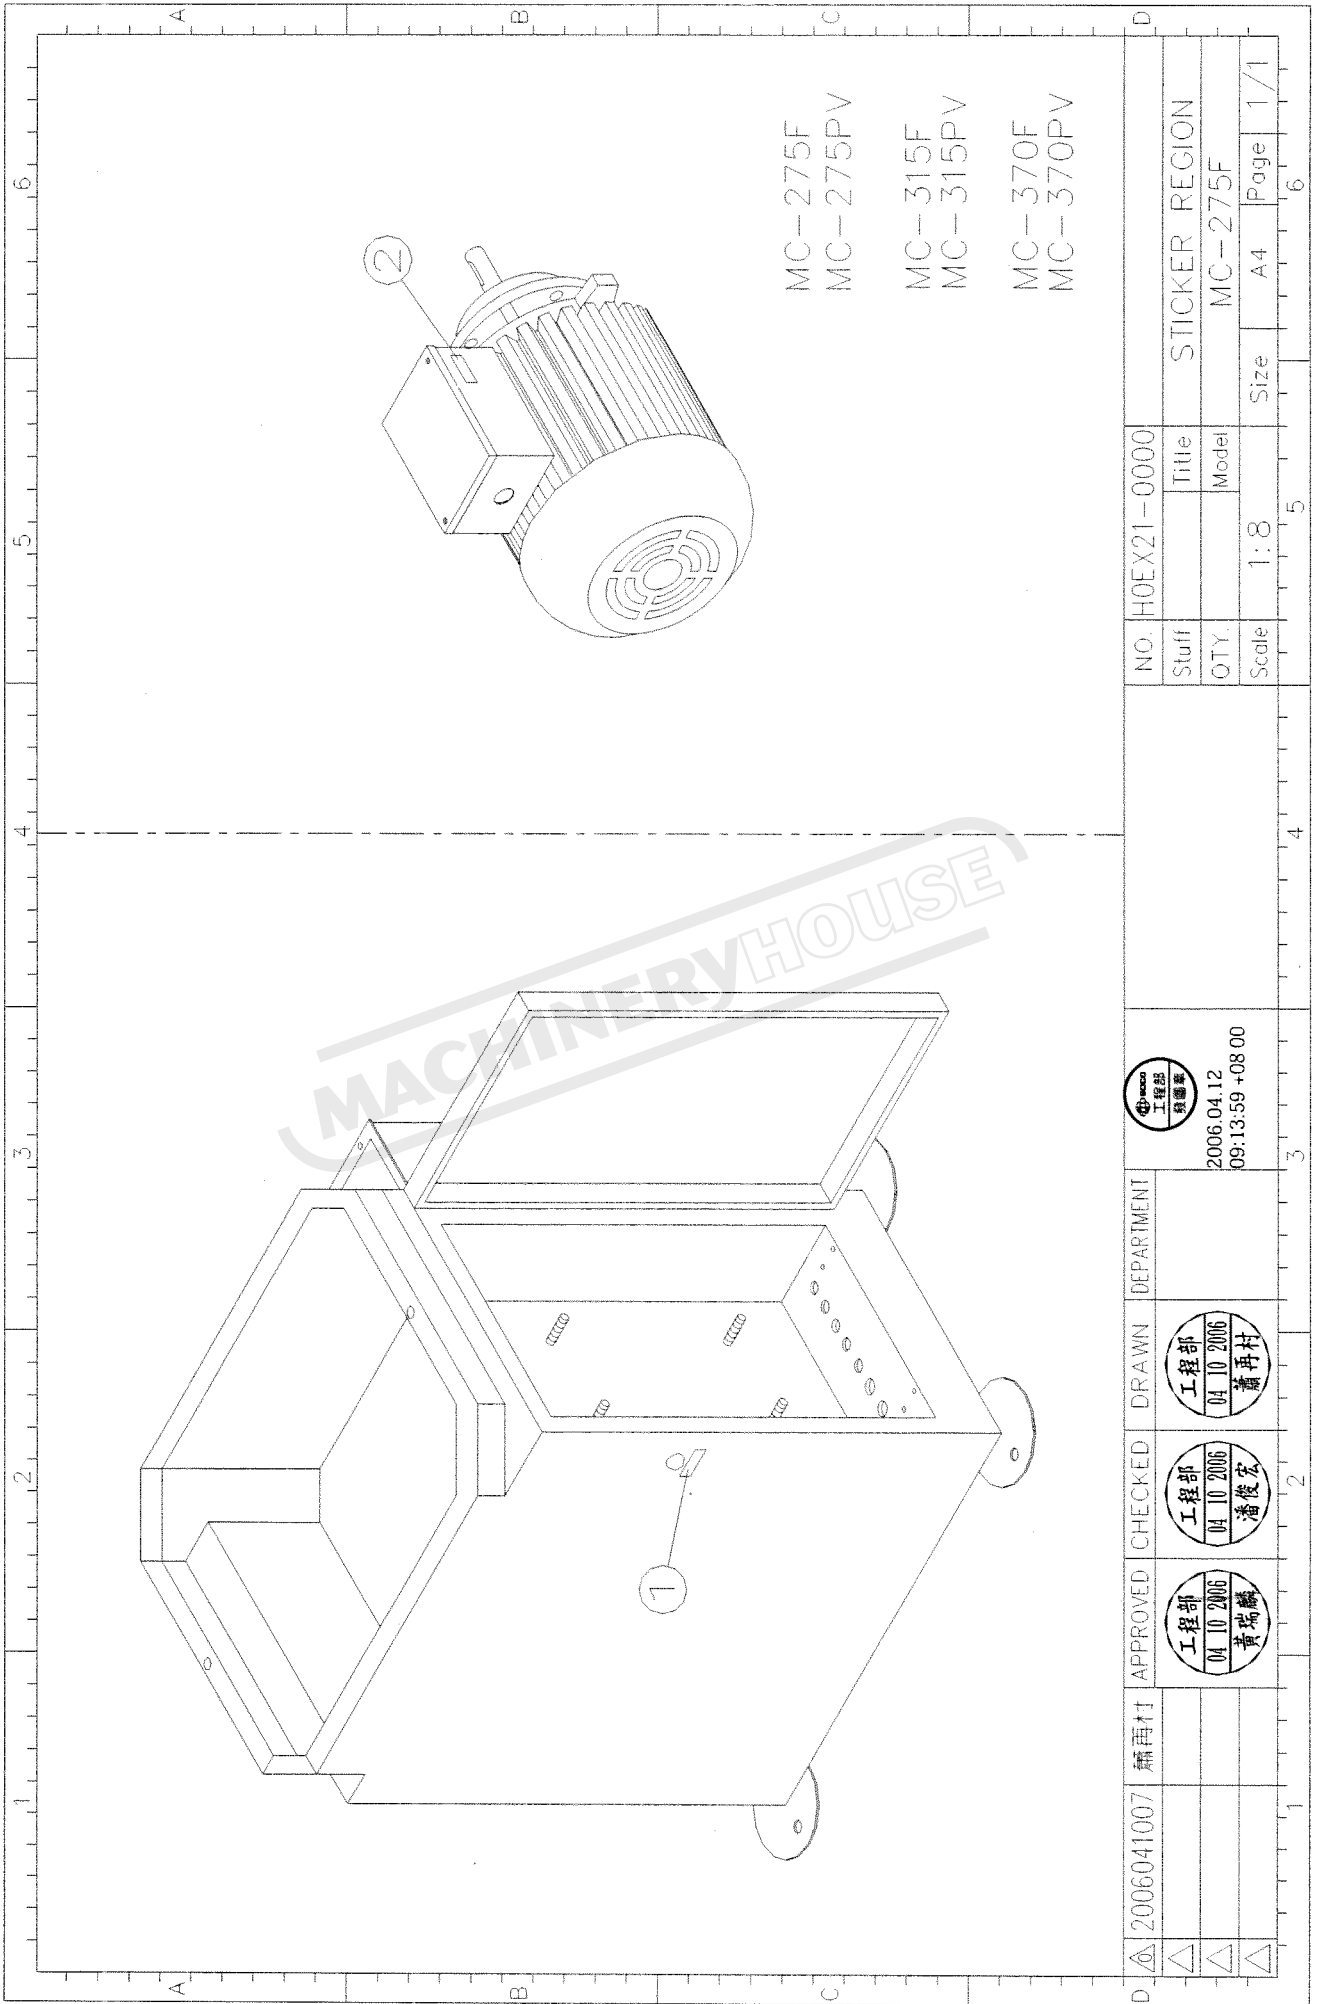


△	2006041007	蕭再村	APPROVED	工程 部 04.10.2006 黃瑞麟	CHECKED	工程 部 04.10.2006 潘俊宏	DRAWN	工程 部 04.10.2006 蕭再村	DEPARTMENT	2006.04.12 09:13:59 +08:00	NO. H0EX21-0000	STICKER REGION	MC-275F	1/1
△											Stuff	Title		
△											QTY.	Model		
△											Scale	1:8	Size	A4 Page 1/1

H0EX22-0000 (1/1)


\*\*\*\*\* MC-275F \*\*\*\*\*

\*\*\*\*\*

序號	件號	品名	數量	規格	價格	序號	件號	品名	數量	規格	價格
001	H0T011	貼紙	1	Power Light							
002	H0T012	貼紙	1	Motor Switch							

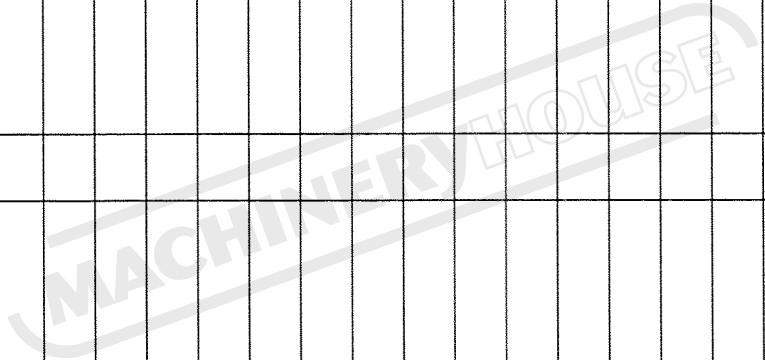



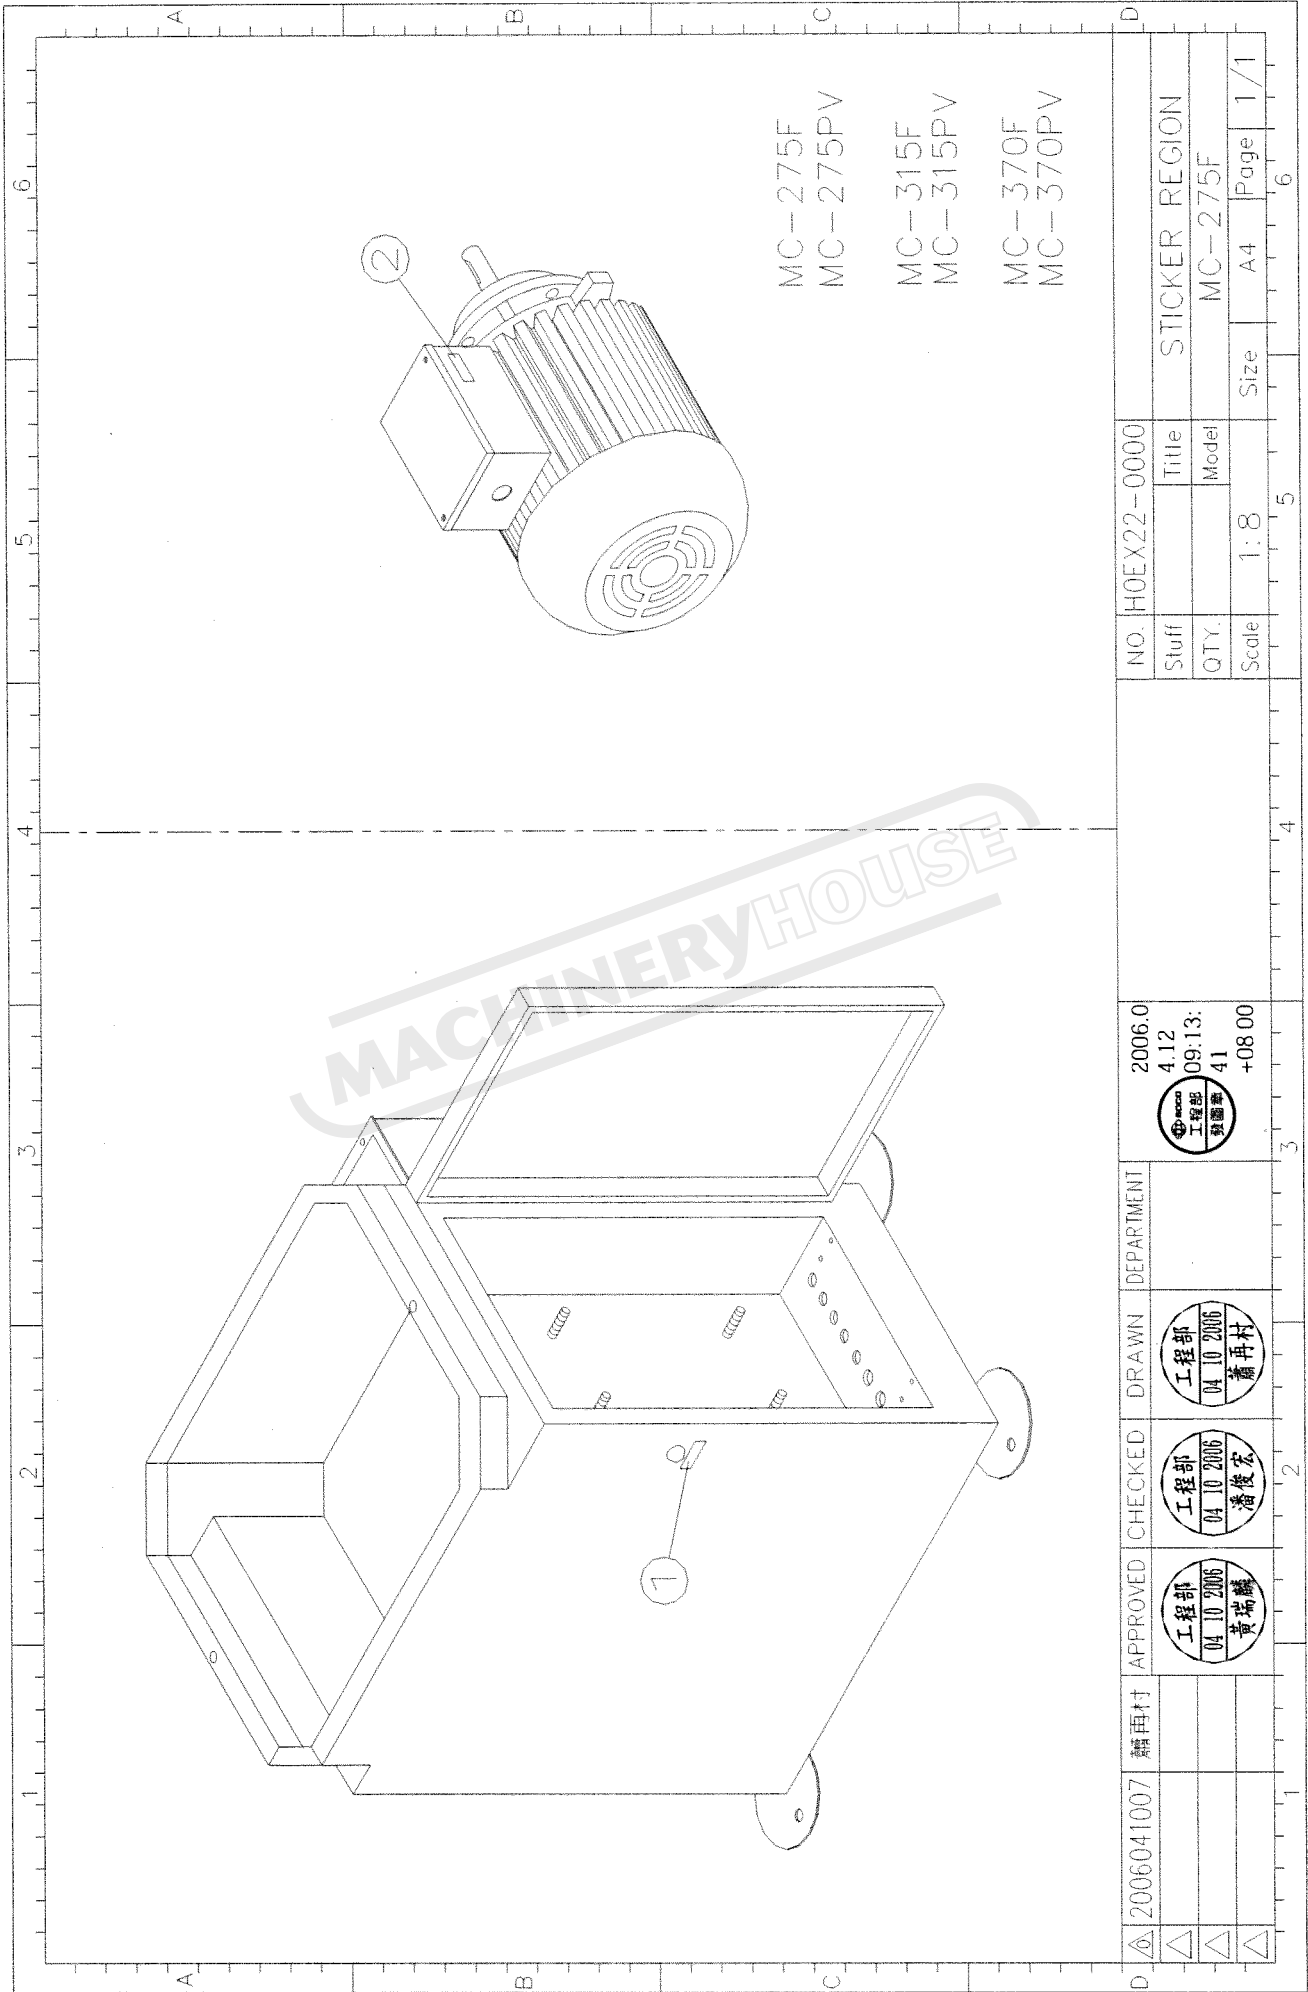

MACHINERYHOUSE

- MC-275F
- MC-275PV
- MC-315F
- MC-315PV
- MC-370F
- MC-370PV

A	B	C	D	1	2	3	4	5	6	
△	△	△	△	2006041007	蕭再村	工程 部 04.10.2005 黃瑞麟	工程 部 04.10.2005 潘俊宏	工程 部 04.10.2005 蕭再村	2006.0 4.12 09:13: 41 +0800	NO. HOEX22-0000
										Title
										Model
										Scale
										1:8
										Size
										A4
										Page
										1/1
										STICKER REGION
										MC-275F



# WARNING

## General Machinery Safety Instructions

---

Machinery House  
requires you to read this entire Manual before using this machine.

- 1. Read the entire Manual before starting machinery.** Machinery may cause serious injury if not correctly used.
- 2. Always use correct hearing protection when operating machinery.** Machinery noise may cause permanent hearing damage.
- 3. Machinery must never be used when tired, or under the influence of drugs or alcohol.** When running machinery you must be alert at all times.
- 4. Wear correct Clothing.** At all times remove all loose clothing, necklaces, rings, jewelry, etc. Long hair must be contained in a hair net. Non-slip protective footwear must be worn.
- 5. Always wear correct respirators around fumes or dust when operating machinery.** Machinery fumes & dust can cause serious respiratory illness. Dust extractors must be used where applicable.
- 6. Always wear correct safety glasses.** When machining you must use the correct eye protection to prevent injuring your eyes.
- 7. Keep work clean and make sure you have good lighting.** Cluttered and dark shadows may cause accidents.
- 8. Personnel must be properly trained or well supervised when operating machinery.** Make sure you have clear and safe understanding of the machine you are operating.
- 9. Keep children and visitors away.** Make sure children and visitors are at a safe distance for your work area.
- 10. Keep your workshop childproof.** Use padlocks, Turn off master power switches and remove start switch keys.
- 11. Never leave machine unattended.** Turn power off and wait till machine has come to a complete stop before leaving the machine unattended.
- 12. Make a safe working environment.** Do not use machine in a damp, wet area, or where flammable or noxious fumes may exist.
- 13. Disconnect main power before service machine.** Make sure power switch is in the off position before re-connecting.
- 14. Use correct amperage extension cords.** Undersized extension cords overheat and lose power. Replace extension cords if they become damaged.
- 15. Keep machine well maintained.** Keep blades sharp and clean for best and safest performance. Follow instructions when lubricating and changing accessories.
- 16. Keep machine well guarded.** Make sure guards on machine are in place and are all working correctly.
- 17. Do not overreach.** Keep proper footing and balance at all times.
- 18. Secure workpiece.** Use clamps or a vice to hold the workpiece where practical. Keeping the workpiece secure will free up your hand to operate the machine and will protect hand from injury.
- 19. Check machine over before operating.** Check machine for damaged parts, loose bolts, Keys and wrenches left on machine and any other conditions that may effect the machines operation. Repair and replace damaged parts.
- 20. Use recommended accessories.** Refer to instruction manual or ask correct service officer when using accessories. The use of improper accessories may cause the risk of injury.
- 21. Do not force machinery.** Work at the speed and capacity at which the machine or accessory was designed.
- 22. Use correct lifting practice.** Always use the correct lifting methods when using machinery. Incorrect lifting methods can cause serious injury.
- 23. Lock mobile bases.** Make sure any mobile bases are locked before using machine.
- 24. Allergic reactions.** Certain metal shavings and cutting fluids may cause an allergic reaction in people and animals, especially when cutting as the fumes can be inhaled. Make sure you know what type of metal and cutting fluid you will be exposed to and how to avoid contamination.
- 25. Call for help.** If at any time you experience difficulties, stop the machine and call you nearest branch service department for help.



## Metal Cutting Coldsaw Safety Instructions

---

Machinery House  
requires you to read this entire Manual before using this machine.

- 1. Maintenance.** Make sure the saw is turned off and disconnect from the main power supply and make sure all moving parts have come to a complete stop before any inspection, adjustment or maintenance is carried out.
- 2. Saw Condition.** Saw must be maintained for a proper working condition. Never operate a saw that has damaged or worn parts. Scheduled routine maintenance should be performed on a scheduled basis.
- 3. Blade Condition.** Never operate a saw with a dull, cracked or badly worn blade. Before using a saw inspect blades for missing teeth and cracks.
- 4. Replacing Blade.** Make sure teeth are facing the correct direction. Wear gloves to protect hands.
- 5. Hand Hazard.** Keep hands and fingers clear from the line of cut of the blade and offcuts workpieces. Hands can be crushed in vice or from falling machine components and cut by the blade.
- 6. Leaving a saw Unattended.** Always turn the saw off and make sure all moving parts have come to a complete stop before leaving the saw. Do not leave saw running unattended for any reason.
- 7. Avoiding Entanglement.** Blade guard must be used at all times. Remove loose clothing, belts, or jewelry items. Never wear gloves while machine is in operation. Tie up long hair and use the correct hair nets to avoid any entanglement with the saw moving parts.
- 8. Understand the machines controls.** Make sure you understand the use and operation of all controls.
- 9. Power outage.** In the event of a power failure during use of the saw, turn off all switches to avoid possible sudden start up once power is restored.
- 10. Work area hazards.** Keep the area around the saw clean from oil, tools, chips. Pay attention to other persons in the area and know what is going on around the area to ensure unintended accidents.
- 11. Workpiece Handling.** Workpieces must be supported with table, vice, roller conveyor/stands, or other support fixtures. Unsupported workpieces may cause the machine to tip over and fall. Flag long pieces of material to avoid tripping hazards. Never hold a workpiece with your hands during the cut process.
- 12. Hearing protection and hazards.** Always wear hearing protection as noise generated from saw blade and workpiece vibration, material handling, and power transmission can cause permanent hearing loss over time.
- 13. Hot surfaces.** Workpieces, machine surfaces and chips become hot due to friction and can burn you.
- 14. Starting position.** Never turn the saw on when the blade is resting on the workpiece.
- 15. Guards.** Do not operate saw without the blade guard in place.
- 16. Call for help.** If at any time you experience difficulties, stop the machine and call your nearest branch service department for help.

# PLANT SAFETY PROGRAM

## NEW MACHINERY HAZARD IDENTIFICATION, ASSESSMENT & CONTROL

### Metal Cutting Coldsaw

Developed in Co-operation Between A.W.I.S.A and Australia Chamber of Manufactures  
This program is based upon the Australian Worksafe Standard for Plant(NOHSC:1010-1994)

Item No.	Hazard Identification	Hazard Assessment	Risk Control Strategies <small>(Recommended for Purchase / Buyer / User)</small>
A	ENTANGLEMENT	HIGH	Eliminate, avoid loose clothing / Long hair etc.
B	CRUSHING	LOW	Secure & support Long / heavy material
C	CUTTING, STABBING, PUNCTURING	MEDIUM	Isolate main power switch before changing blade, cleaning or adjusting. Check blade is tight and in good condition before starting. Make sure blade guard is down in correct position when machine is on.
D	SHEARING	MEDIUM	Make sure all guards are secured shut when machine is on. Isolate power to machine prior to any checks or maintenance.
F	STRIKING	LOW	Support long heavy jobs and stand clear of offcuts falling. Remove all loose objects around moving parts. Wear safety glasses.
H	ELECTRICAL	MEDIUM	All electrical enclosures should only be opened with a tool that is not to be kept with the machine. Machine should be installed & checked by a Licensed Electrician.
O	OTHER HAZARDS, NOISE.	LOW	Wear hearing protection as required.
Plant Safety Program to be read in conjunction with manufactures instructions			



[www.machineryhouse.com.au](http://www.machineryhouse.com.au)



[www.machineryhouse.co.nz](http://www.machineryhouse.co.nz)

Authorised and signed by:

Safety officer:

Manager:

  
.....  
  
.....

Revised Date: Aug-08